

C.P.A.
S.R.L.

HAPPY FIVE AND BIG HAPPY FIVE SOLAR SHOWERS



C.P.A. srl

Via Don Demetrio Castelli, 71 - 12060 RODDI (CN)
Tel. 0173.615693 - Fax 0173.620922

www.cpa-piscine.it
cpa@cpa-piscine.it

Ver.02 - 11/06/20

Happy Five e Big Happy Five Solar Showers Features

- Structure made of high density polyethylene.
- Tank capacity 28 liters for the Happy Five model and 40 liters for the Big Happy Five model.
- Height 2,25 m
- Equipped with Hot/cold water mixer.
- Happy Five weight: 8 Kg
- Big Happy Five weight: 9 Kg
- Color choice:



antracite



bianco



arancio



fuxia



verde



rosso

 
 
Code	Description
TAB 1	Happy Five solar shower
TAB 2	Big Happy Five solar shower with feet flushing

TAB 1 Happy Five solar shower

Code	1040324	1040319	1040321	1040320	1040318	1040317
Color	Anthracite	White	Orange	Fucsia	Green	Red

TAB 2 Big Happy Five solar shower with feet flushing


Code	1040333	1040328	1040330	1040329	1040327	1040326
Color	Anthracite	Bianco	Arancio	Fucsia	Verde	Rosso

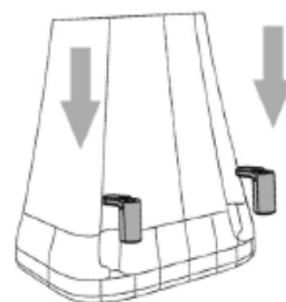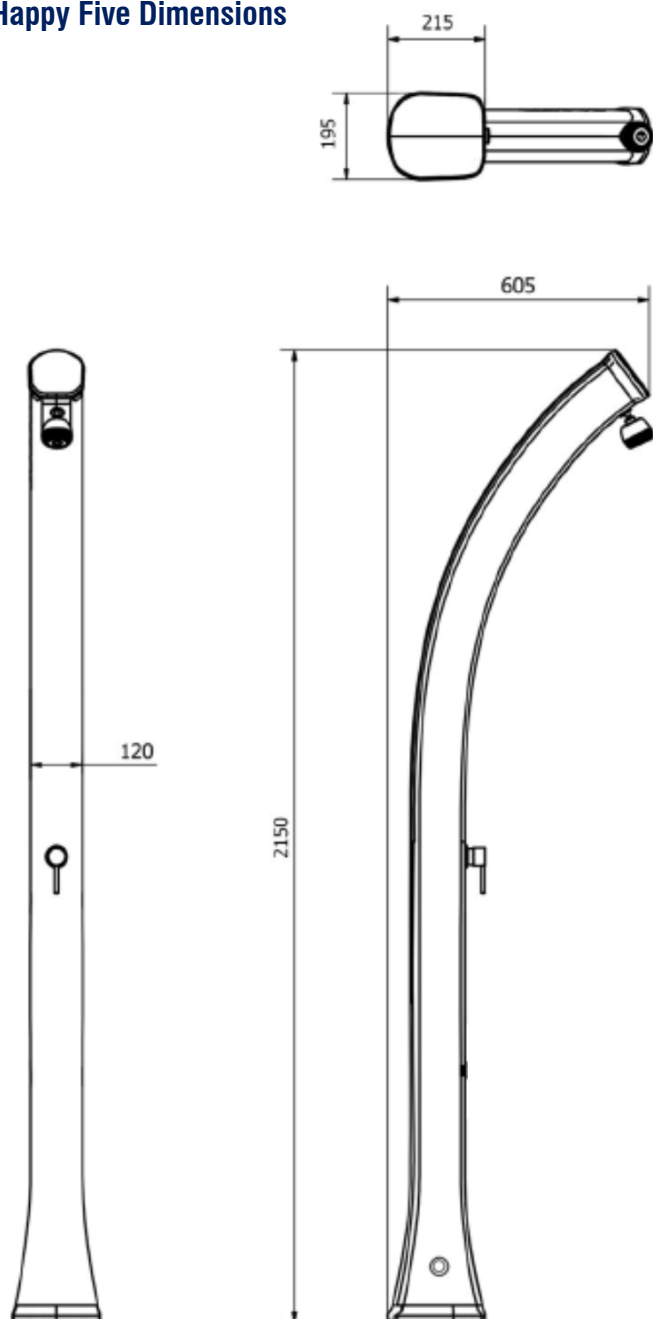Happy Five Dimensions

Sistema di fissaggio
fastening system



 
Valvola di sicurezza
Safety valve

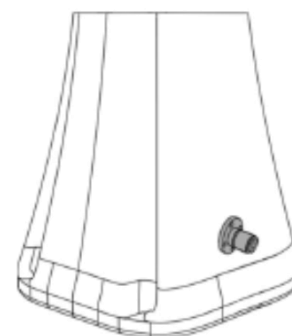

Alimentazione idraulica 1/2'
Water supply 1/2'

Happy Five components

 1

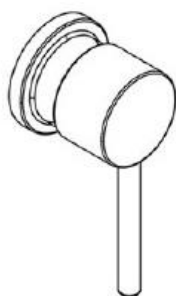

2



4

 


 
 
 
5



6

Happy Five shower

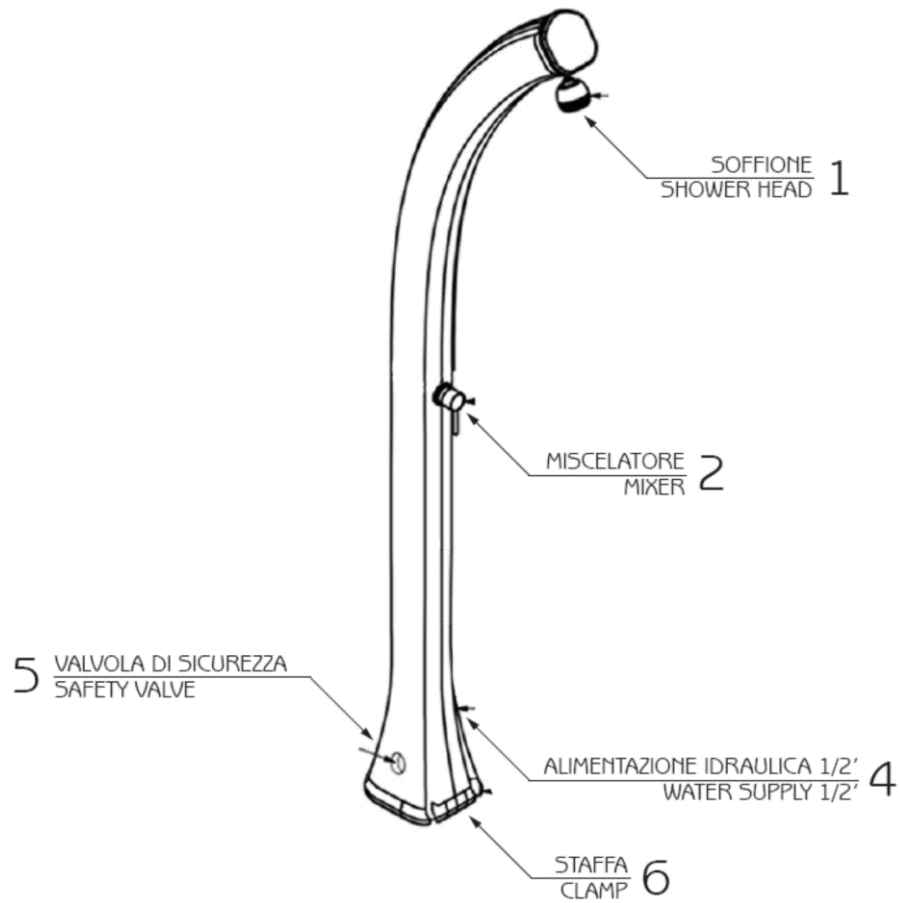


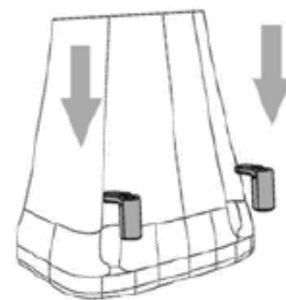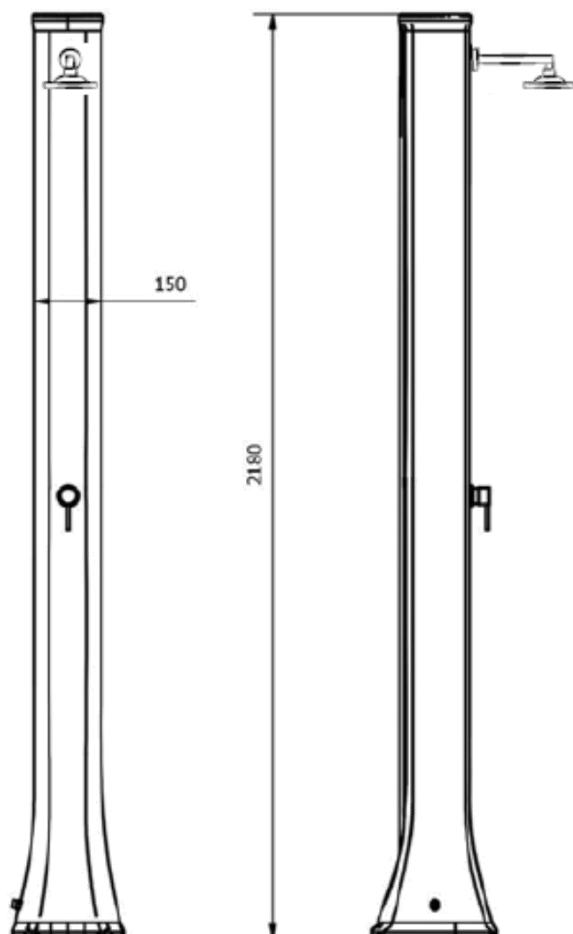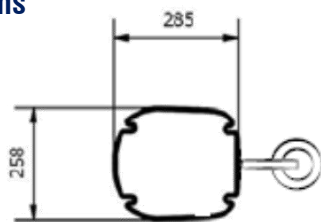Happy Five dimensions


Sistema di fissaggio
fastening system



 Valvola di sicurezza
Safety valve

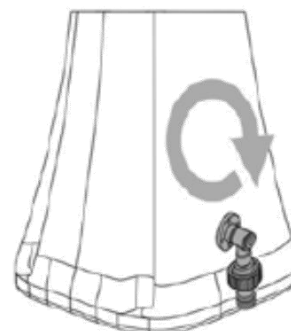


 Alimentazione orientabile
Adjustable water supply

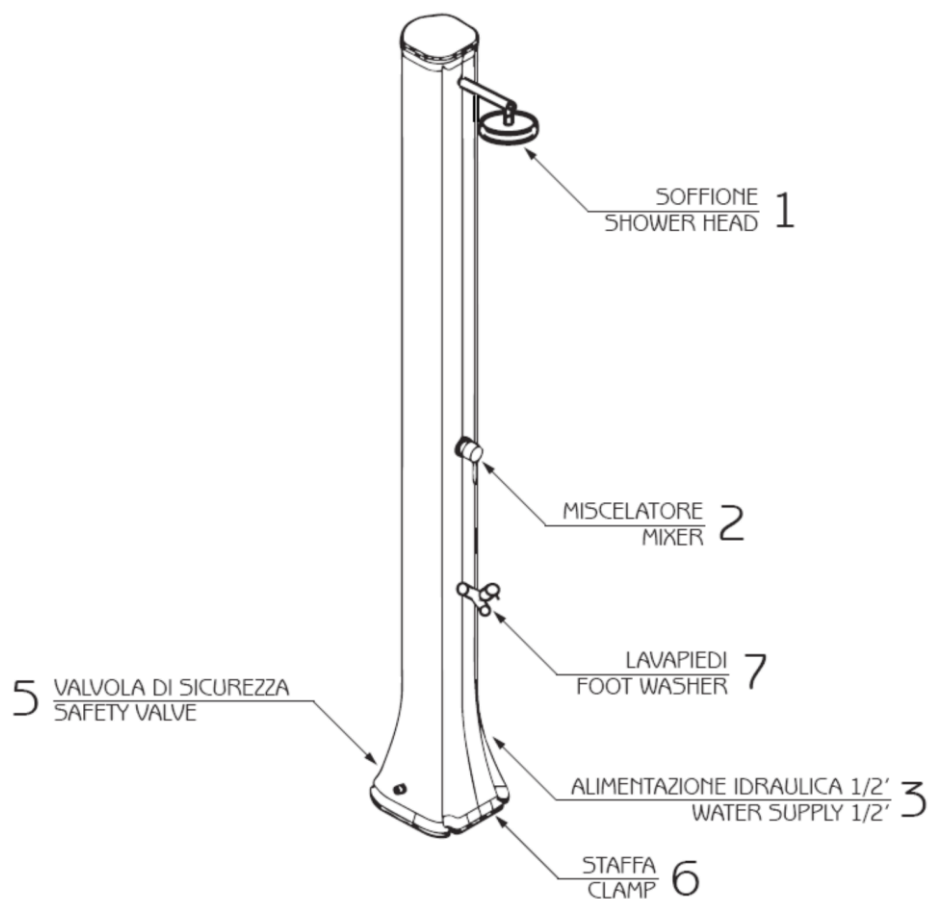

Big Happy Five components

 Big Happy Five Shower

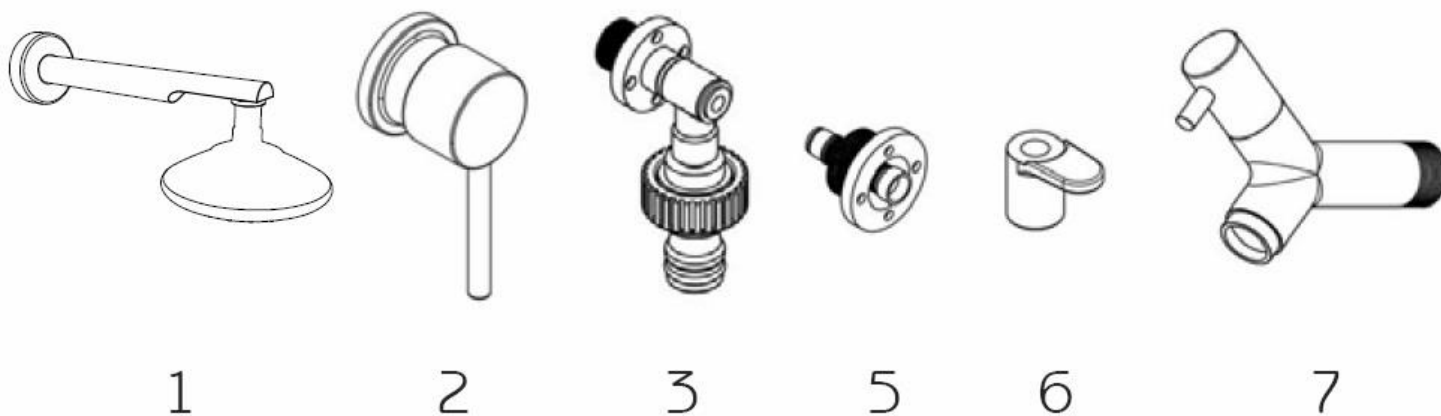

Installation and use instructions

The HAPPY FIVE and BIG HAPPY FIVE solar showers are intended for outdoor use near a swimming pool, on a beach or in a garden. Before using your new shower, it is advisable to read the instructions and advice for use.

BOX CONTENTS

- Body shower
- Adjustable shower head / gasket
- Mixer already mounted
- Foot washer tap already mounted (optional)
- Connection fitting at the inlet of the Gardena® 15/21 water
- 4 or 5 * fixing screws / plugs / washers
- Installation and use manual

WARNING

During the hottest days in summer, it is possible that the water inside the tank exceeds 60 ° C.

Before taking a shower it is necessary to place the mixer on «cold water», to regulate the temperature progressively until you get a temperature of your liking.

Do not touch the surface of the shower to avoid the risk of superficial burns.

It is possible that the water continues to come out after closing the mixer. All this is normal and the water stops flowing in the following 10-15 seconds.

Do not use the shower in the event of a thunderstorm, to avoid the risk of electric shock.

INSTALLATION

1. Choose a location that is as exposed as possible to direct light (ideally 360 °), near a water supply and drain.
2. Install the shower head by screwing it onto the shower body.
3. On a solid support (concrete, concrete, heavy wood grate) make 4 - 5 * holes of about 12 mm in diameter and about 70 mm in depth following the groove on the base of the shower.
4. Position the plugs and install the solar shower vertically using washers and screws.
5. Connect to the water supply. If necessary, use the adapter.

1° USE

1. Open the tap (cold or hot water) to release the air contained inside the shower and allow the shower tank to fill completely.
2. When the water starts to come out of the shower head, it means that the solar shower tank is full. You can then turn off the shower tap and wait for the water in the tank to be heated by the sun. The cold water is available immediately.

USE

When the water is heated by the sun in summer, a minimal amount of water can drip from the shower head. This is normal, since the volume of water contained in the shower increases due to the heat.

The shower and the foot washer can be used separately or simultaneously.

Only the shower provides cold water mixed with hot water. The other elements only supply cold water.

In case of prolonged use, you will notice a drop in the water temperature, as the duration of the intensity of the sun's rays becomes insufficient.

MAINTENANCE AND REPAIR

After prolonged use, limestone and other materials are likely to settle on the shower head. Turn off the water supply to remove the shower head to wash it.

The solar shower is designed to be used at an outside temperature above 3 ° C.

At the end of the season of use, turn off the water supply. In regions where the outside temperature drops below 3 ° C, the tank must be completely emptied in order to avoid damage caused by frost.



WARRANTY

The solar shower has a 2-year guarantee. This warranty does not cover damage caused by frost.

Note

- ☐ The information contained in this document may change at the discretion of the editor, without notice, contextually to the changes of the product in question to this document: it will be the customer's responsibility when ordering to verify the persistent correspondence of the product to the information sheet.
- ☐ Any technical diagrams reproduced in this document are for information purposes only and are not valid for regulatory purposes