


C.P.A. S.R.L.

JOLLY AND BIG JOLLY SOLAR SHOWERS

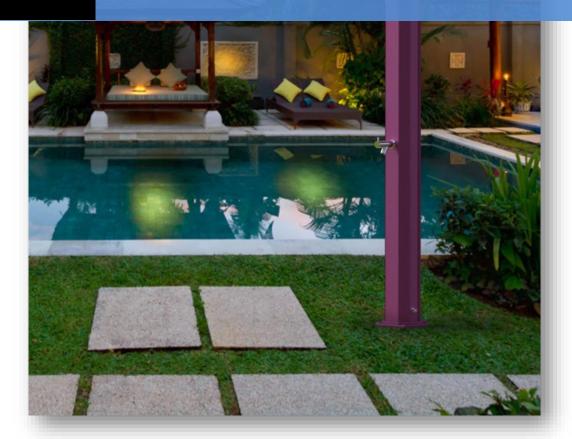

Jolly e Big Jolly solar shower features

- Made entirely of aluminum and painted in the oven to ensure its durability, aesthetics and quality.
- Tank capacity 25 liters for the Jolly model and 40 liters for the Big Jolly model.
- Height 2,25 m
- Equipped with hot / cold water mixer.
- Jolly shower weight: 13,00 Kg
- Big Jolly shower weight: 15,00 Kg
- Color choice:




Code	Description
TAB 4	Jolly solar shower
TAB 5	Jolly solar shower with feet flushing
TAB 6	Big Jolly solar shower with feet flushing
1040299	Big Jolly solar shower inox painting

TAB 4 Jolly shower							
Code	1040286	1040280	1040282	1040281	1040279	1040278	
Color	Anthracite	Sand	Orange	Fuxia	Green	Red	


TAB 5 Jolly shower with feet flushing							
Code	1040458	1040459	1040460	1040461	1040462	1040463	
Color	Anthracite	Sand	Orange	Fuxia	Green	Red	

TAB 6 Big Jolly shower with feet flushing							
Code	1040295	1040289	1040291	1040290	1040288	1040287	
Color	Anthracite	Sand	Orange	Fuxia	Green	Red	

Jolly dimensions

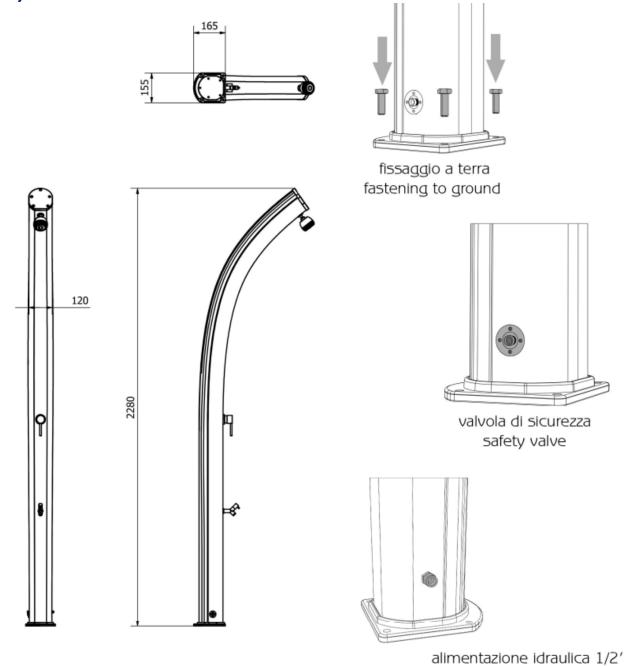


Componenti Jolly

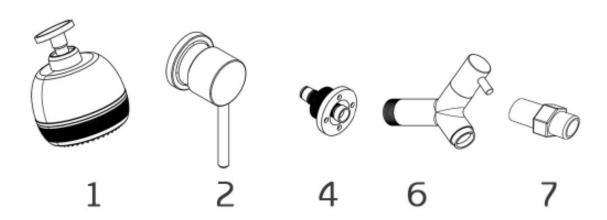


water supply 1/2'

Jolly Shower


Jolly Shower with feet flushing

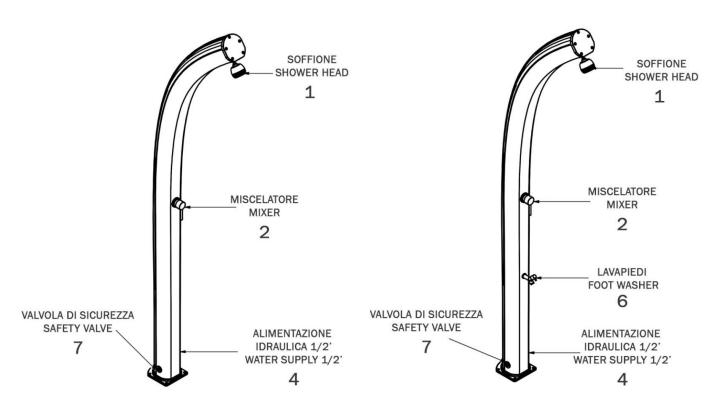

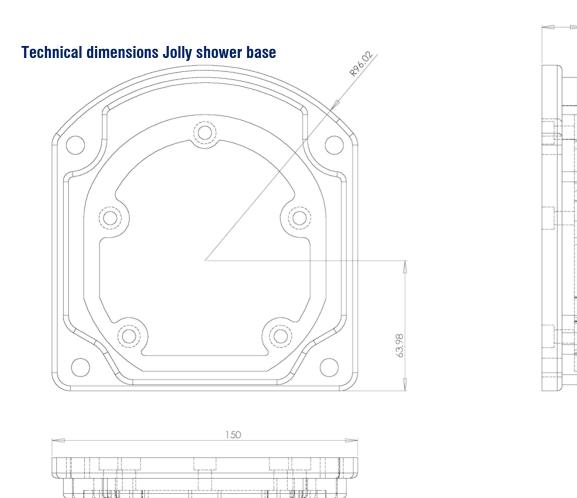



20

Big Jolly dimensions

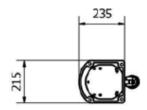



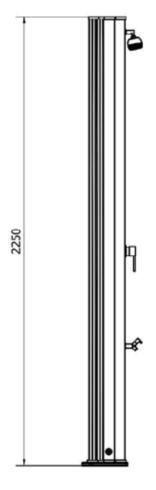

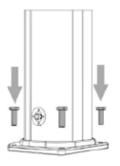

Fissaggio a terra Fastening to ground




Valvola di sicurezza Safety valve




Alimentazione idraulica 1/2' Water supply 1/2'

Big Jolly components

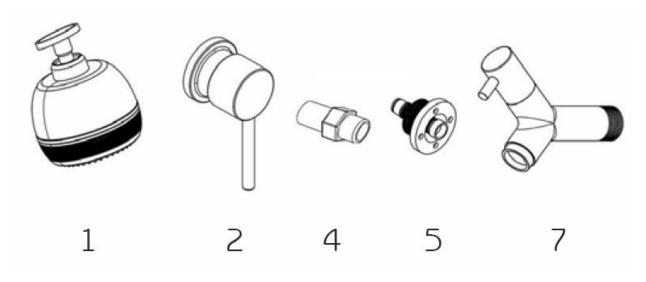

Big Jolly shower with feet flushing

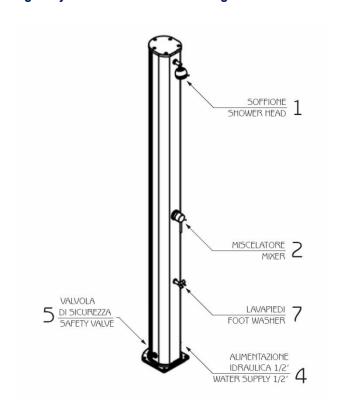

Installation and use instructions

The JOLLY and BIG JOLLY solar showers are intended for outdoor use near a swimming pool, on a beach or in a garden. Before using your new shower, it is advisable to read the instructions and advice for use.

BOX CONTENTS

- Shower body
- Adjustable shower head / gasket
- · Mixer already mounted
- Foot washer tap already mounted (optional)
- Connection fitting to the Gardena® 15/21 water inlet
- 4 or 5 * fixing screws / plugs / washers
- Installation and use manual

WARNING

During the hottest days in summer, it is possible that the water inside the tank exceeds 60 $^{\circ}$ C.

Before taking a shower it is necessary to place the mixer on «cold water», to regulate the temperature progressively until you obtain a temperature of your liking.

Do not touch the surface of the shower to avoid the risk of superficial burns.

It is possible that the water continues to come out after closing the mixer. All this is normal and the water stops flowing in the following 10-15 seconds.

Do not use the shower in the event of a thunderstorm, to avoid the risk of electric shock.

The solar shower is designed to be used in "normal" water supply conditions with a pressure lower than 3 bars (3 kg). Otherwise it is necessary to have a pressure reducer.

INSTALLATION

- 1. Choose a location that is as exposed as possible to direct light (ideally 360 °), near a water supply and drain. Install the shower head by screwing it onto the shower body.
- 2. On a solid support (cement, concrete, heavy wood grate) make 4 5 * holes of about 12 mm in diameter and about 70 mm in depth following the groove on the base of the shower.
- 3. Position the plugs and install the solar shower vertically using washers and screws.
- 4. Connect to the water supply. If necessary, use the adapter.

1° USE

- 1. Open the tap (cold or hot water) to release the air contained inside the shower and allow the shower tank to fill completely.
- 2. When the water starts to come out of the shower head, it means that the solar shower tank is full. You can then turn off the shower tap and wait for the water in the tank to be heated by the sun. Cold water is available immediately.

USE

When the water is heated by the sun in summer, a minimal amount of water can drip from the shower head. This is normal, since the volume of water contained in the shower increases due to the heat.

The shower and the foot washer can be used separately or simultaneously.

Only the shower provides cold water mixed with hot water. The other elements only supply cold water.

In case of prolonged use, you will notice a drop in the water temperature, as the duration of the intensity of the sun's rays becomes insufficient.

MAINTENANCE AND REPAIR

After prolonged use, limestone and other materials are likely to settle on the shower head. Turn off the water supply to remove the shower head to wash it.

The solar shower is designed to be used at an outside temperature above 3 ° C.

At the end of the season of use, turn off the water supply. In regions where the outside temperature drops below 3 ° C, the tank







must be completely emptied in order to avoid damage caused by frost.

WARRANTY

The solar shower has a 2-year guarantee. This warranty does not cover damage caused by frost.

Note

The information contained in this document may change at the discretion of the editor, without notice, contextually to the changes of the product in question to this document: it will be the customer's responsibility when ordering to verify the persistent correspondence of the product to the information sheet.

Any technical diagrams reproduced in this document are for information purposes only and are not valid for regulatory purposes