



AUTOMATIC COVER

Rollinside

Roll-inside 1 side

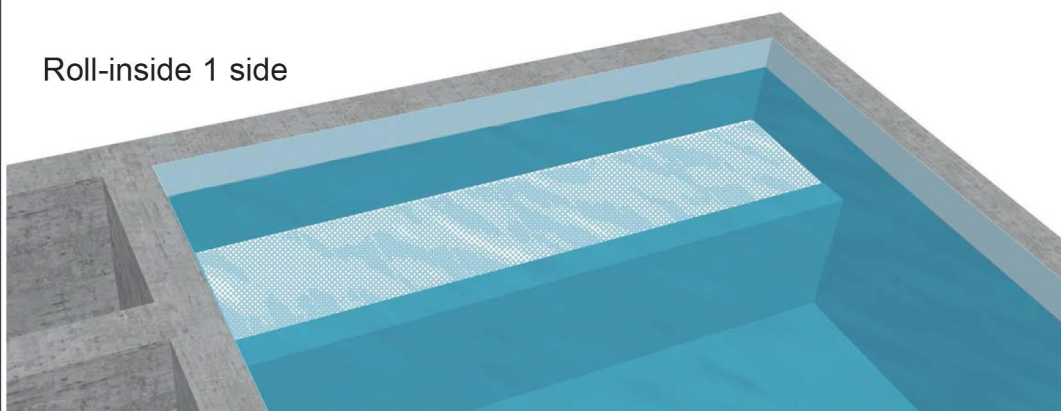

Roll-inside 2 sides

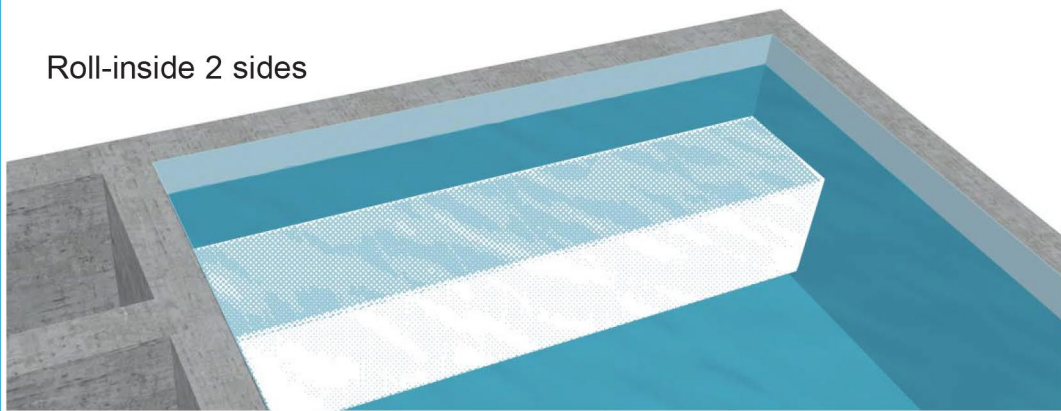

TECHNICAL INSTRUCTIONS

Installation / Use / Cleaning / Maintenance / Safety advice


INFORMATION

For concrete, cellular concrete, full or hollow masonry pools with a reinforced membrane or tile waterproofing.

Roll-inside is an automatic immersed cover composed of mechanical parts and an underwater PVC cover pit.


The Roll-inside is available in several versions:

- Box work 1 side or 2 sides.
- Gear motor in a dry or immersed pit.
- Fixture mode: Using inserted parts or surface mounted on the façade.
- The mains supply comes from the electric control panel in the technical room
(Boxes compliant with electricity standards: C 15-100 / NF EN 60335 / NF EN 61000-6-3 / NF EN 55014-1)
- The automatic stops are adjusted in the motor or in the control panel (depending on the model)
- The key switch is located in a dry location with the pool in view.
- The cover is made of watertight floating cover slats.
- The closed pool can be secured with optional safety locking kits located on the width of the pool.
- The total operating gap between the walls and the slats is 70 mm.
- The vertical and horizontal covering consists of several 1 x 0.75m decking elements fixed on beams.

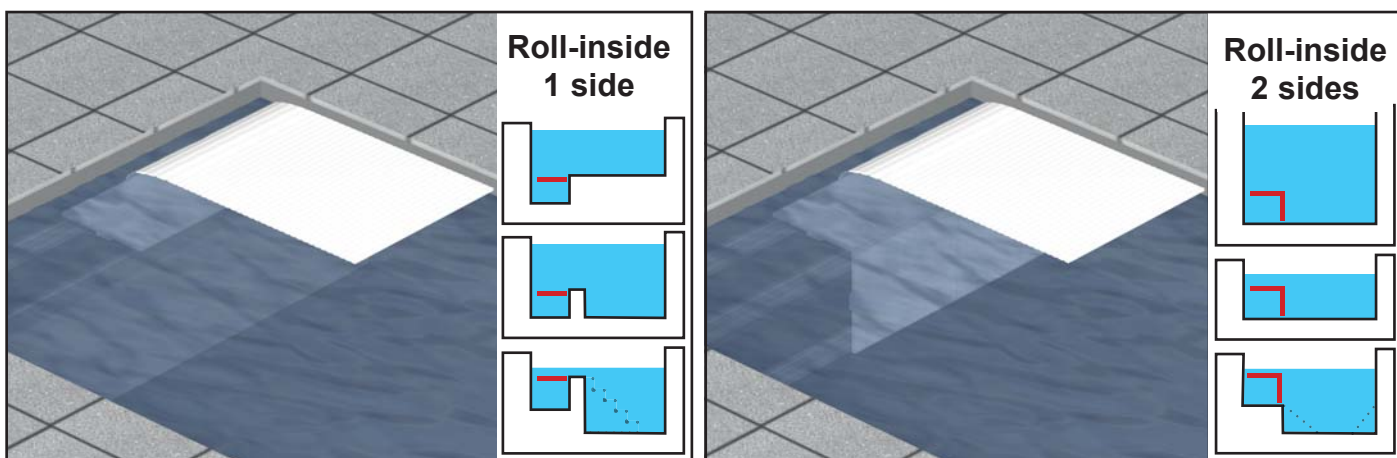

Unless otherwise specified by the manufacturer, immersion alarms are not compatible with DEL automatic covers.


TOOLS REQUIRED FOR ASSEMBLY (INSTALLATION – 2 PERSONS)

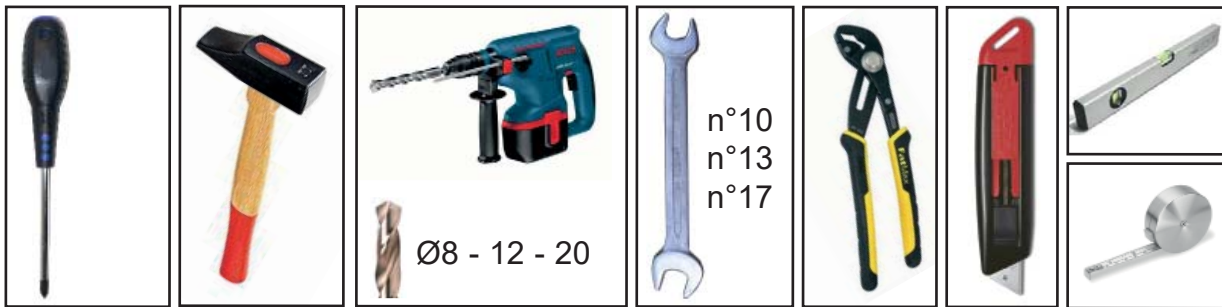

Roll-inside - for insert mounting - motorisation in a dry pit

DELIVERED PARTS


Parts to insert

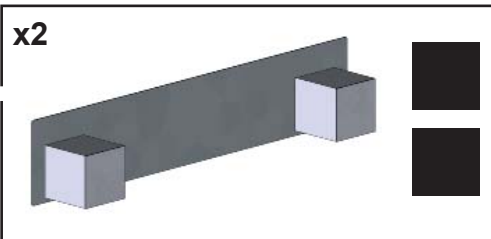


Mechanism



Counter-weight

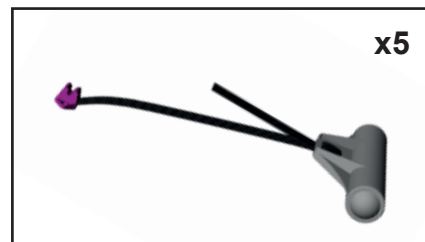


Mechanical fastener bag

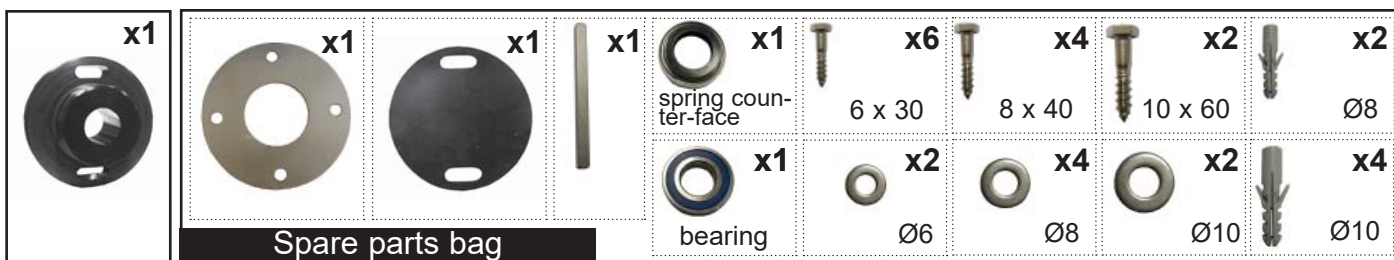


Beam support


For roll-inside 1 side

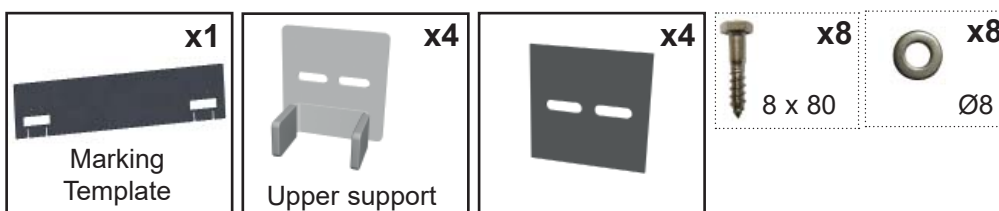

For roll-inside 2 sides

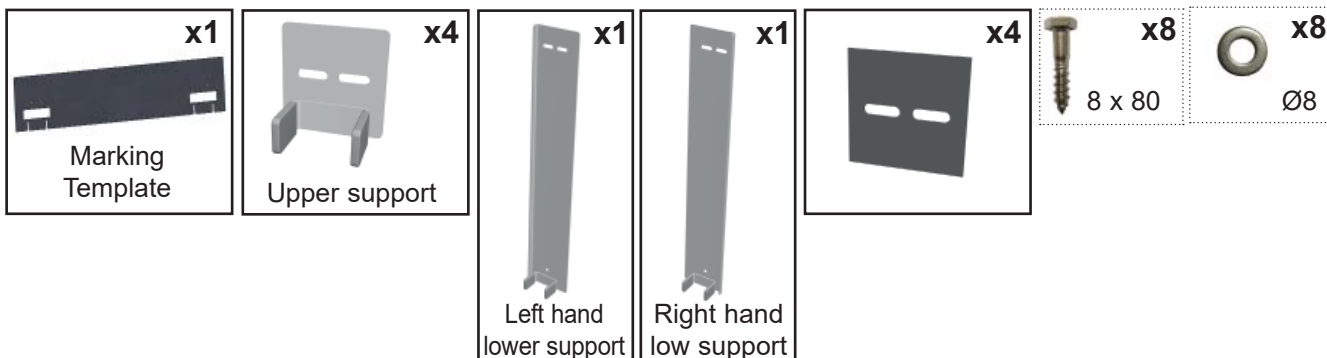

Beam

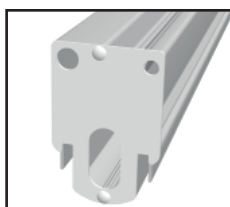

2 beams for roll inside 1 side
3 beams for roll-inside 2 sides

Gear motor with support



or



or



Protection cap


Electric box



Key-operator box



Wi-key

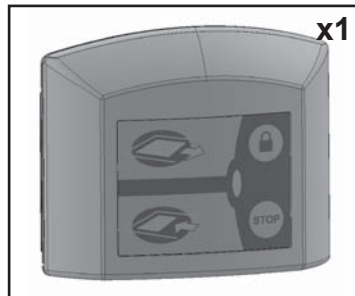

Decking



Slats



Fastening kits



Push-lock

PACKING LIST

e.g. for a 5 x 10 m pool with Ø3 m roman steps

Wall units:

For beam support: 1 box of 1 x 0.20 x 0.20 m -- 10 kg

For the mechanism (tube): 1 box of 0.30 x 0.20 x 0.20 -- 5kg

Mechanism (tube) :

1 box of 5 x 0.25m -- 40 kg

Installation kit + motor + control panel + weights + optional safety locking kit

1 box of 0.80 x 0.60 x 0.65 -- 45 kg

Beam support:

1 side : 1 box of 0.75 x 0.25 x 0.15 -- 4kg

2 sides : 1 box of 0.75 x 0.25 x 0.15 -- 10kg

The beams:

1 side : 2 box of 5.1 x 0.17 x 0.12 -- 60 kg

2 sides : 3box of 5.1 x 0.17 x 0.12 -- 90kg

Decking :

1 side : 1 pallet of 1.20 x 1 x 0.40 -- 40kg

2 sides : 1 pallet of 1.20 x 1 x 0.40 -- 70 kg

Slats :

5 box of 5.1 x 0.20 x 0.25 -- 250 kg

Total weight :

Roll-inside 1 side: 454 kg


Roll-inside 2 sides: 520 kg




Roll-inside - for insert mounting - tubular immersed motorisation

DELIVERED PARTS

Parts to insert

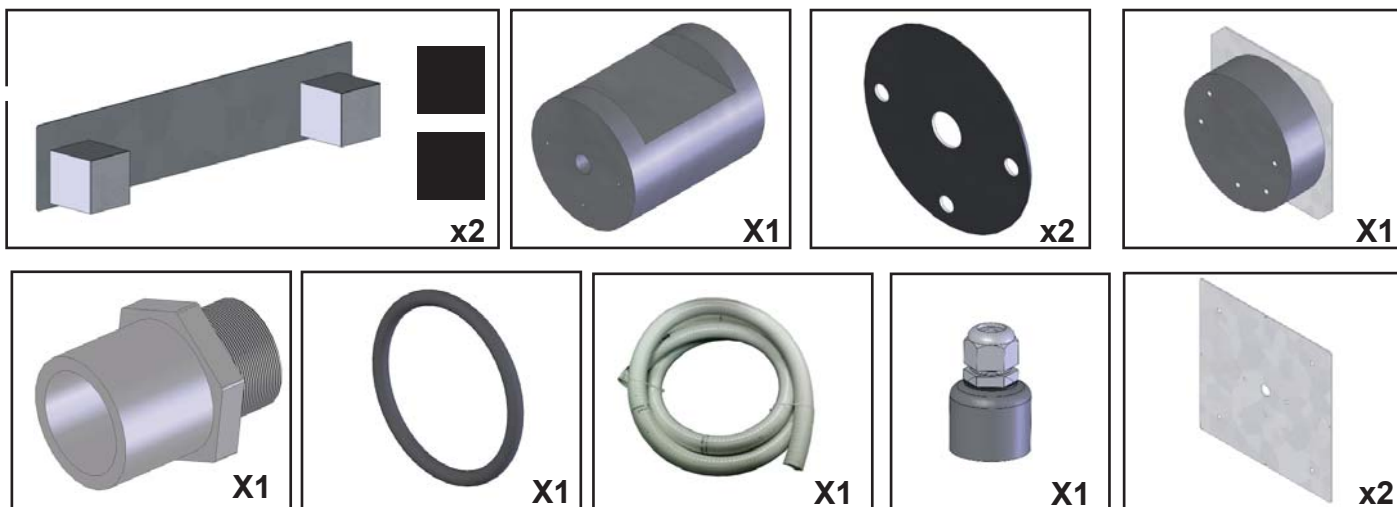


Mechanism

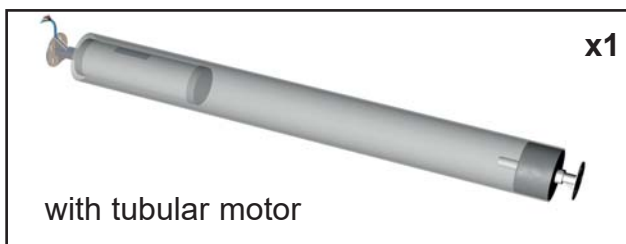

Counter-weight




Mechanical fastener bag

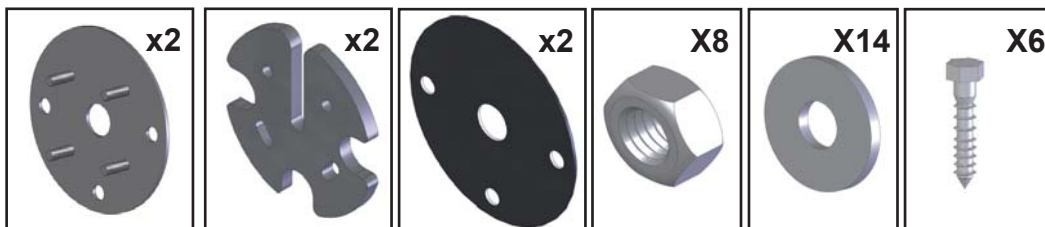


Beam support


For roll-inside 1 side

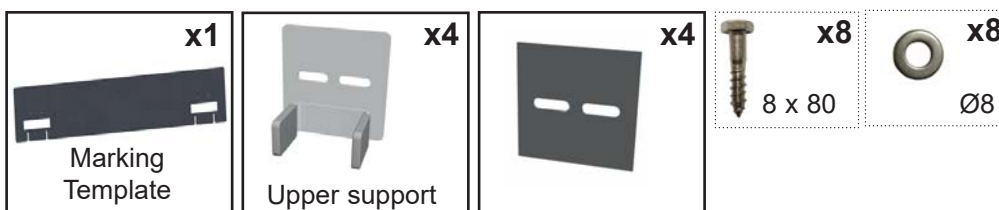

For roll-inside 2 sides

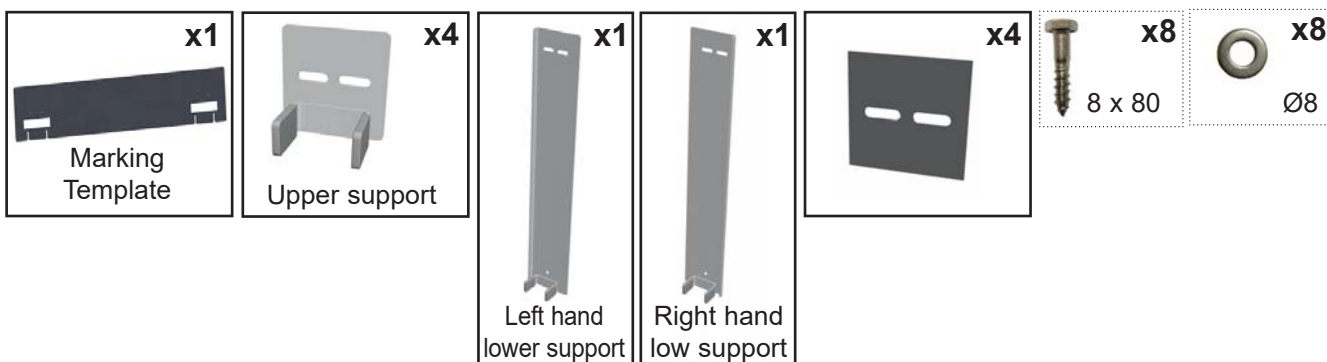

Beam

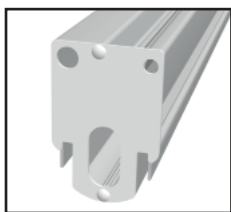

2 beams for roll-inside 1 side
3 beams for roll-inside 2 sides

Electric box



x1


Key switch



x1

or

Wi-key

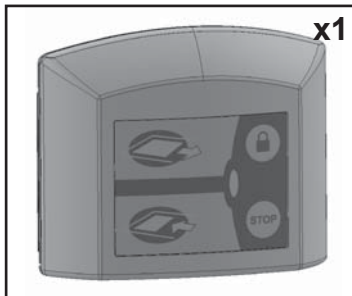

x1

Decking



Slats



Fastening kits



Push-lock

PACKING LIST

e.g. for a 5 x 10 m pool with Ø3 m roman steps

Wall units:

For beam support: 1 box of 1 x 0.20 x 0.20 m -- 10 kg

For tube: 1 box of 0.30 x 0.20 x 0.20 -- 5kg

The mechanism (tube) with the gear motor:

1 pack containing 5 x Ø0.25 m -- 50 Kg

The installation kit + control box + counter-weights + fastener kits:

1 pack containing 0.80 x 0.60 x 0.65 -- 45 kg

Beam support:

1 side : 1 box of 0.75 x 0.25 x 0.15 -- 4kg

2 sides : 1 box of 0.75 x 0.25 x 0.15 -- 10kg

The beams:

1 side : 2 box of 5.1 x 0.17 x 0.12 -- 60 kg

2 sides : 3box of 5.1 x 0.17 x 0.12 -- 90kg

Decking :

1 side : 1 pallet of 1.20 x 1 x 0.40 -- 40kg

2 sides : 1 pallet of 1.20 x 1 x 0.40 -- 70 kg

Slats :

5 box of 5.1 x 0.20 x 0.25 -- 250 kg

Total weight :

Roll-inside 1 side: 454 kg


Roll-inside 2 sides: 520 kg



Roll-inside - surface mounted - tubular immersed motorisation

DELIVERED PARTS


Parts to insert (inserting kit)

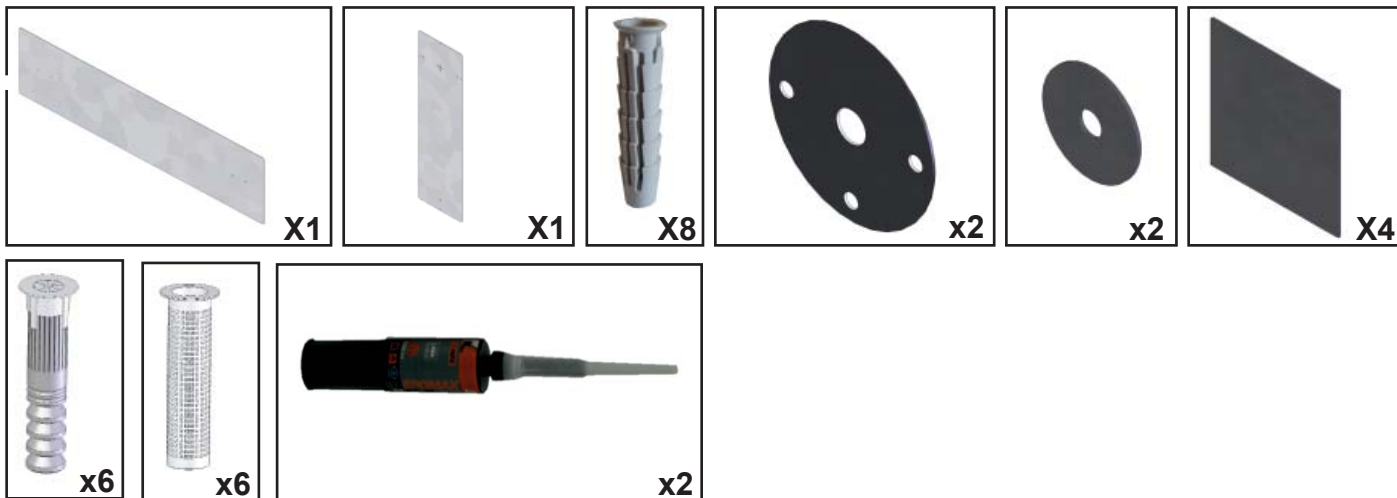


Mechanism



Counter-weight

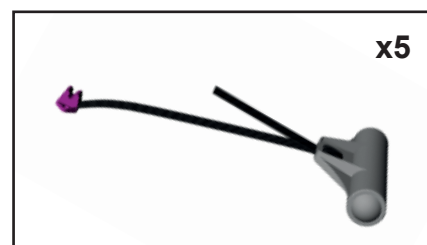


Mechanical fastener bag

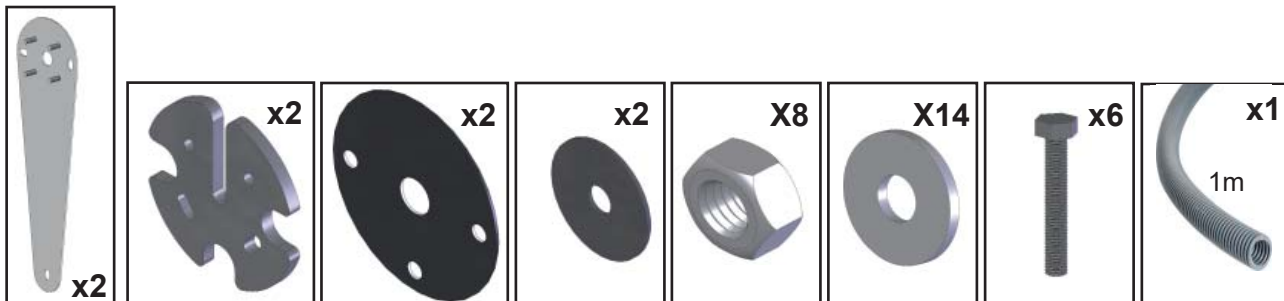


Beam support


For roll-inside 1 side

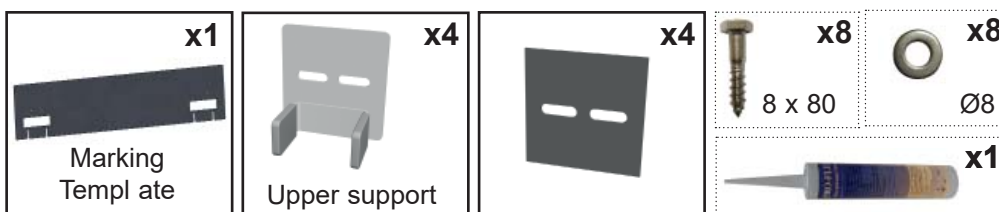

For roll-inside 2 sides

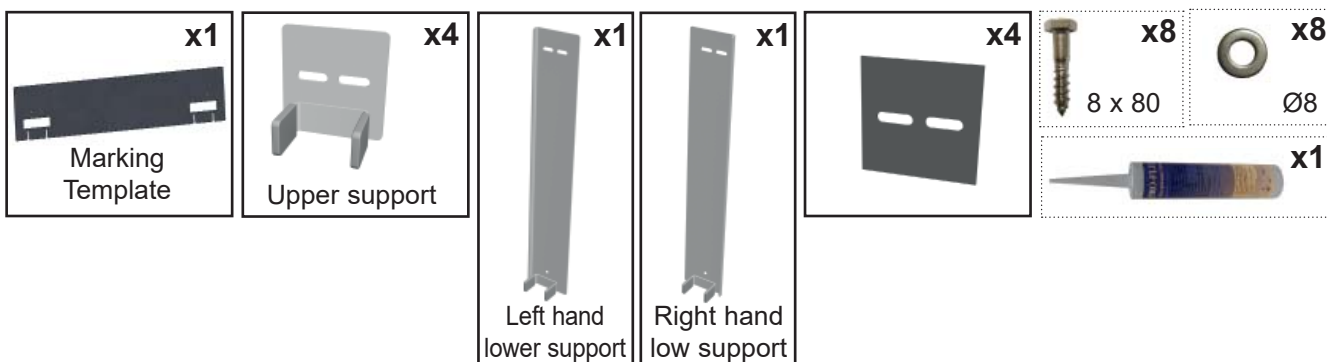

Beam

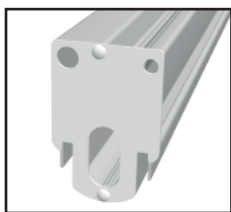

2 beams for roll-inside 1 side
3 beams for roll-inside 2 sides

Electric box



x1


Key switch



x1

or

Wi-key

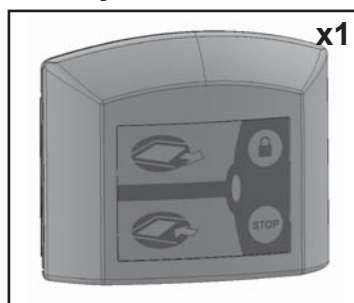

x1

Decking



Slats



Fastening kits



Push-lock

PACKING LIST

e.g. for a 5 x 10 m pool with Ø3 m roman steps

Wall units:

For beam support: 1 box of 1 x 0.20 x 0.20 m -- 10 kg

For the mechanism (tube): 1 box of 0.30 x 0.20 x 0.20 -- 5kg

The mechanism (tube) with the gear motor:

1 pack containing 5 x Ø0.25 m -- 50 Kg

The installation kit + control box + counter-weights + fastener kits:

1 pack containing 0.80 x 0.60 x 0.65 -- 45 kg

Beam support:

1 side : 1 box of 0.75 x 0.25 x 0.15 -- 4kg

2 sides : 1 box of 0.75 x 0.25 x 0.15 -- 10kg

The beams:

Roll-inside 1 side: 2 box of 5.1 x 0.17 x 0.12 -- 60 kg

Roll-inside 2 sides: 3 box of 5.1 x 0.17 x 0.12 -- 90kg

Decking :

Roll-inside 1 side: 1 pallet of 1.20 x 1 x 0.40 -- 40kg

Roll-inside 2 sides: 1 pallet of 1.20 x 1 x 0.40 -- 70 kg

Slats :

5 box of 5.1 x 0.20 x 0.25 -- 250 kg

Total weight :


Roll-inside 1 side: 454 kg

Roll-inside 2 sides: 520 kg



Roll-inside - insert mounting - motorisation in a dry pit

INSTALLATION OF THE INSERTED PARTS


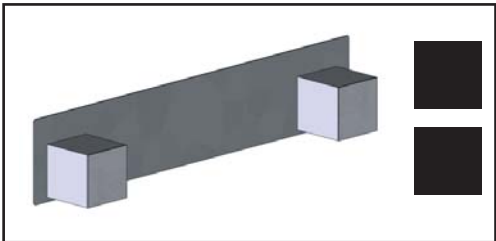


positioning






L (m)	11	12	13	14	15	16	17	18	19	20
*B (cm)	45	46	47	48	48.5	49	50	51	52	53
*C (cm) mini	76	78	80	81	83	85	87	88	90	91




1 side

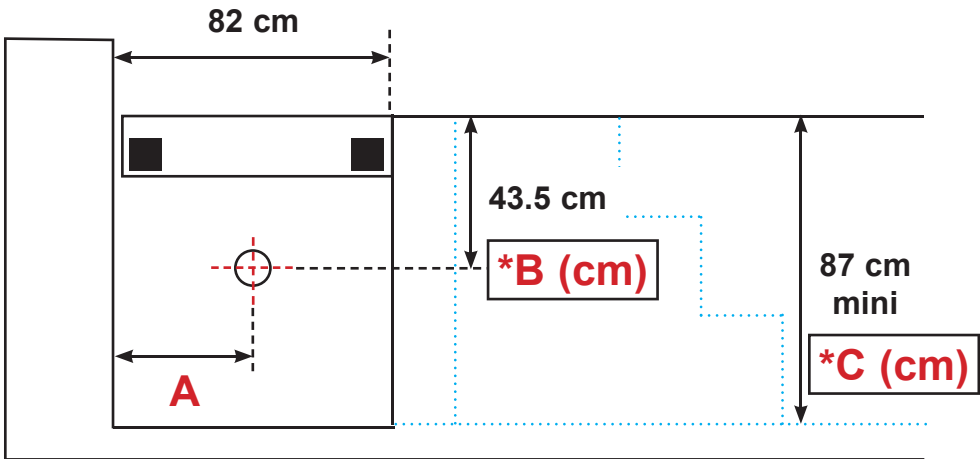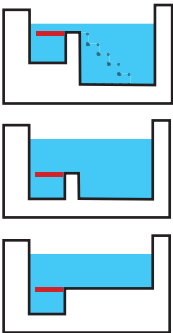

2 sides

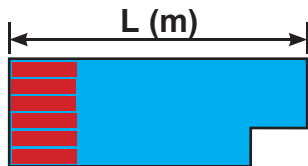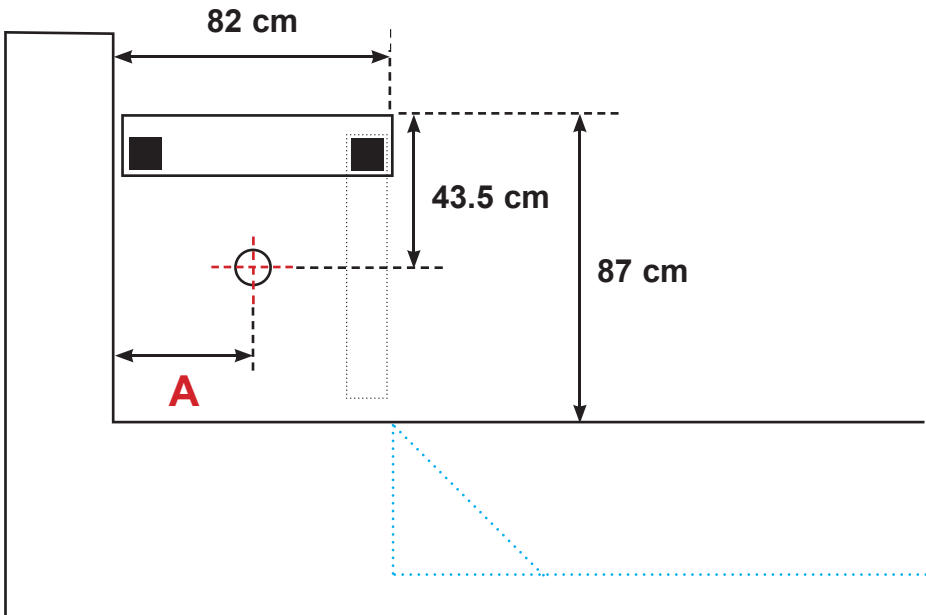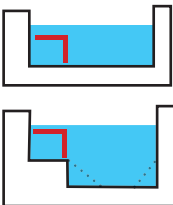


L	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
A (cm)	26	27	28	29	31	32	33	34	35	35	36	37	38	39	40

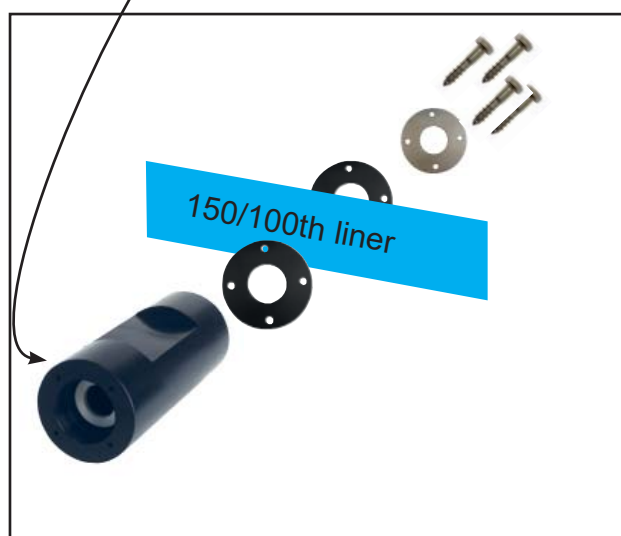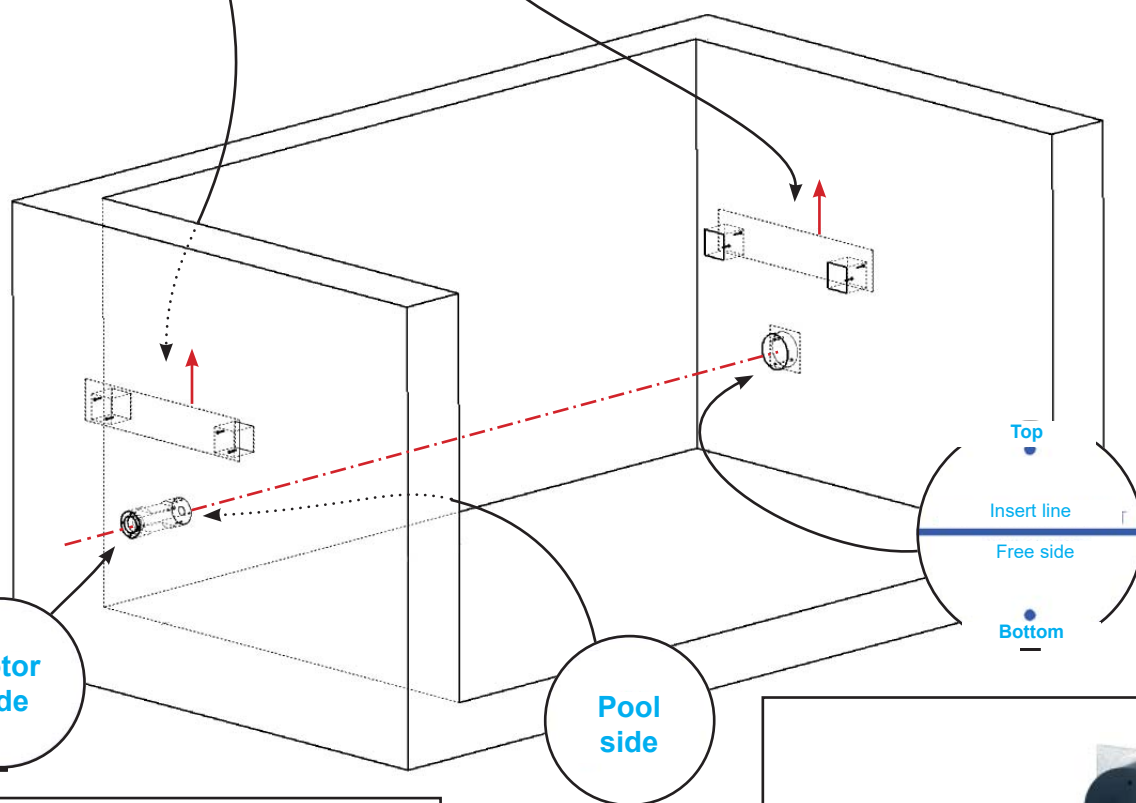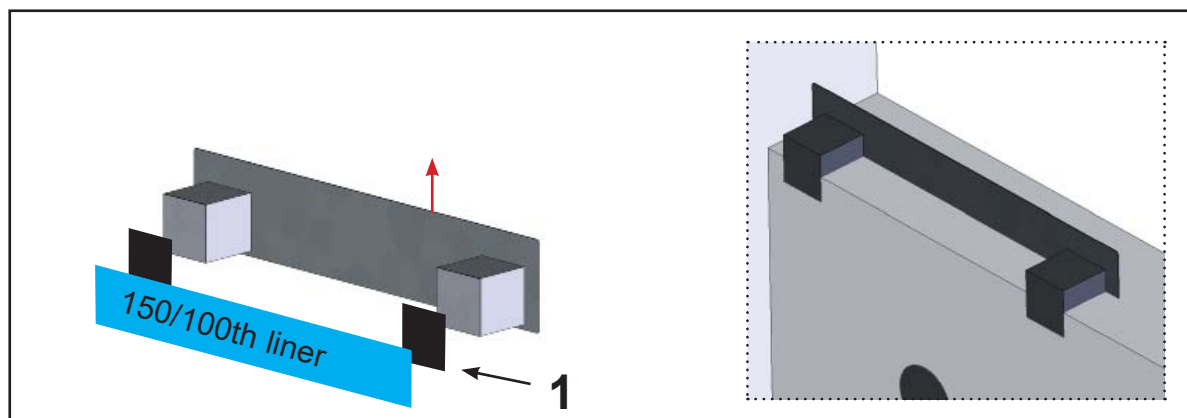


Roll-inside - insert mounting - motorisation in a dry pit

INSTALLATION OF THE INSERTED PARTS

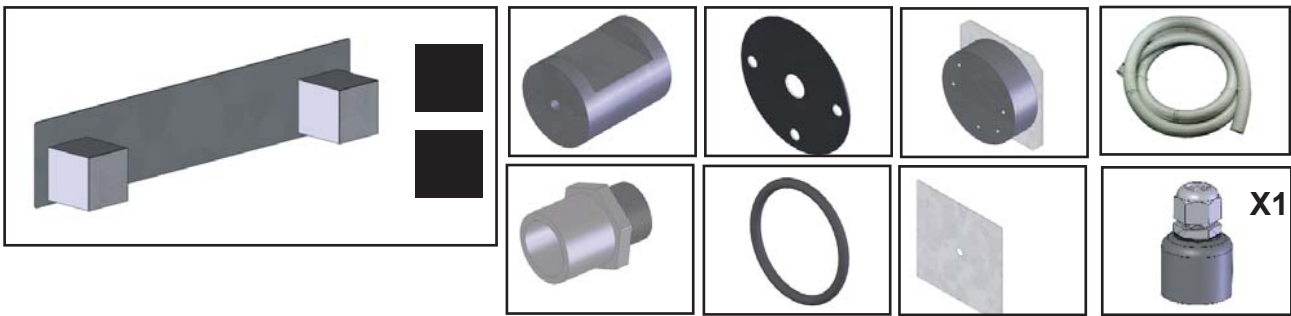



positioning

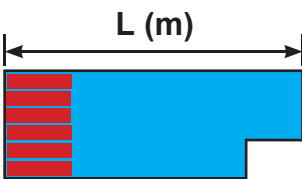




for pools of more than 7 m wide

L (m)	11	12	13	14	15	16	17	18	19	20
*B (cm)	45	46	47	48	48.5	49	50	51	52	53
*C (cm) mini	76	78	80	81	83	85	87	88	90	91


1 side

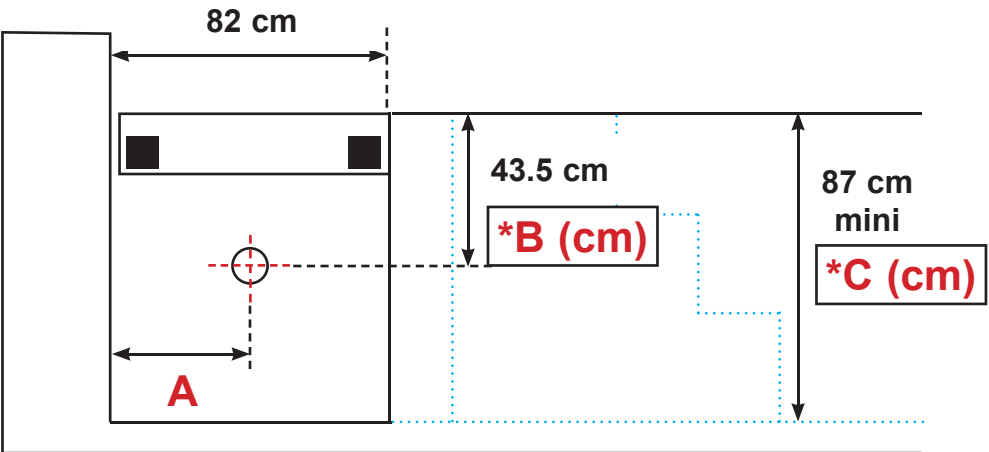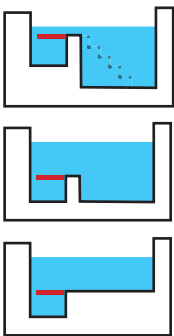




2 sides

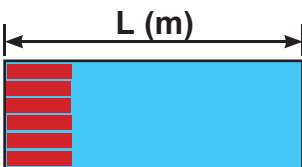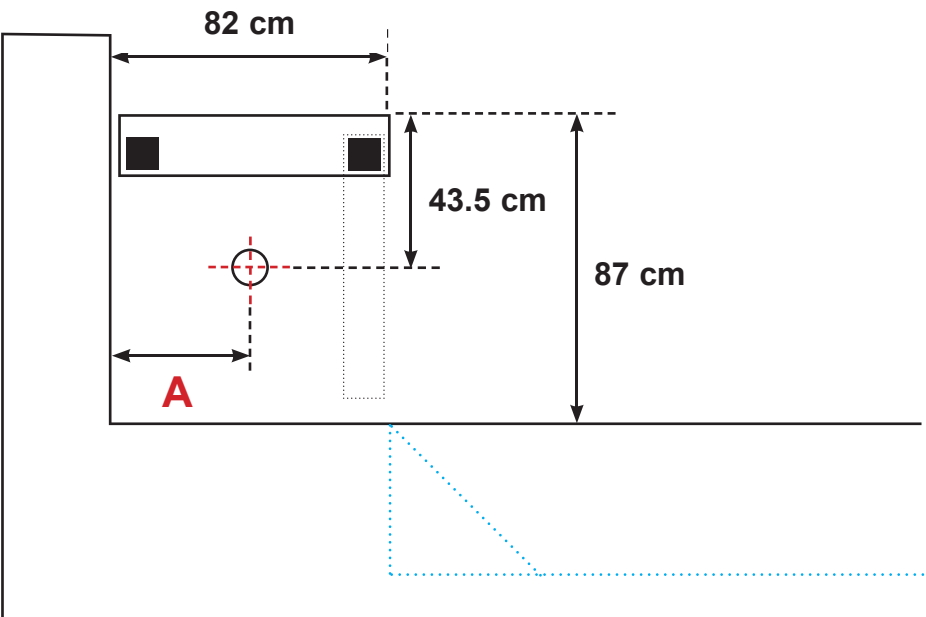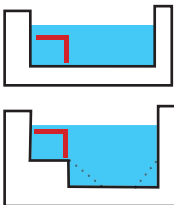



L	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
A (cm)	26	27	28	29	31	32	33	34	35	35	36	37	38	39	40

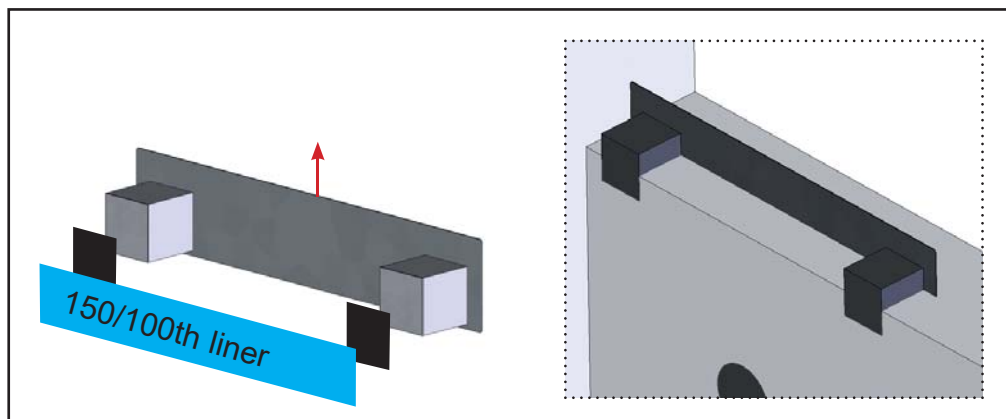

Connection box "Option"

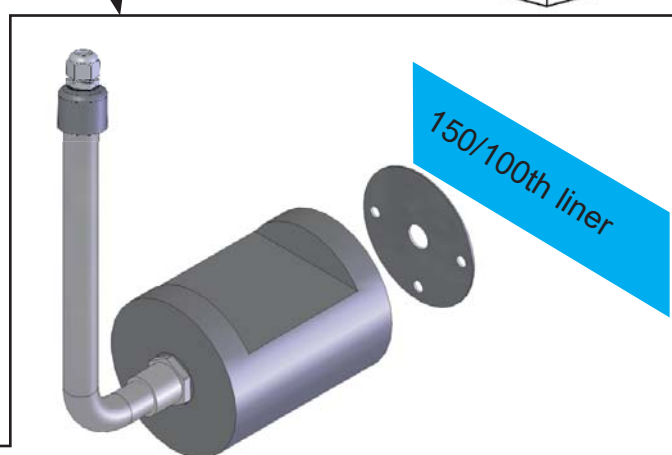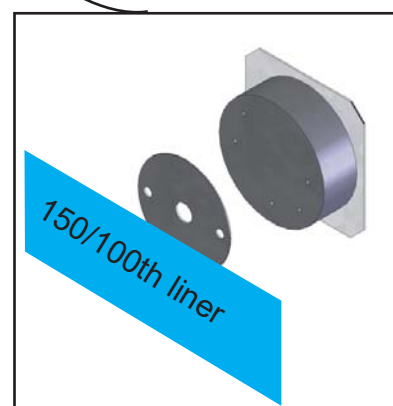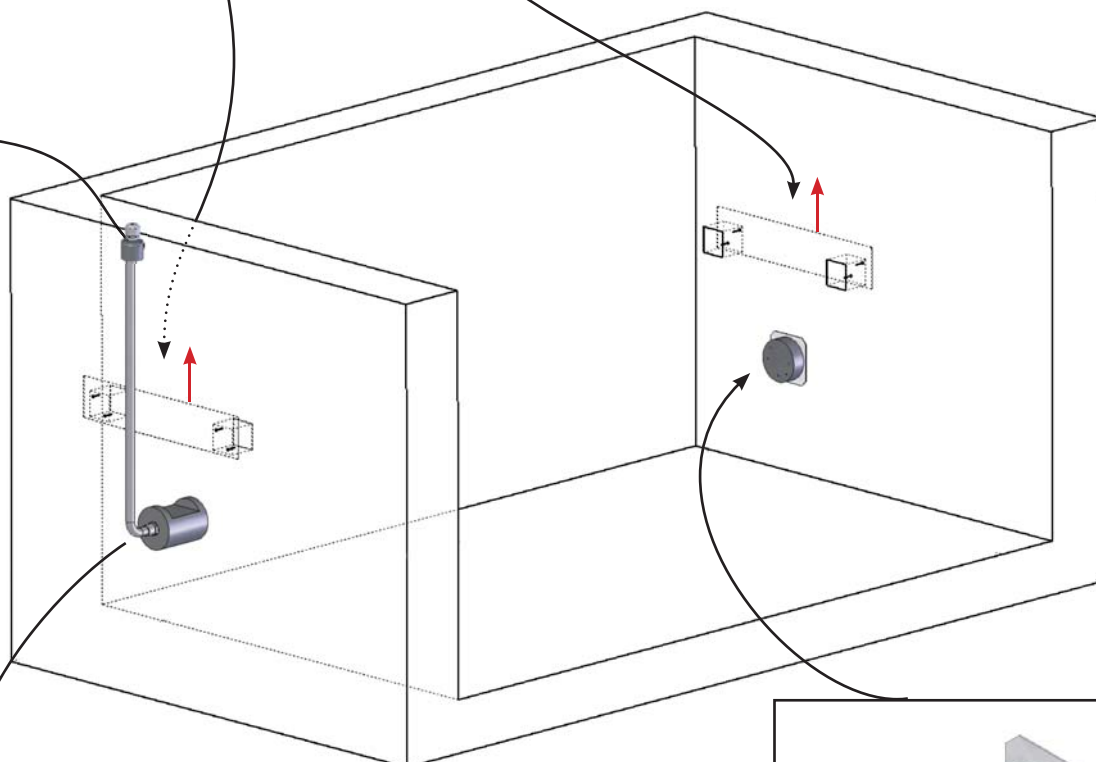


Box template

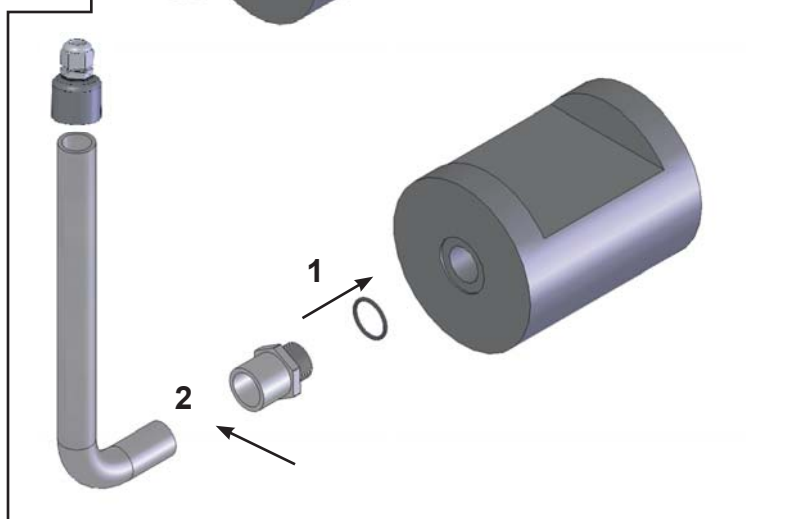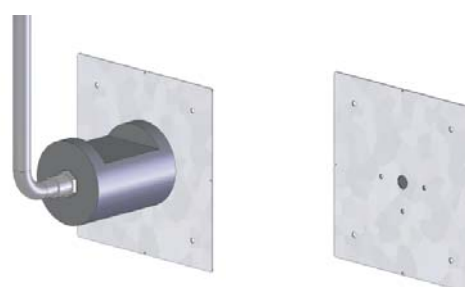



Roll-inside - surface mounted - tubular immersed motorisation

INSTALLATION OF THE INSERTED PARTS



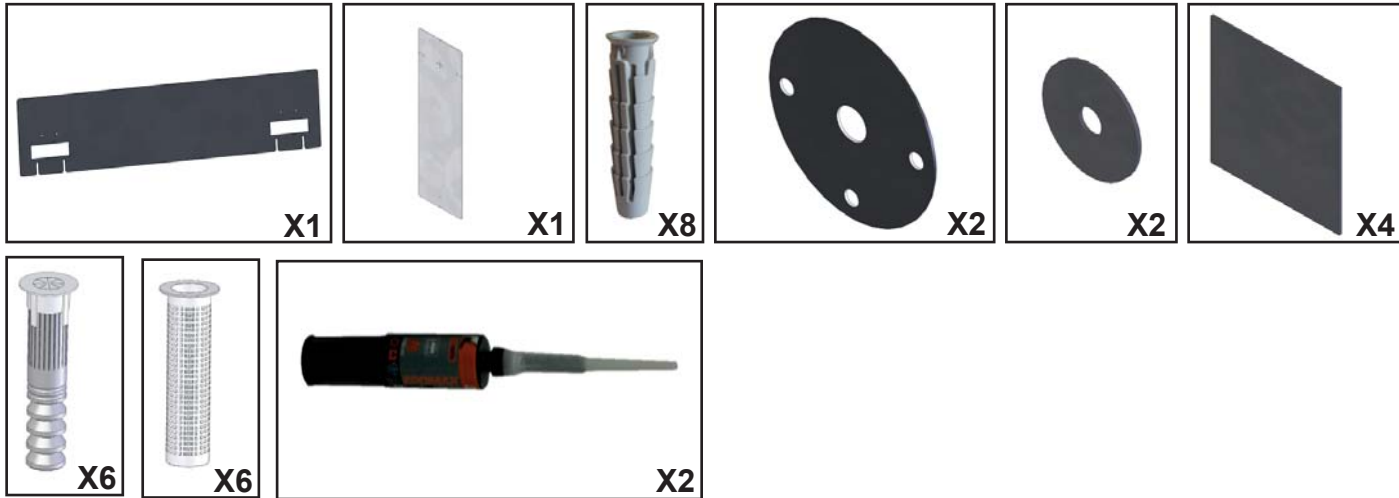


Positioning






1 side

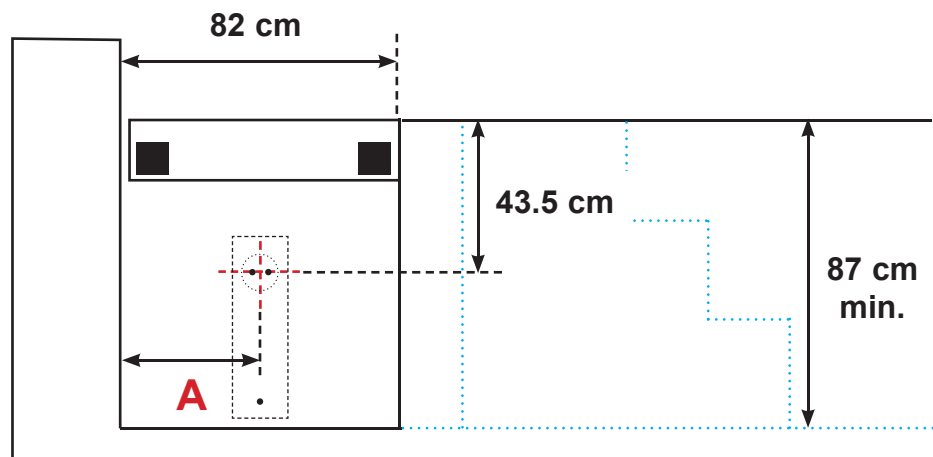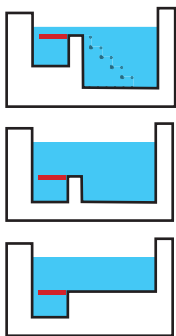

2 sides

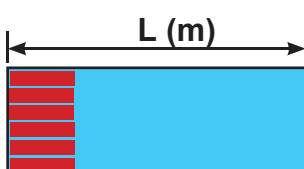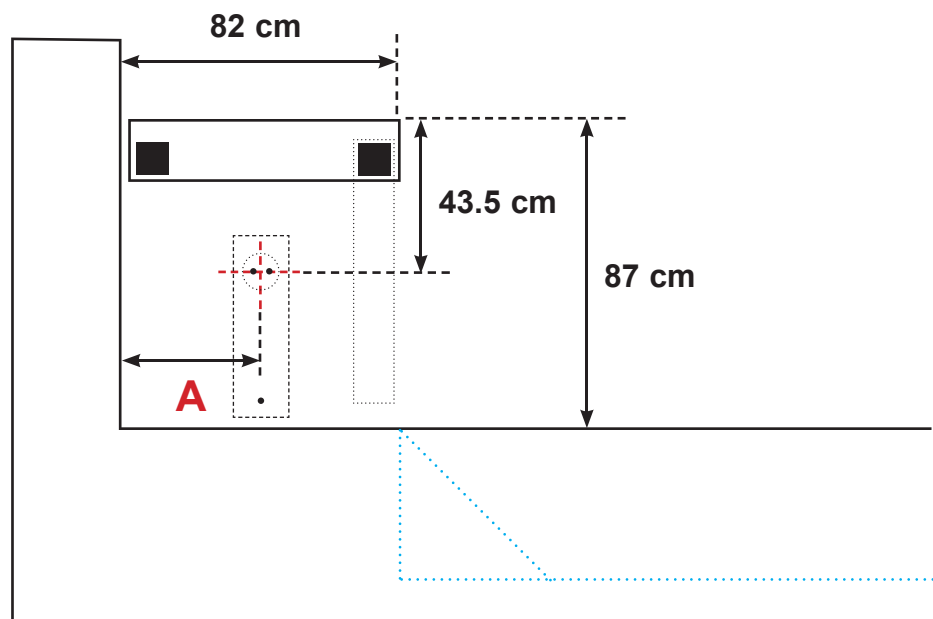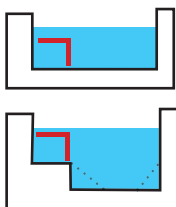





L	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
A (cm)	26	27	28	29	31	32	33	34	35	35	36	37	38	39	40

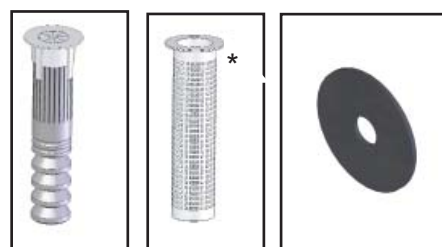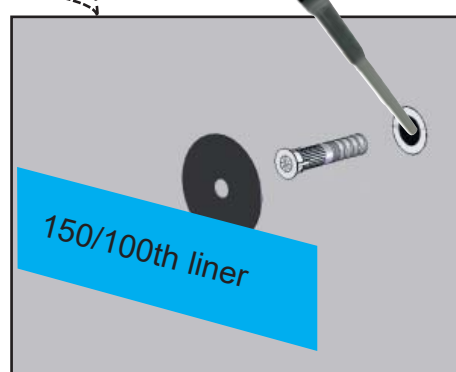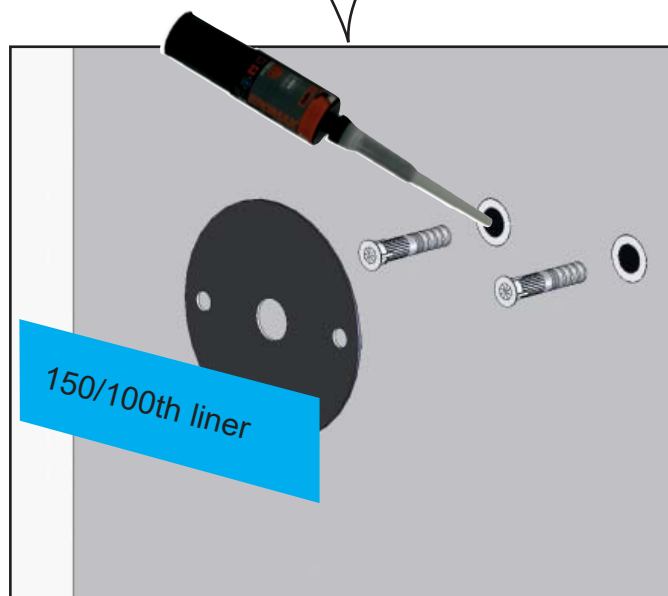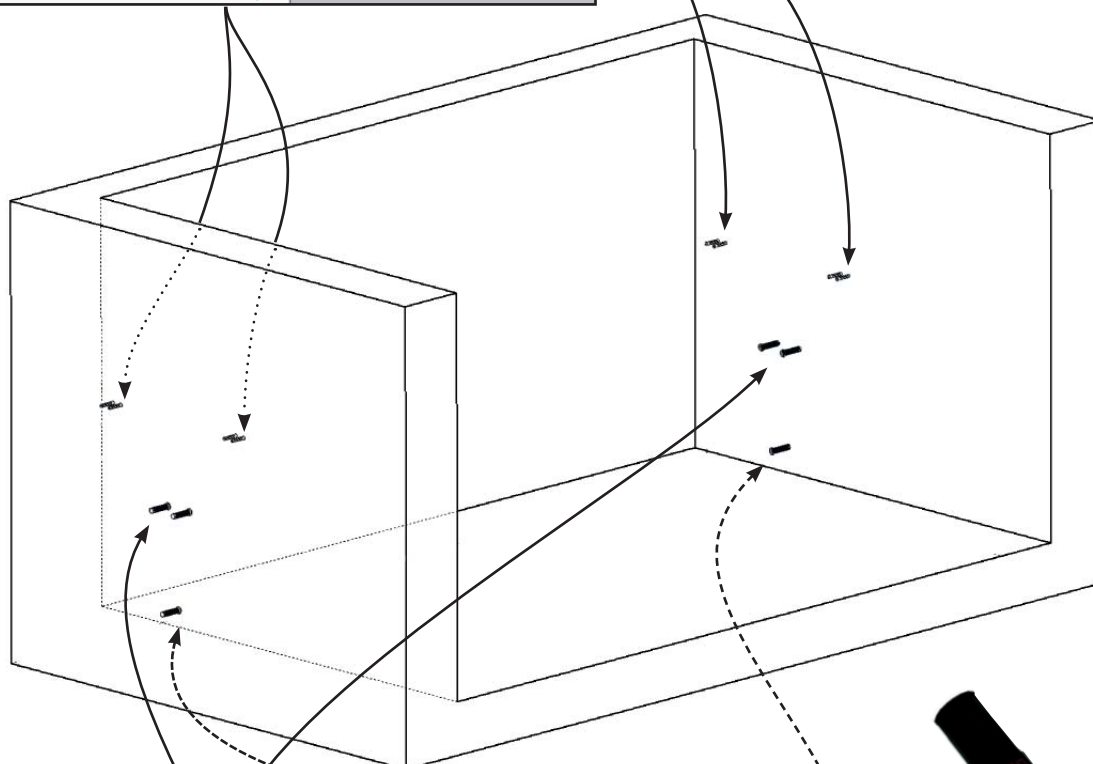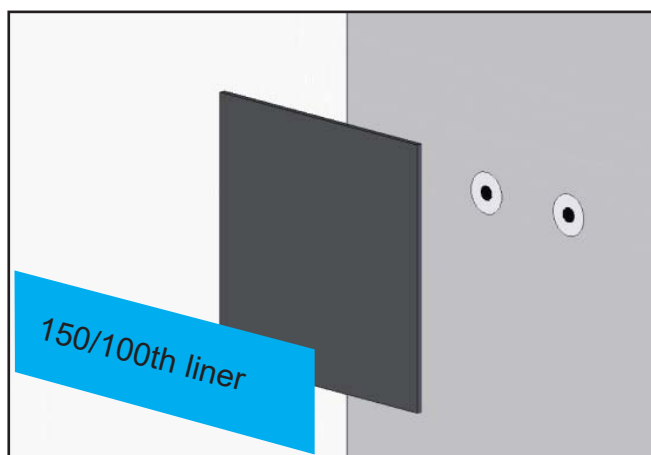

* Only for hollow sides



Roll-inside - for insert mounting - motorisation in a dry pit

INSTALLATION OF THE FLANGE MOTOR SIDE

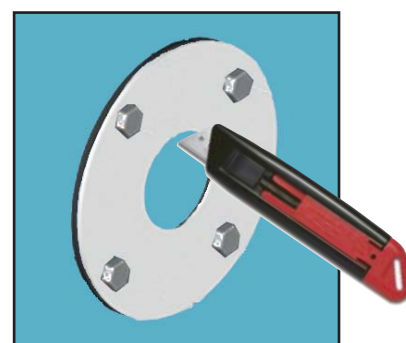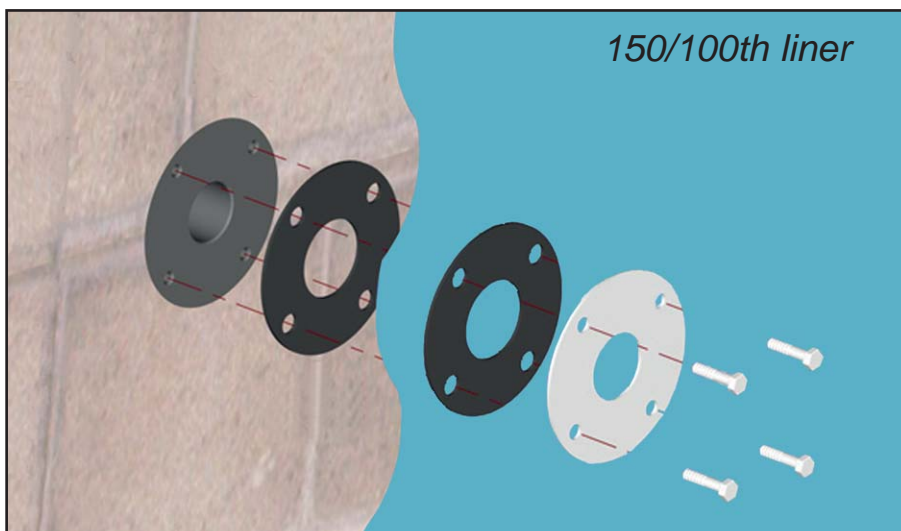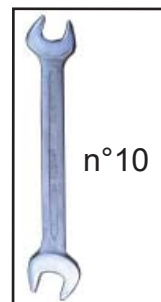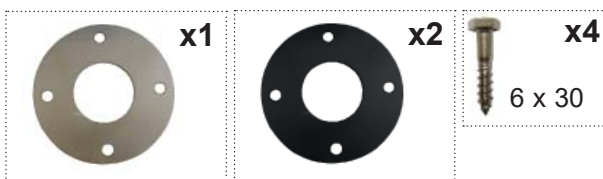

- Fill with water (approximately 20cm) before fixing the flange
- Cut the liner in the middle of the flange with a punch

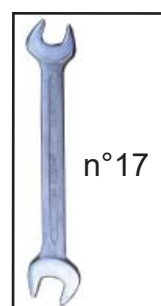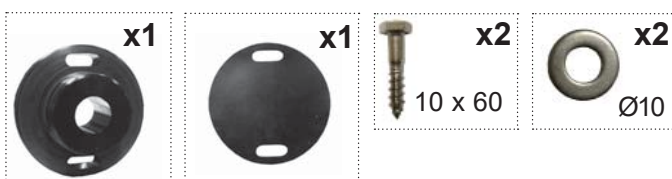


INSTALLATION OF THE BEARING ON THE FREE SIDE




- Fill with water (approximately 20cm) before fixing the bearing
- Cut the liner in the middle of the flange with a punch





INSTALLING THE MECHANISM

Reverse the tube on the motor side

 x1 6 sides male n°4	 x5 6x30	 x5 PVC Ø6
--	---	---

Bag


x1

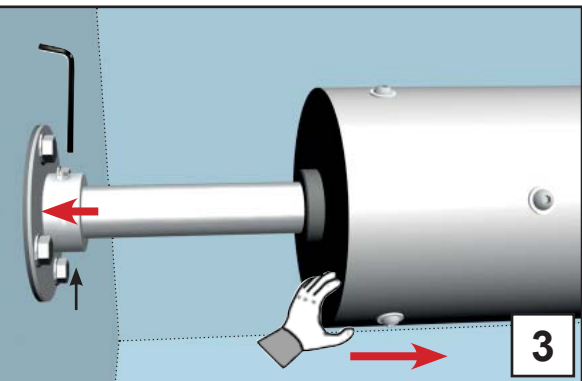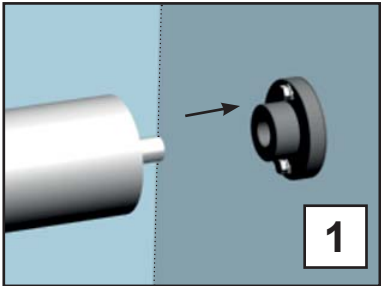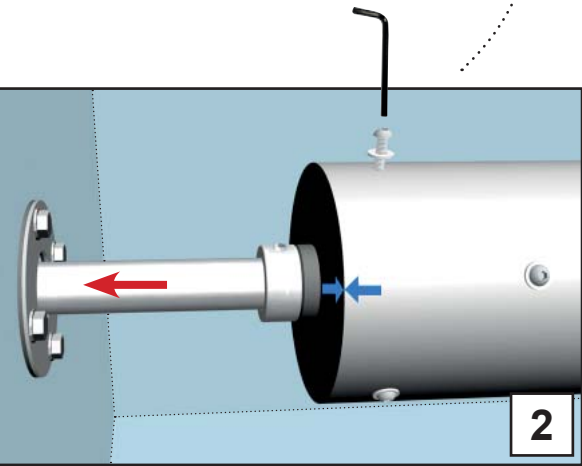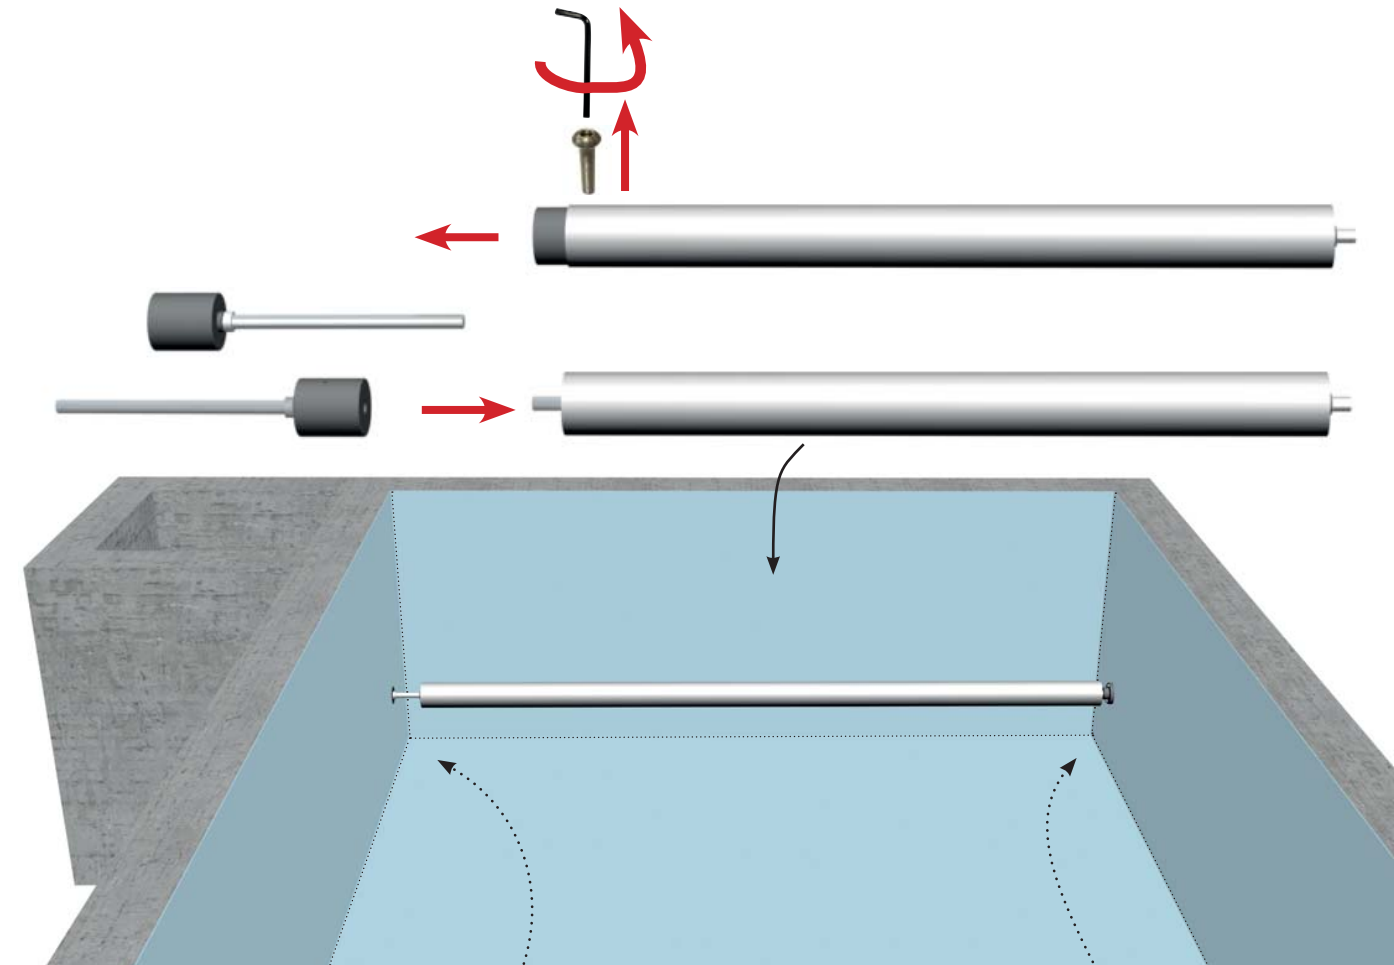

MAKING THE BOX WATERTIGHT ON THE MOTOR SIDE



18

GEAR MOTOR INSTALLATION

Turn the supports

MCA 120



MCA 250



DL6010/7710



Install the gear motor on the tube

MCA 120



MCA 250



DL6010/7710




Fixture

	x4		x4		x4
Ø10		8 x 40		Ø8	

MCA 120



MCA 250



DL6010/7710



Fit the key

MCA 120



MCA 250



DL6010/*7710




Install the motor protection cap

	x2		x2		x2
Ø8		Ø6		6 x 30	

MCA 120



MCA 250

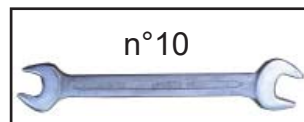

DL6010/7710





Option: 6 pin electric plug



Roll-inside - for insert mounting - tubular immersed motorisation






INSTALLING THE MECHANICAL FIXTURE

Motor side

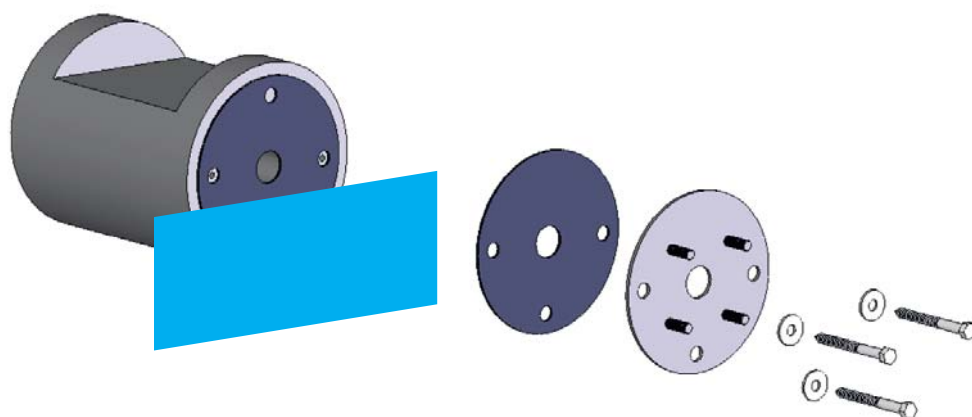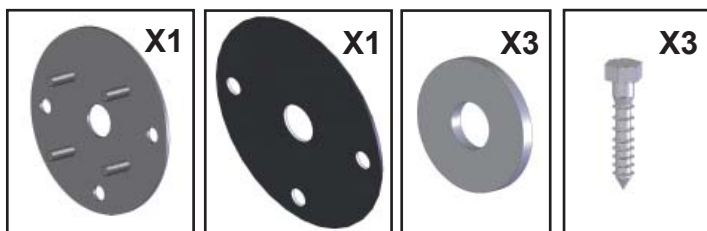

Free side

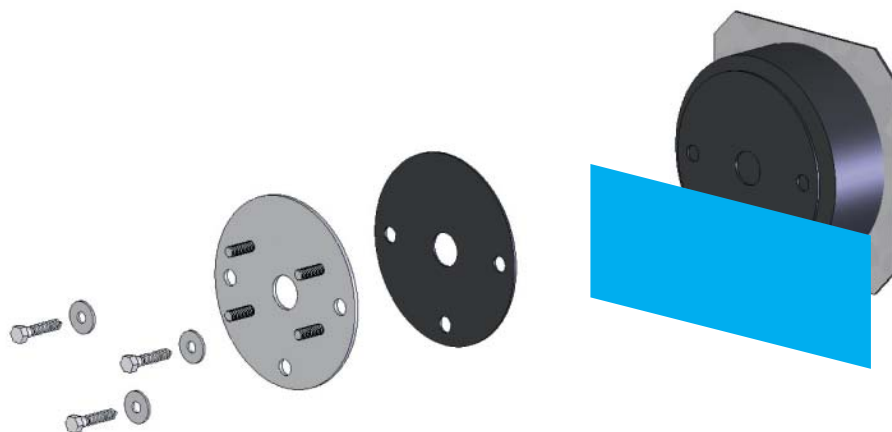
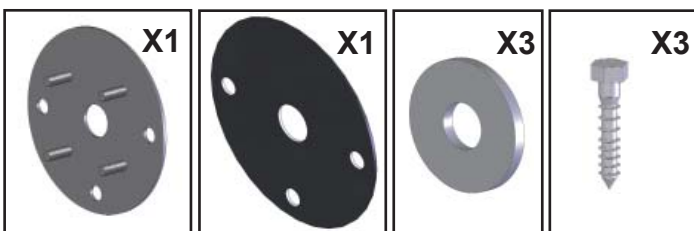


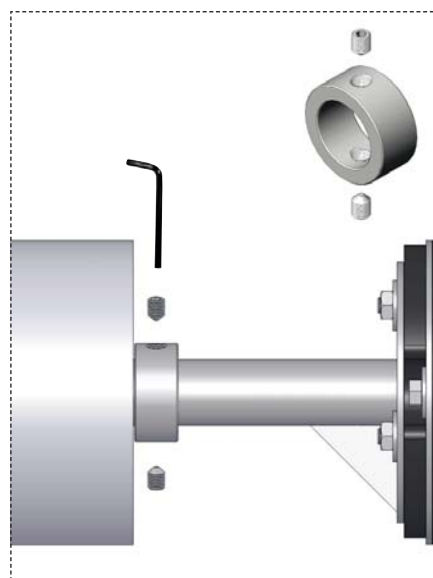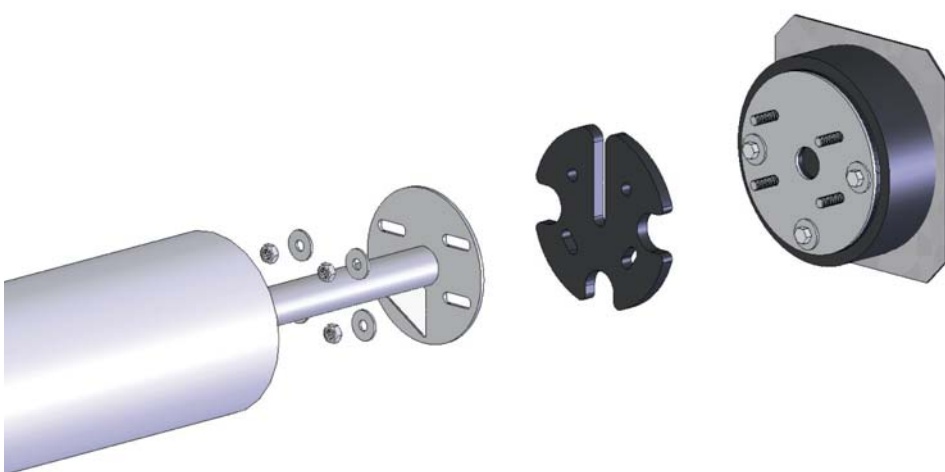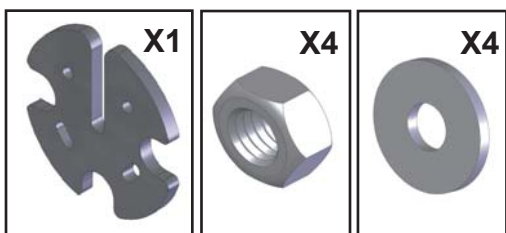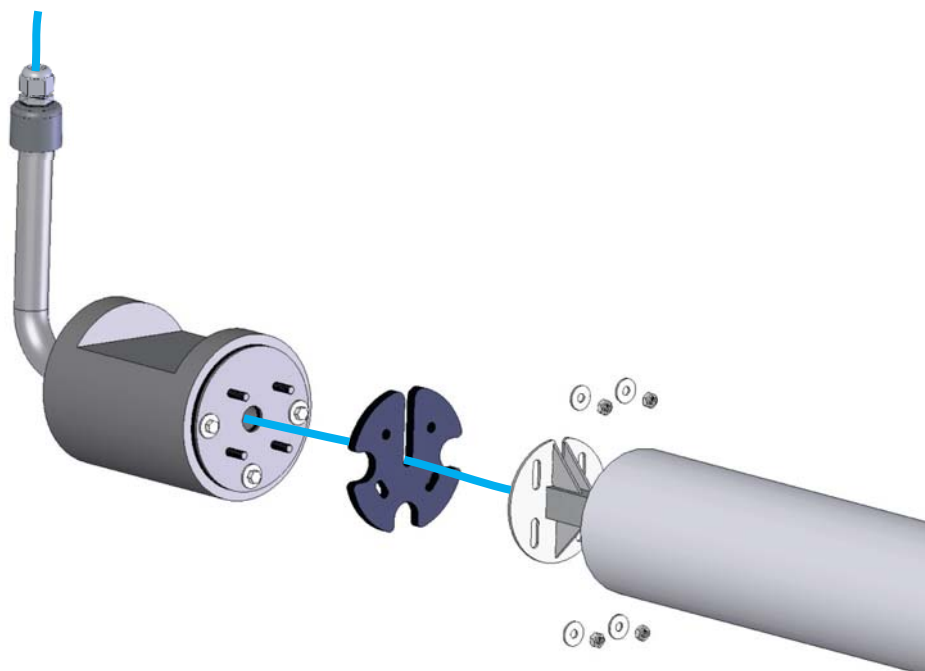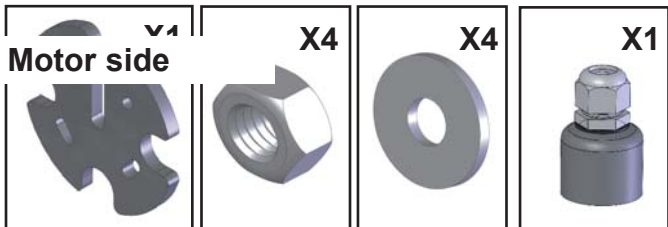



Roll-inside - surface mounted - tubular immersed motorisation

INSTALLING THE MECHANICAL FIXTURE

Motor side

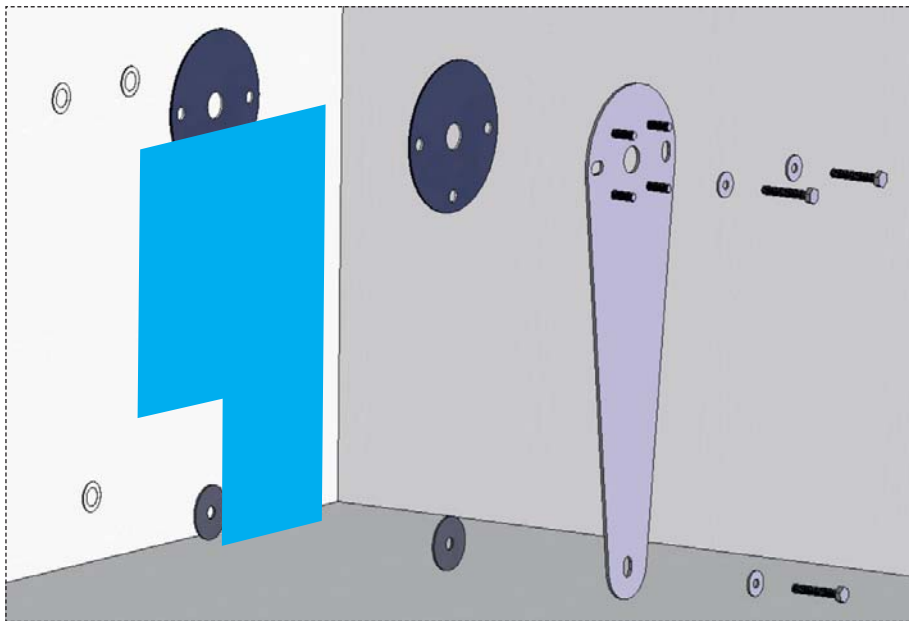
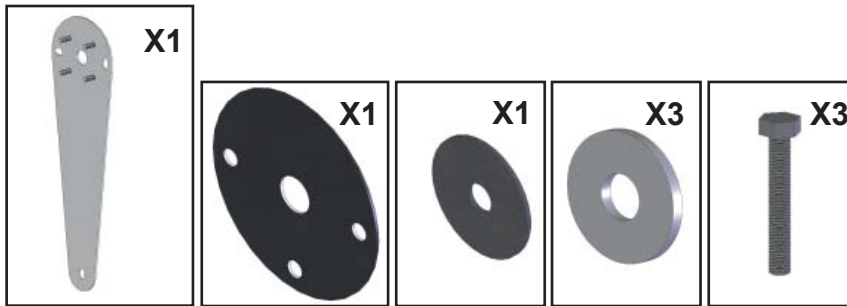


Free side



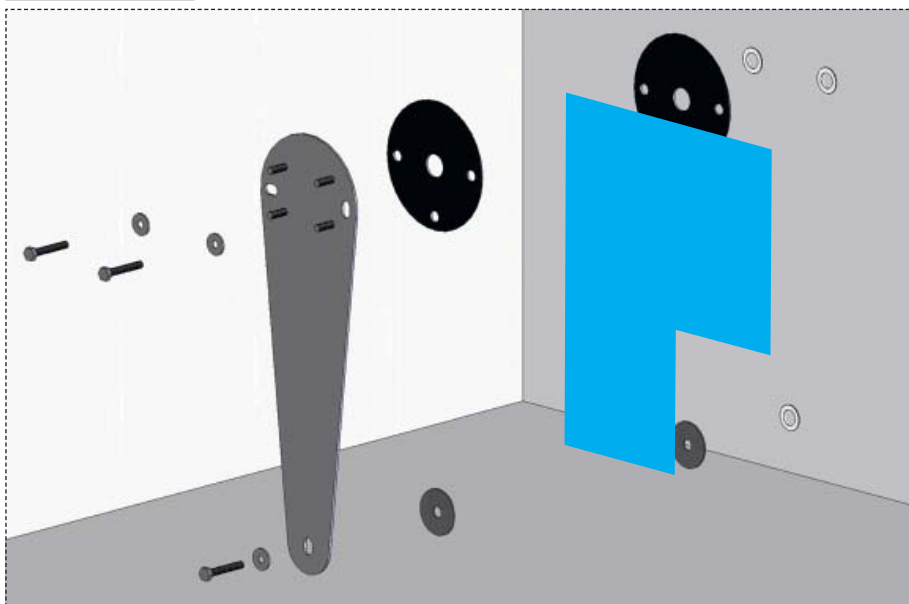
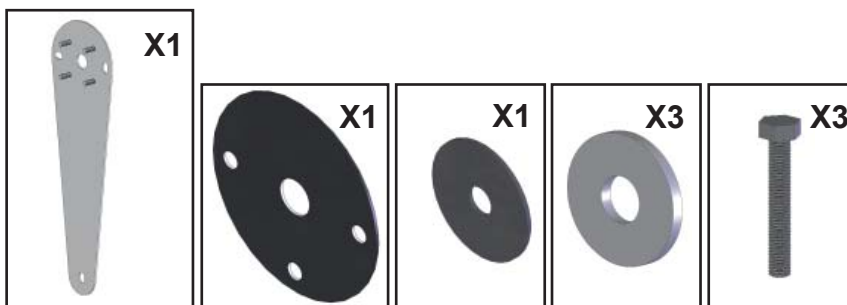




Motor side

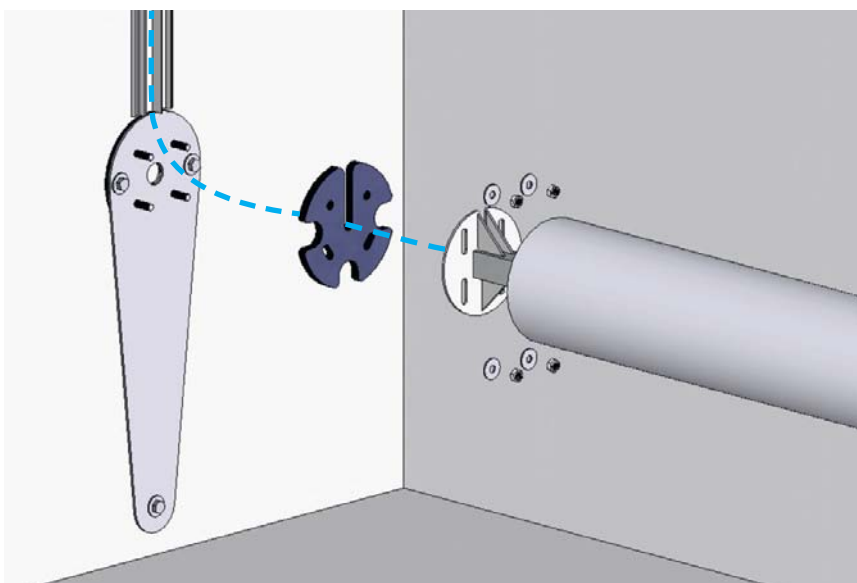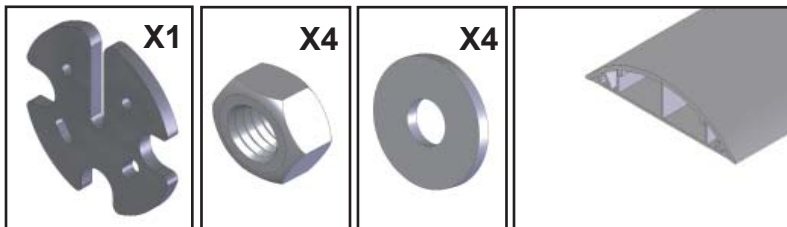

Free side

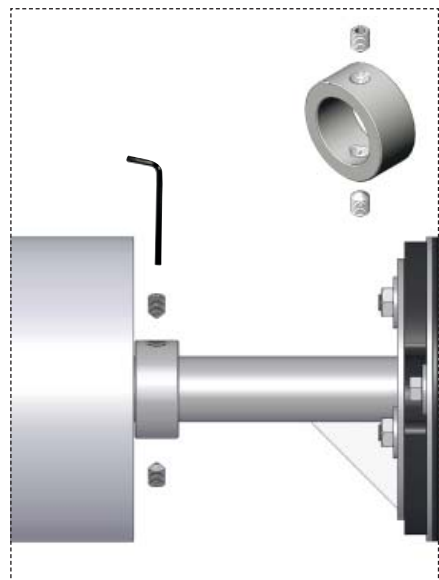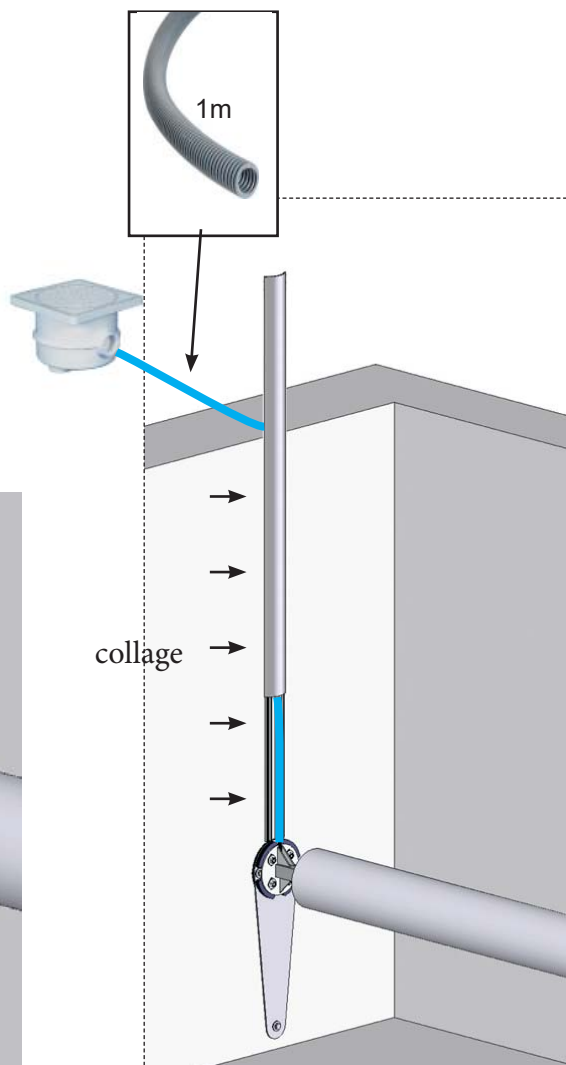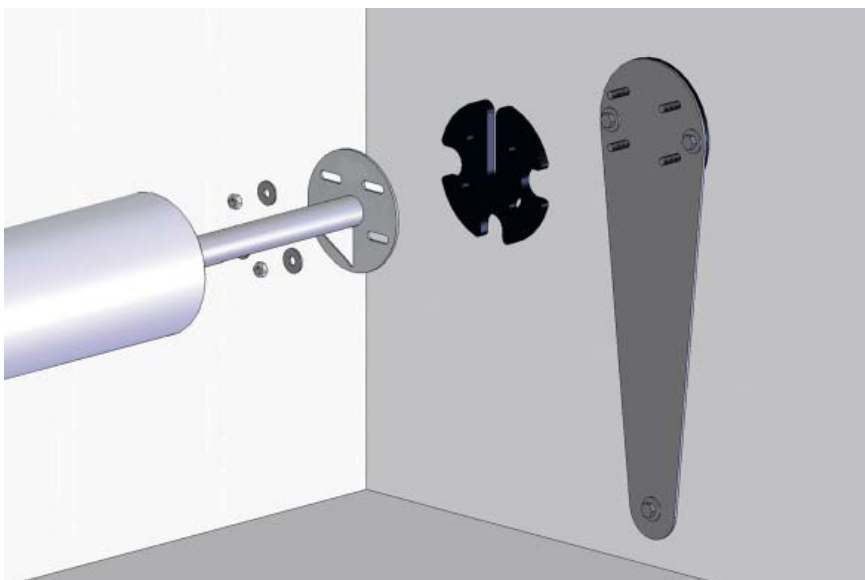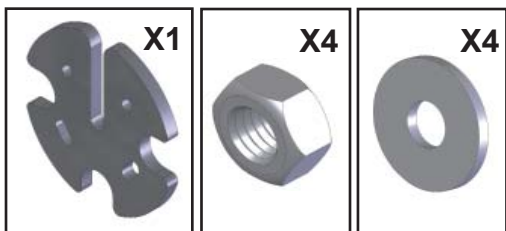


INSTALLING THE BEAM SUPPORTS

Tracing




For the surface mounted version, the template can help to find the position of the previously installed anchor plugs.

Roll-inside 1 side

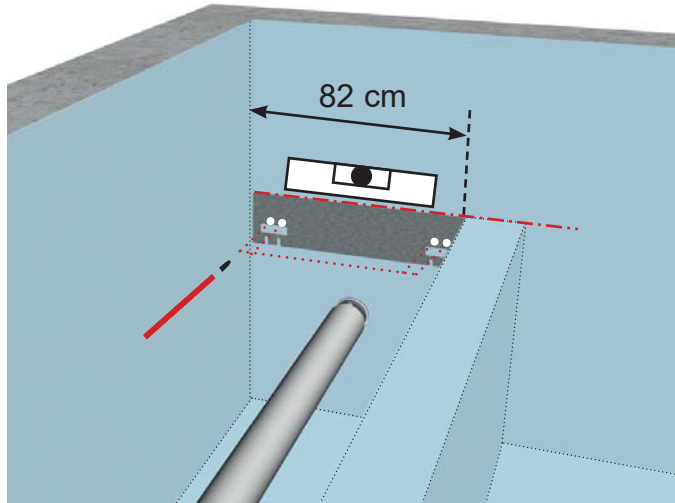


Roll-inside 2 sides

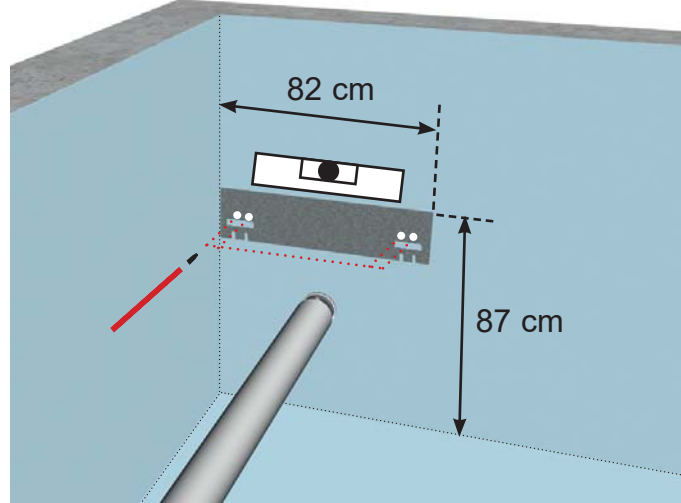


Fixture



Roll-inside 1 side

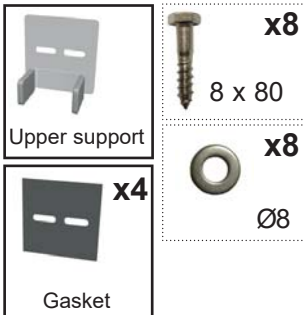

Fill the anchor plug with proflex

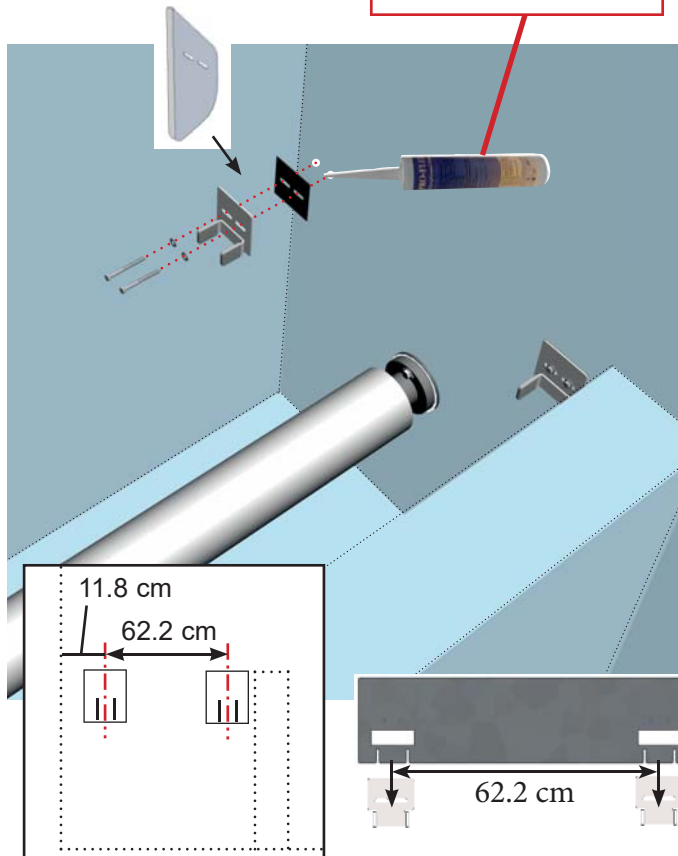


Roll-inside 2 sides

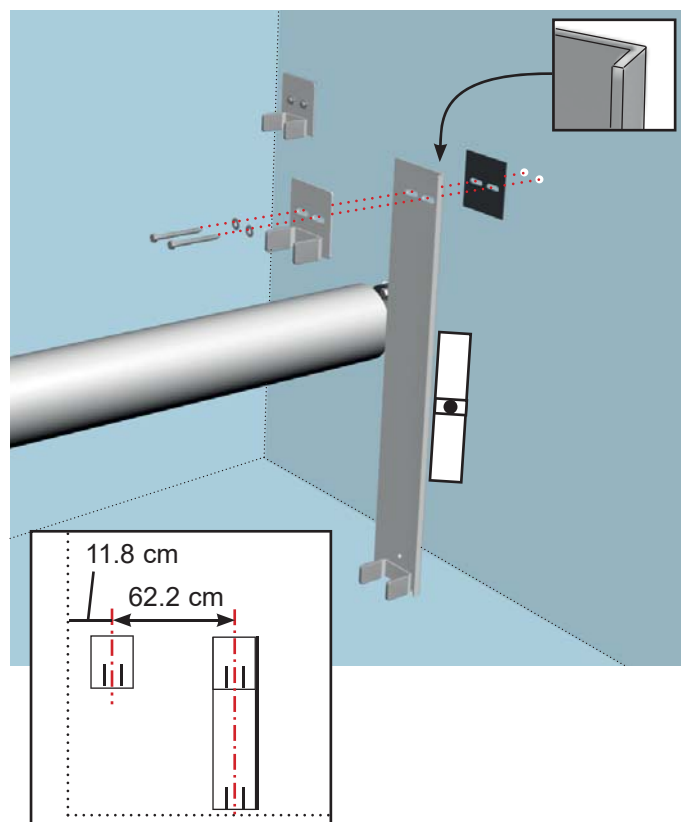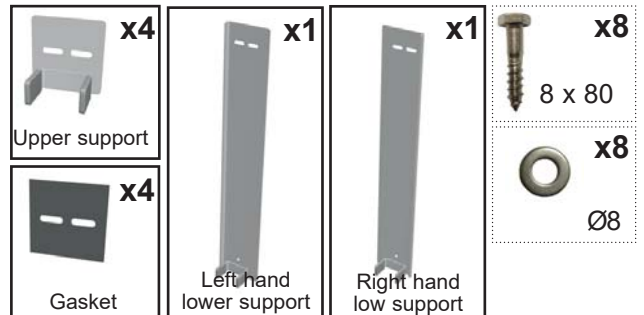


BEAM INSTALLATION

Roll-inside 1 side

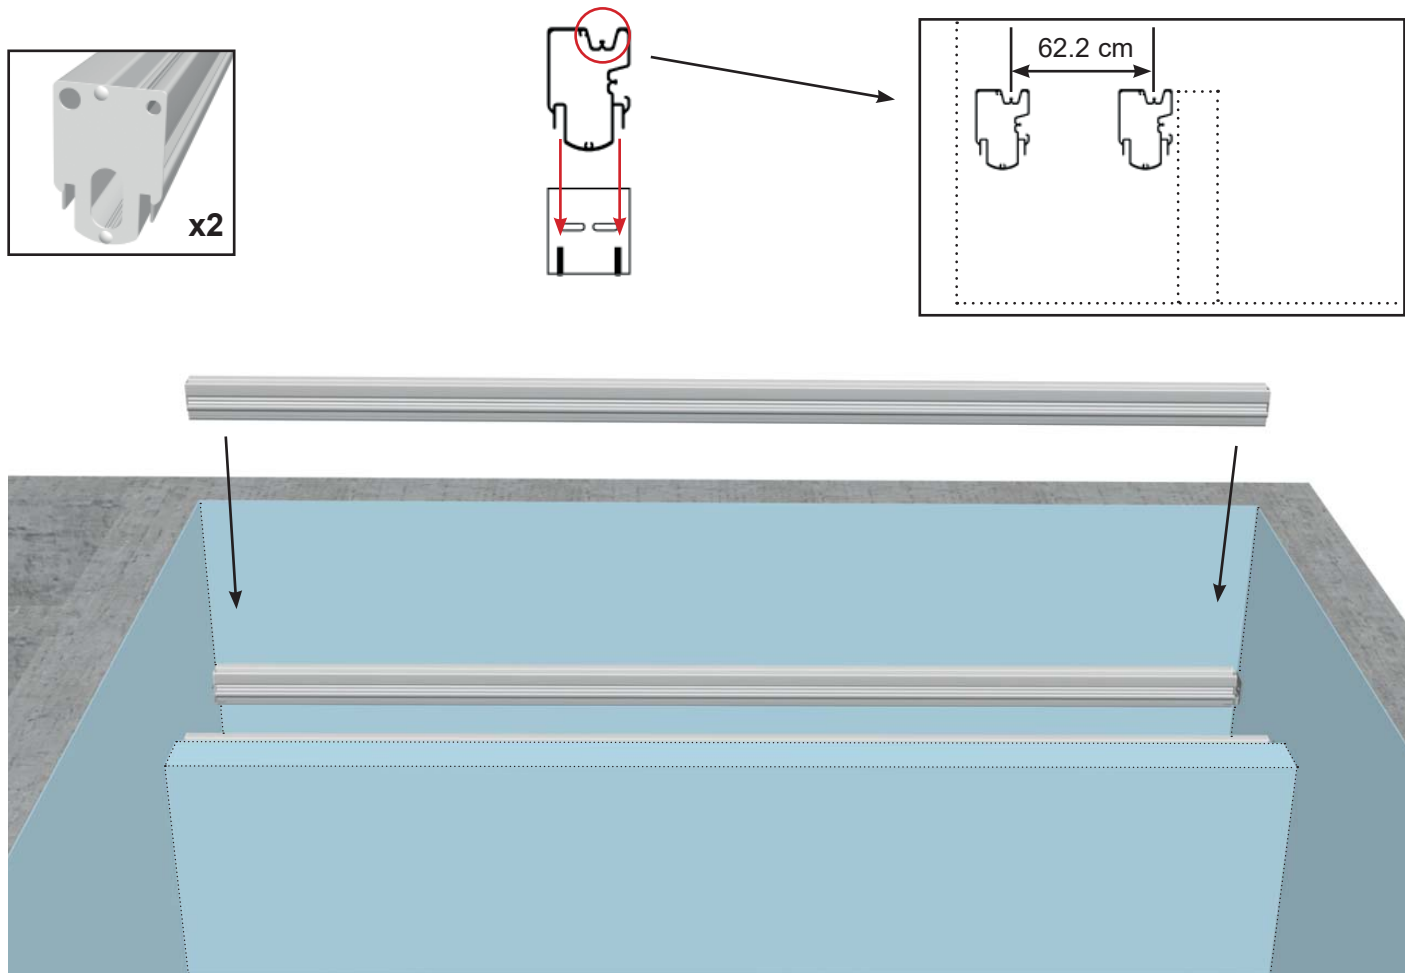



Roll-inside 2 sides

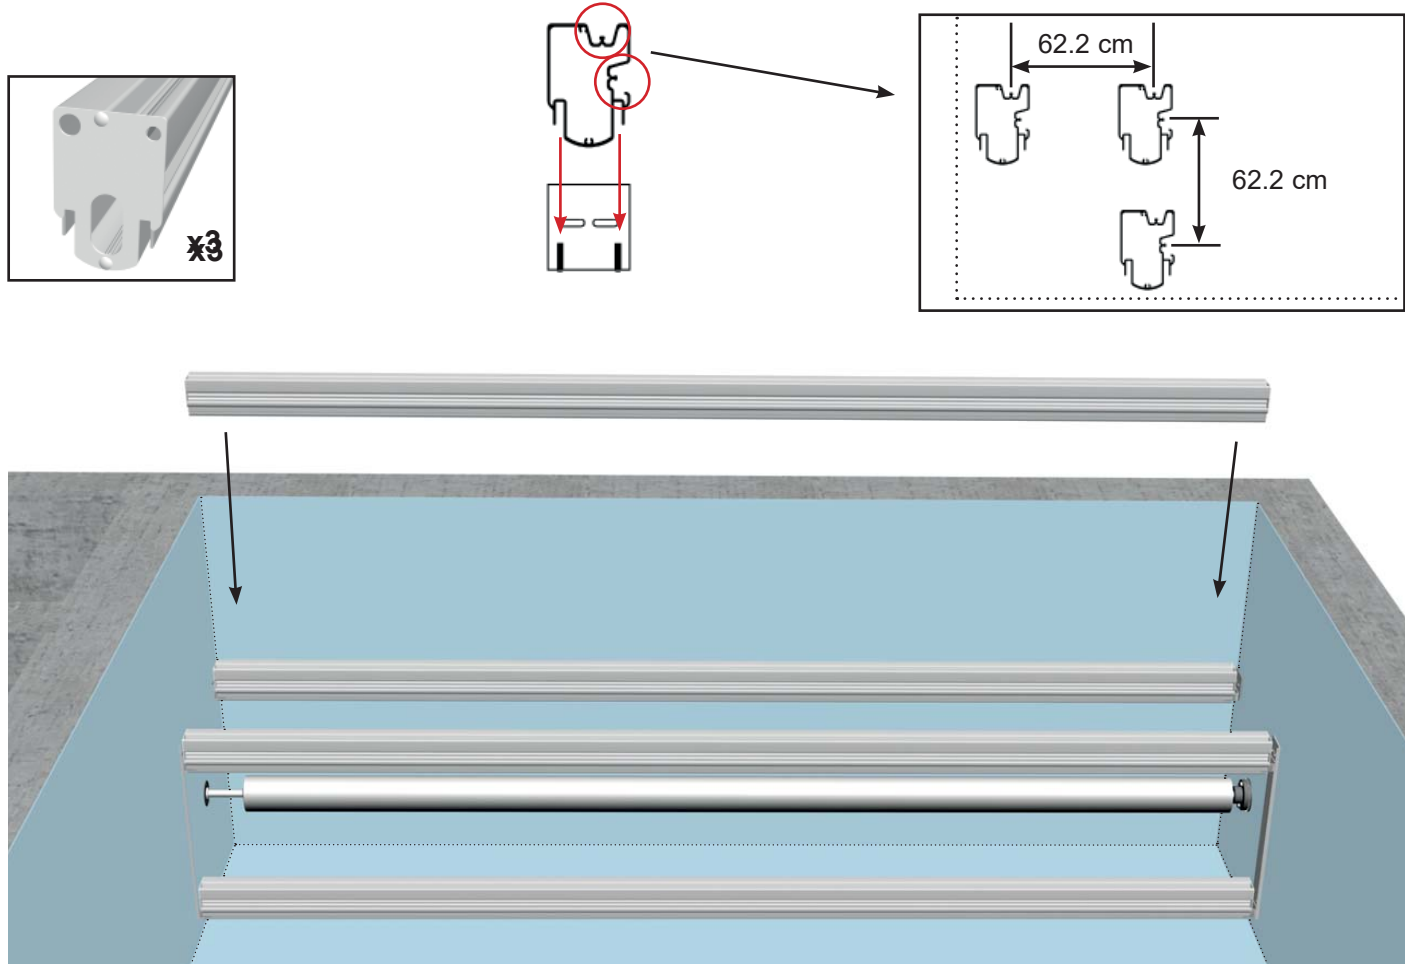

INSTALLING THE COUNTER WEIGHTS





Installation

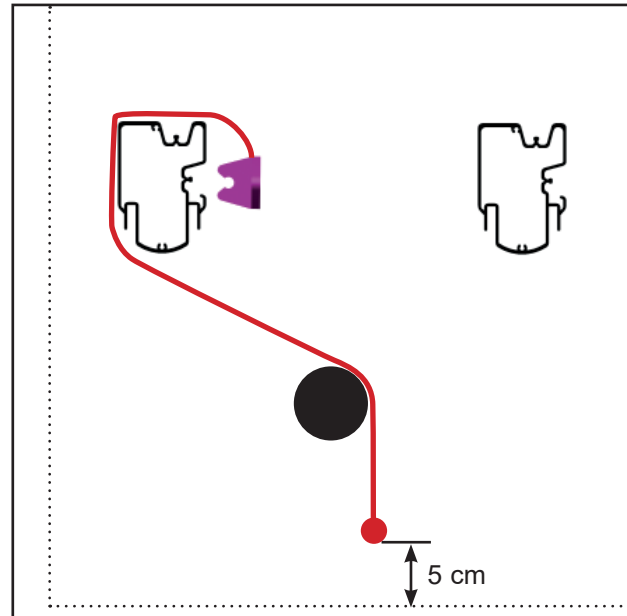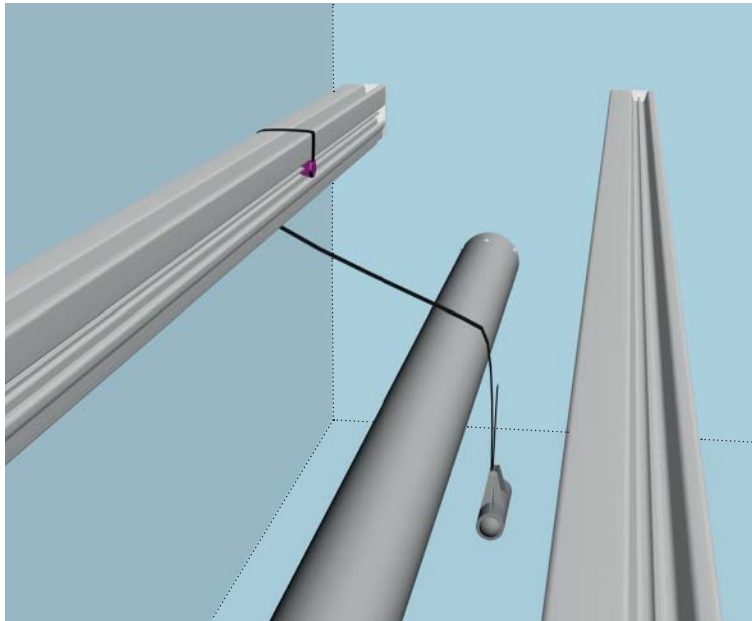


26

Strap adjustment

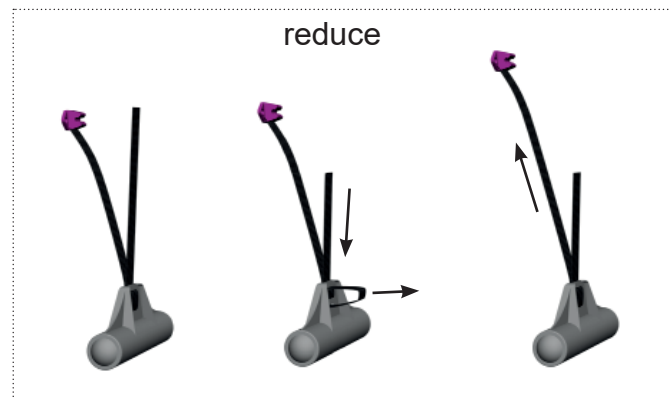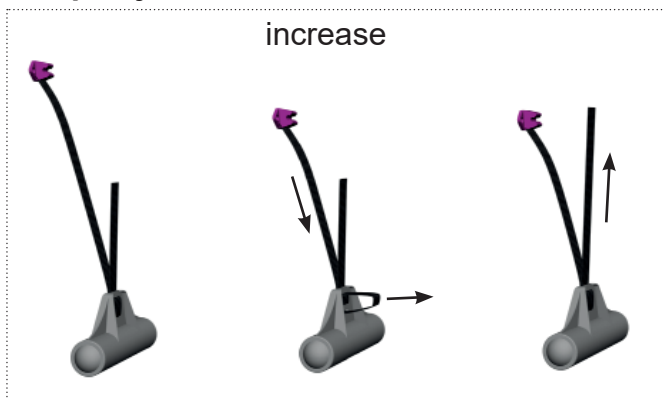




Counter-weight distribution

Pools without steps

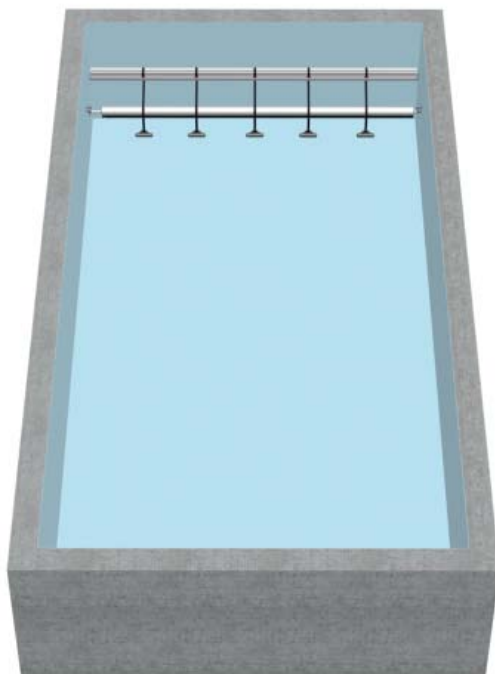


Pools with steps

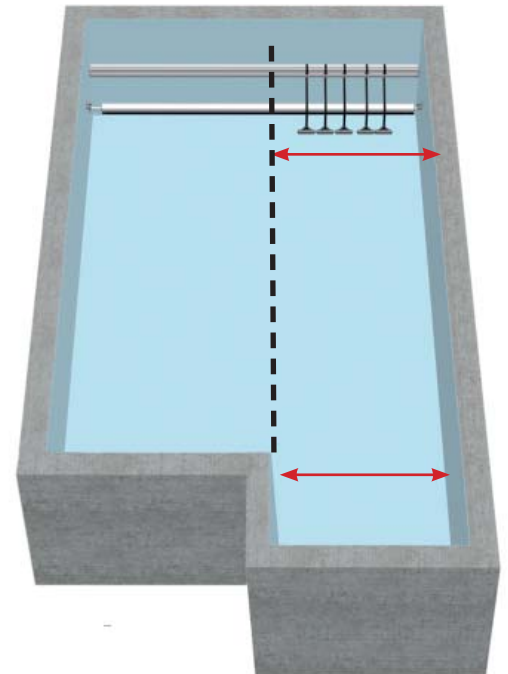

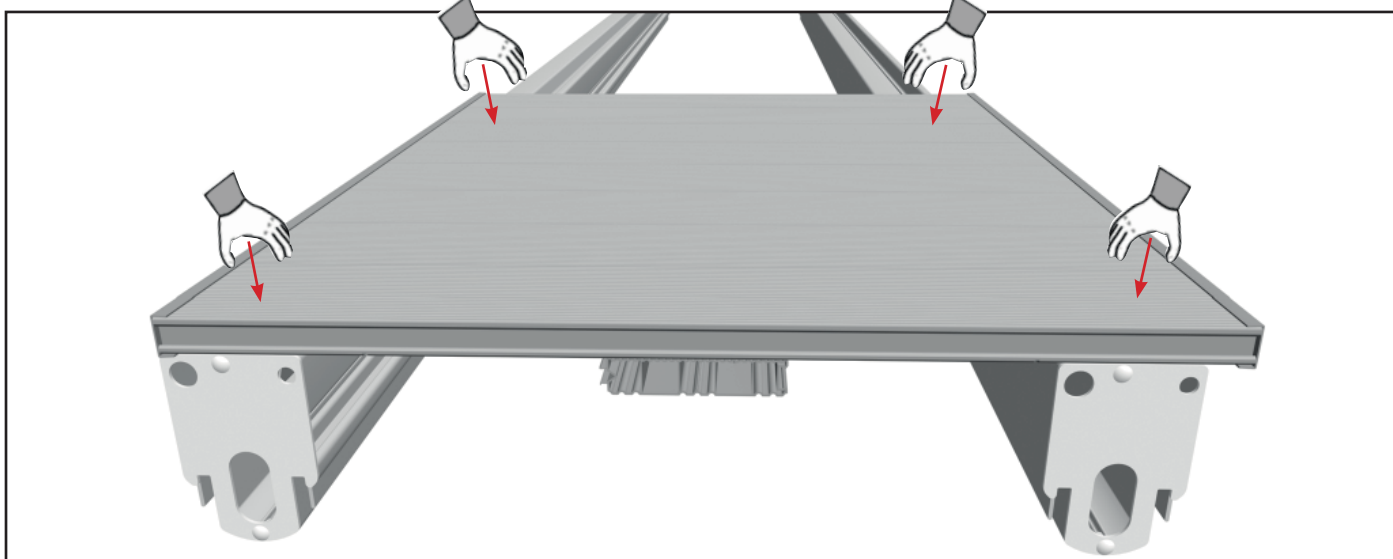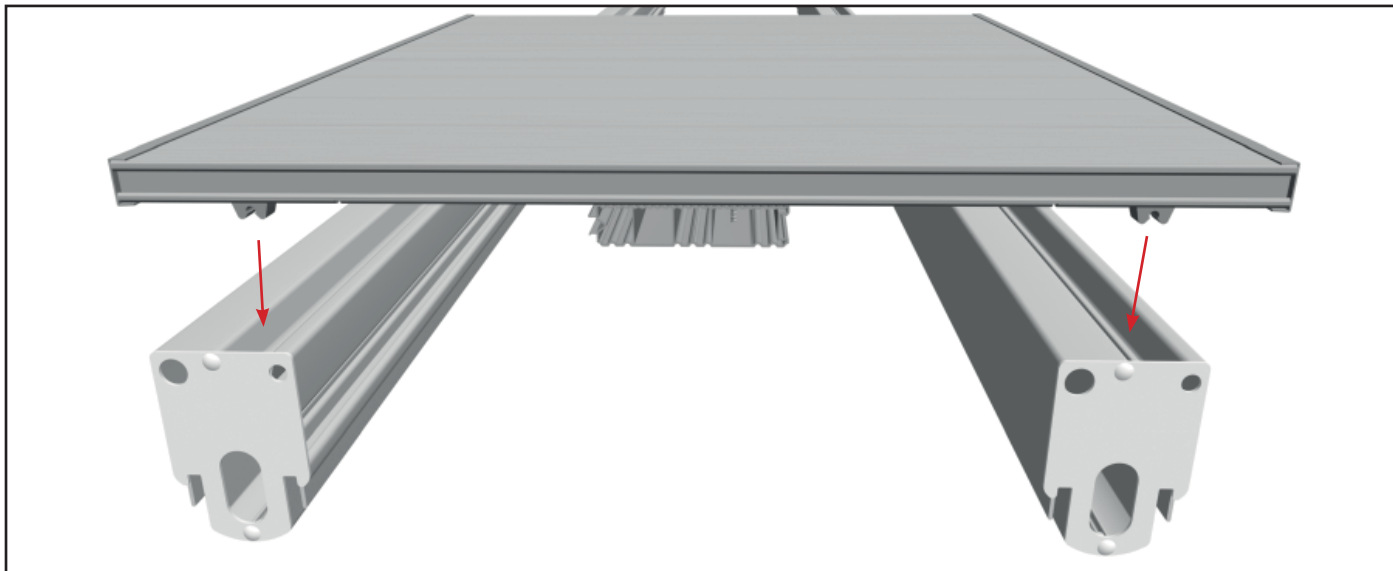




Roll-inside 1 side

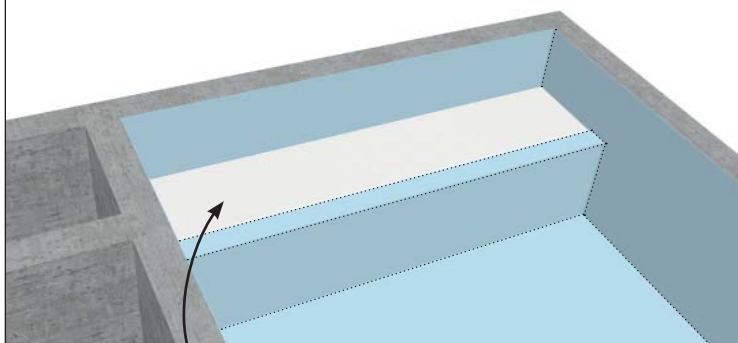

Install horizontal decking after
adjusting the automatic stops
on the cover

Roll-inside 2 sides

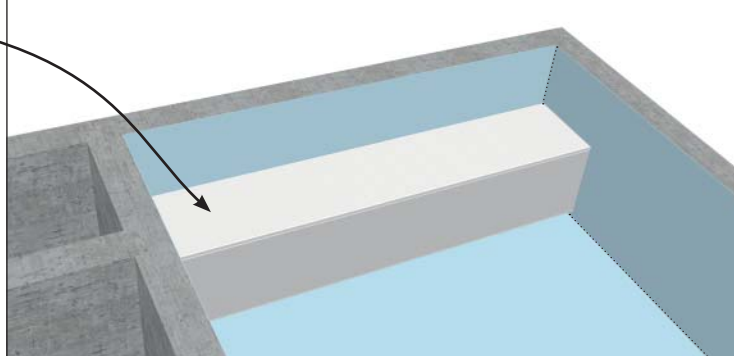

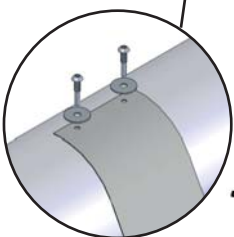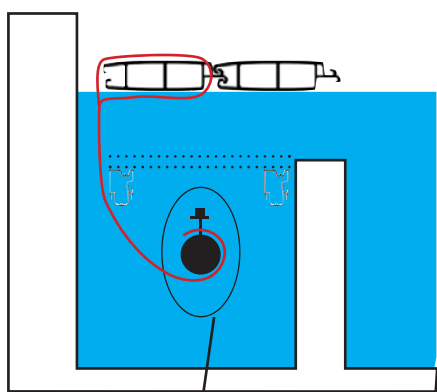



Allen Key
mâle n°4

Box stickered «Début de volet»


+




Install the slats on the water
and clip them together.
**Take care with the direction
of the cover over the pool**

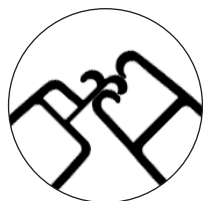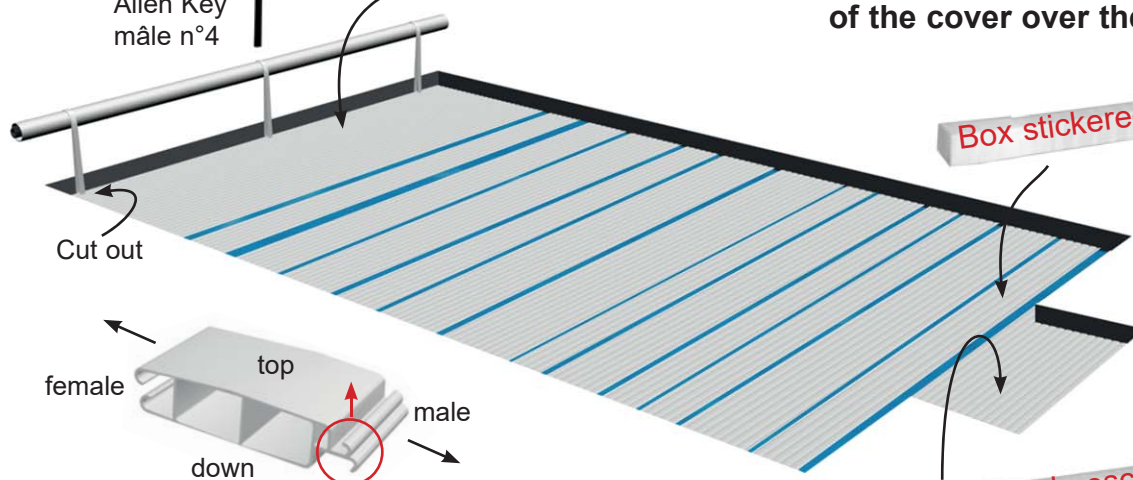

Fit the slats along
the whole length


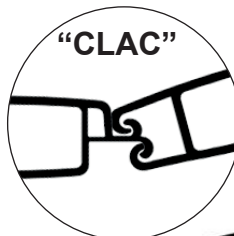


“CLAC”


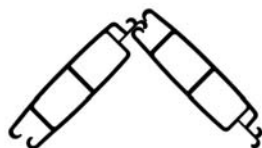


Repeated wiggling/handling of the slats may be needed..

HOW TO TAKE OFF A SLAT AND END CAPS ?

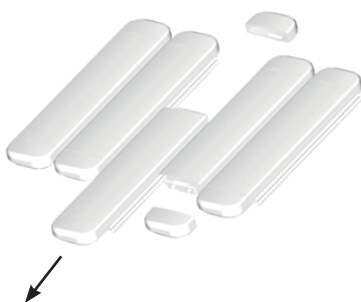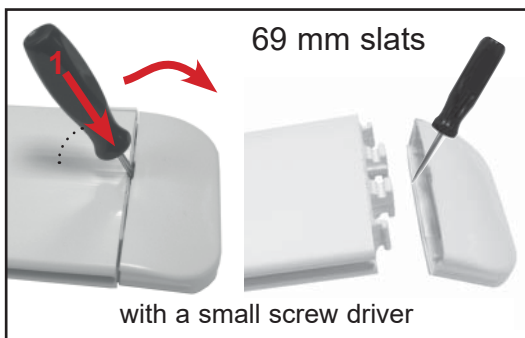

INTRODUCTION OF THE ROD

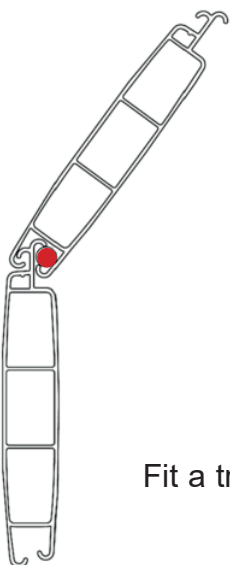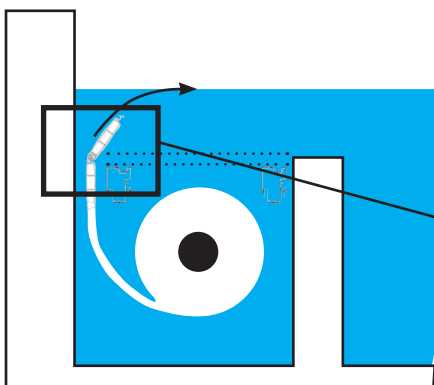


Fit a trim on each side of the first slat

ELECTRICAL DRAWING CONTROL BOX - MOTOR MCA120 / MCA250 / WI-KEY

The electric control box must be fitted in a dry room.
The installation must comply with the NF C15-100 standard, et CEI 60364
(Last applicable version) ask your electrician for advice or contact your electricity provider.
All our control boxes use a 230 Volt single phase (50Hz) power supply.
The required power at the input terminals is 0.15 Kw.
Upstream from the control box a suitably sized circuit breaker with a 30 mA ground fault device must be provided.
For additional information, see the instructions supplied with the electrical box.



For salt electrolysis system:
Inversion of the NO / NC control logic

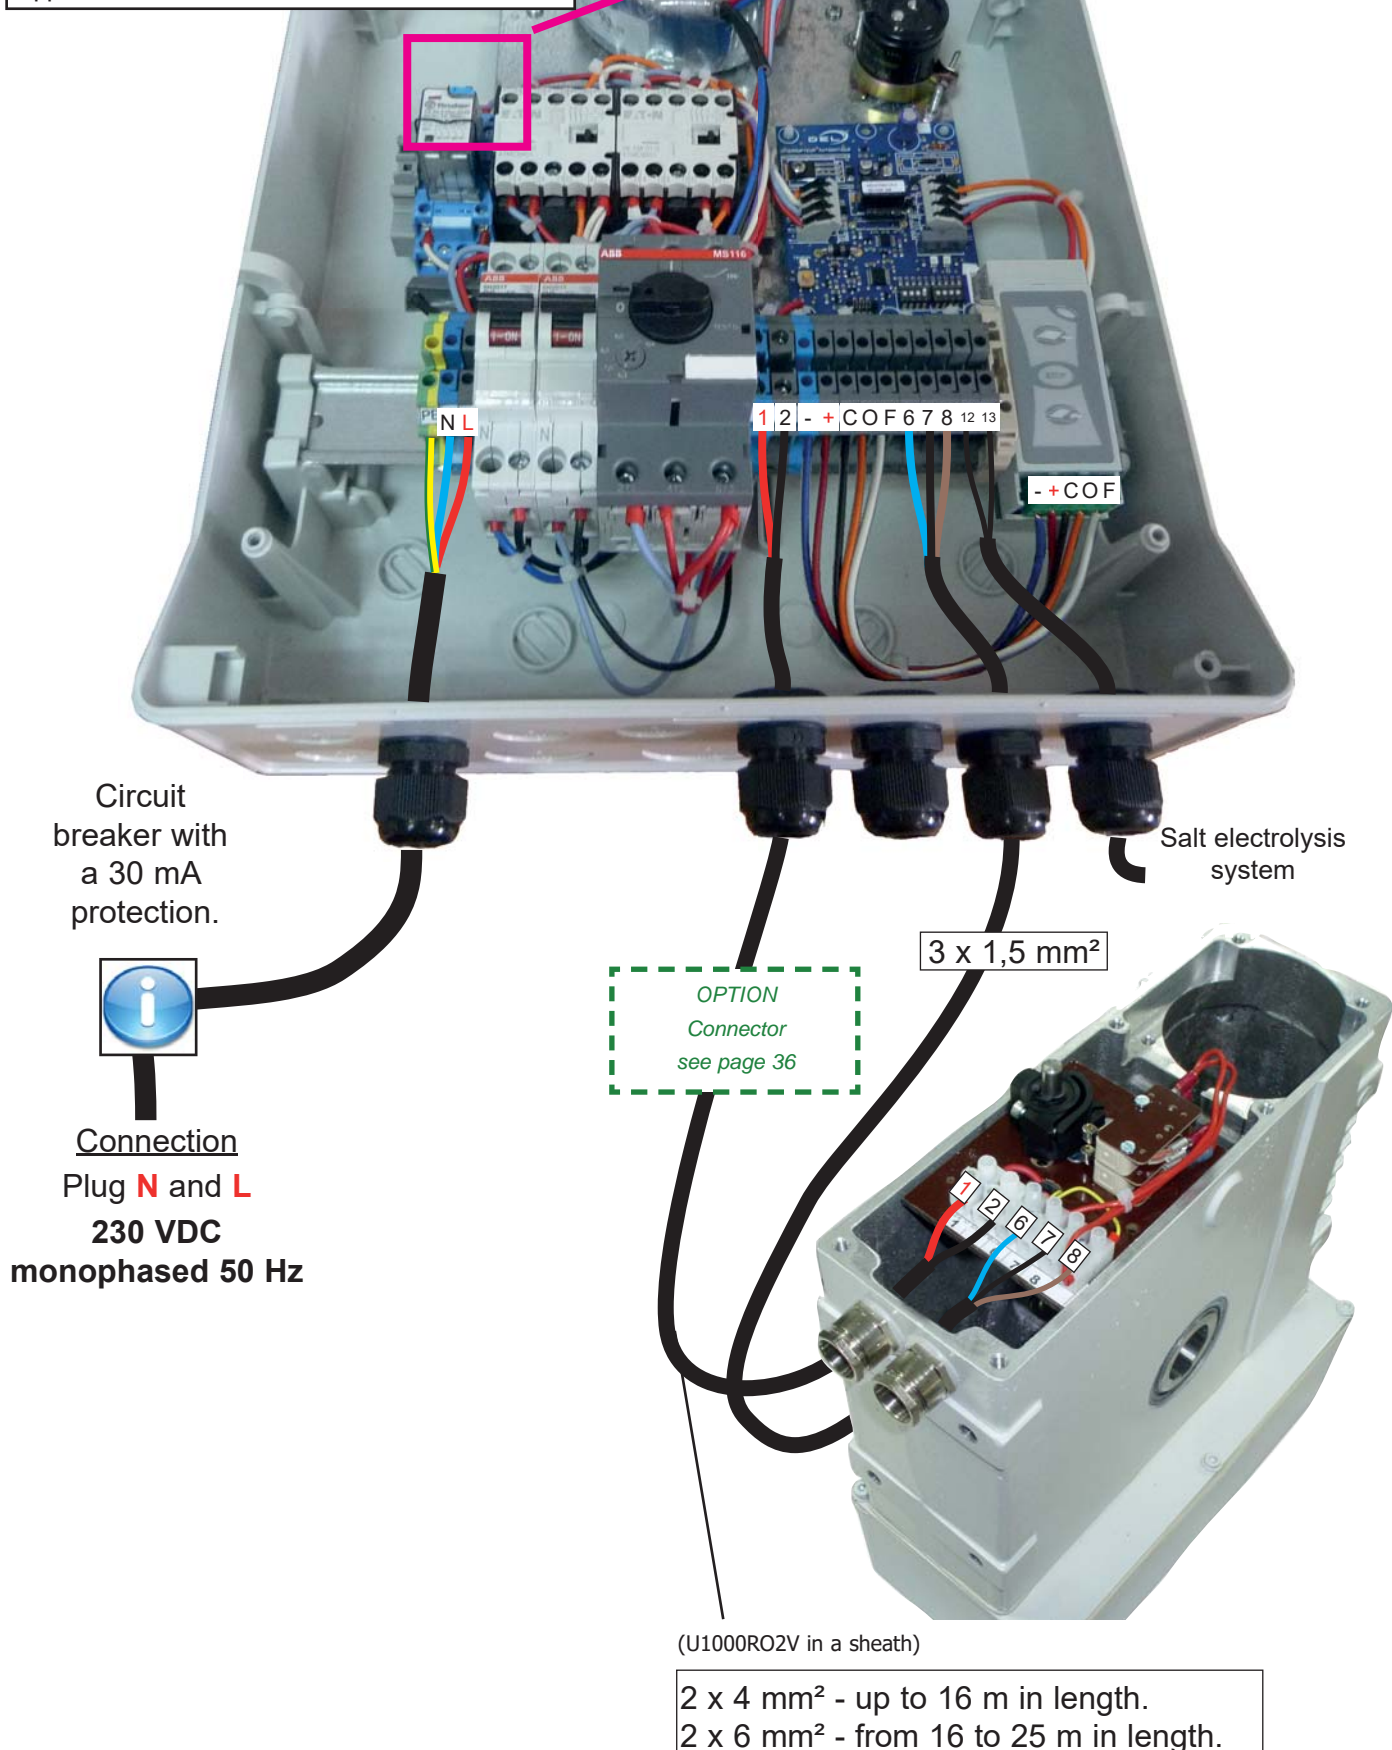

The electric control box must be fitted in a dry room.

The installation must comply with the NF C15-100 standard. et CEI 60364


(Last applicable version) ask your electrician for advice or contact your electricity provider.

All our control boxes use a 230 Volt single phase (50Hz) power supply.


The required power at the input terminals is 0.15 Kw.

Upstream from the control box a suitably sized circuit breaker with a 30 mA ground fault device must be provided.


For additional information, see the instructions supplied with the electrical box.

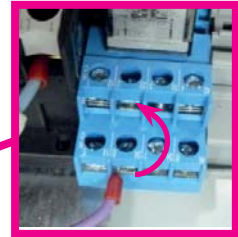

For salt electrolysis system:
Inversion of the NO / NC
control logic

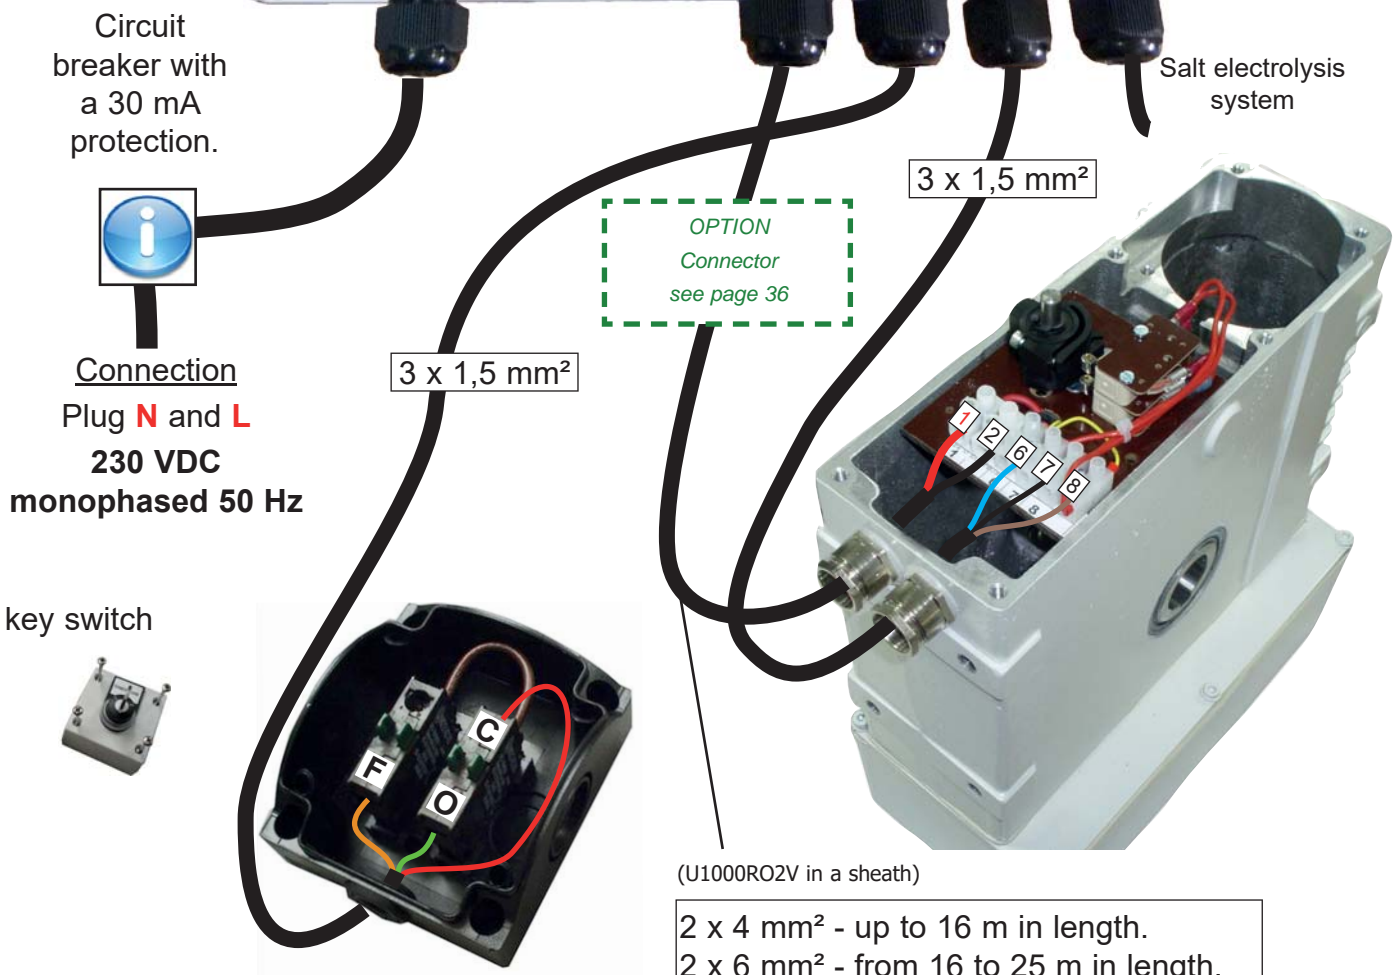

The electric control box must be fitted in a dry room.
The installation must comply with the NF C15-100 standard. et CEI 60364 (Last applicable version) ask your electrician for advice or contact your electricity provider.
All our control boxes use a 230 Volt single phase (50Hz) power supply.
The required power at the input terminals is 0.15 Kw.
Upstream from the control box a suitably sized circuit breaker with a 30 mA ground fault device must be provided.
For additional information, see the instructions supplied with the electrical box.

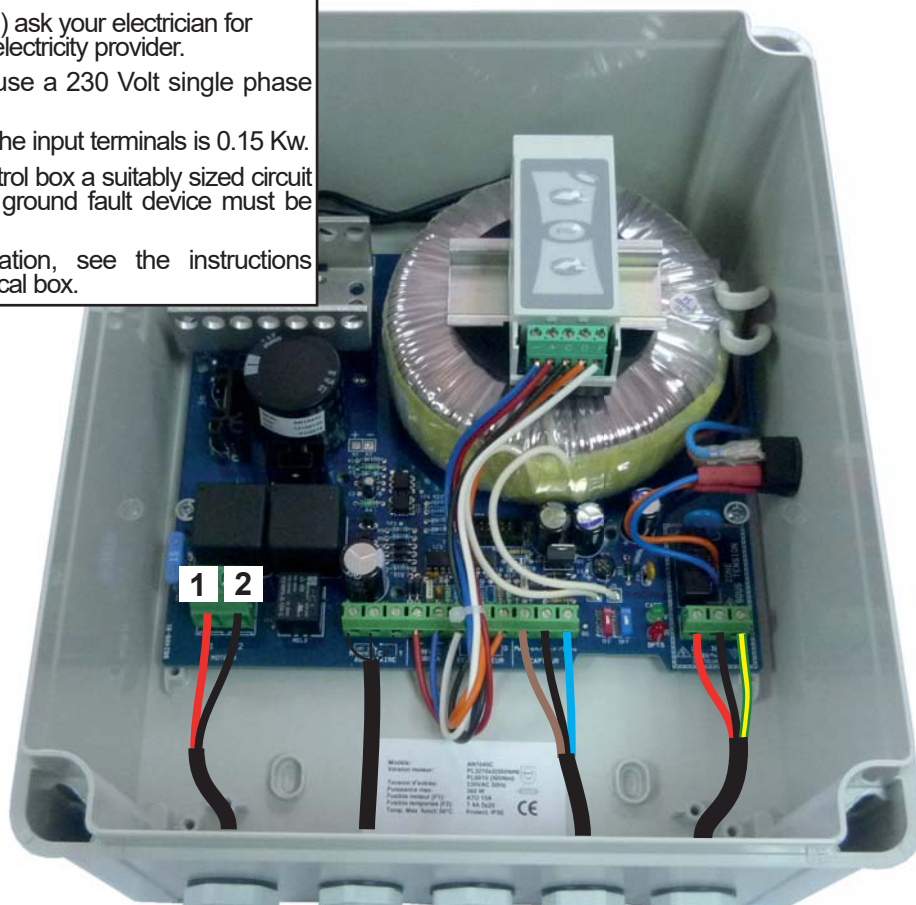

32



Circuit breaker with a 30 mA ground fault protection.

Connection

N and **L** plug
230 Volts
single
phased 50 Hz

3 x 1,5 mm²


OPTION
Connector
see page 36

(U1000RO2V in a sheath)

2 x 4 mm² - up to 16 m in length.
2 x 6 mm² - from 16 to 25 m in length.



The electric control box must be fitted in a dry room.
 The installation must comply with the NF C15-100 standard. et CEI 60364 (Last applicable version) ask your electrician for advice or contact your electricity provider.
 All our control boxes use a 230 Volt single phase (50Hz) power supply.
 The required power at the input terminals is 0.15 Kw.
 Upstream from the control box a suitably sized circuit breaker with a 30 mA ground fault device must be provided.
 For additional information, see the instructions supplied with the electrical box.

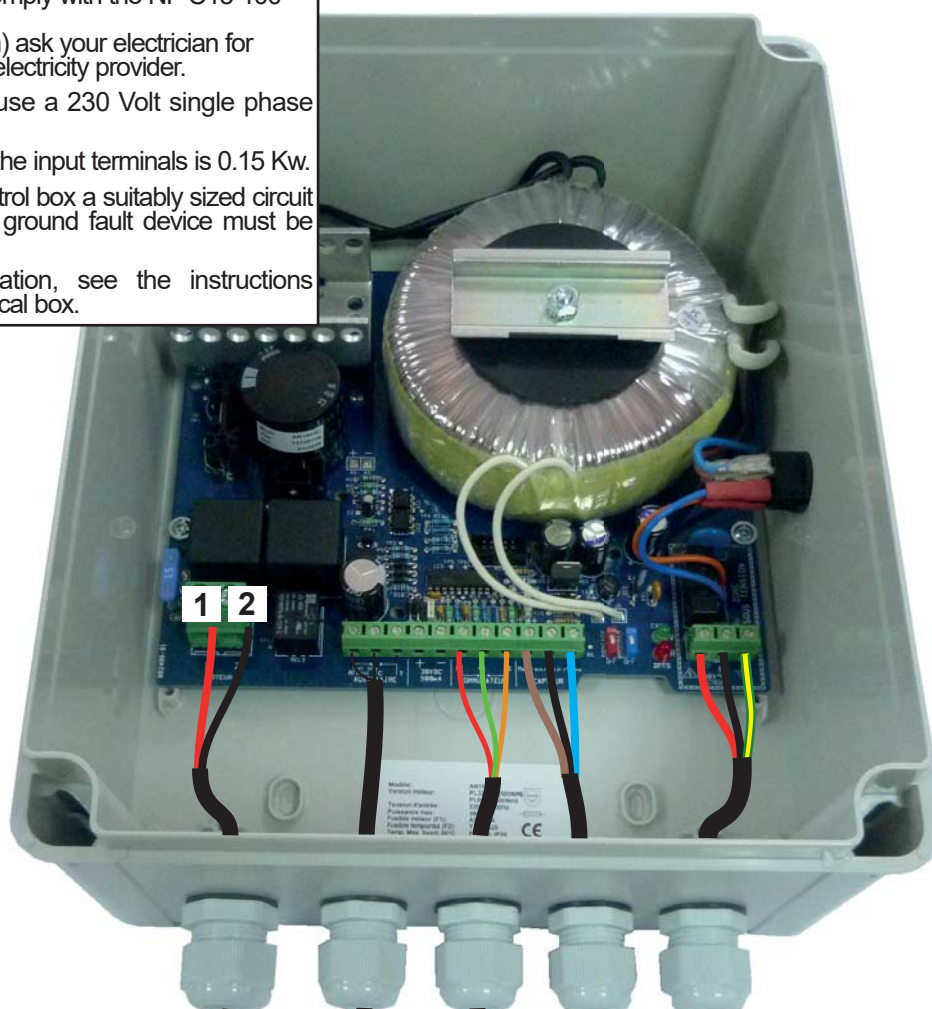

Chlorinator



Circuit breaker with a 30 mA ground fault protection.

Connection

N and L plug
230 Volts
single
phased 50 Hz

3 x 1,5 mm²

Key Switch



Its location must be in a place from which it is possible to check that no one enters the pool during the manoeuvre.



3 x 1,5 mm²

OPTION
 Connector
 see page 36




(U1000RO2V in a sheath)

2 x 4 mm² - up to 16 m in length.
 2 x 6 mm² - from 16 to 25 m in length.

The electric control box must be fitted in a dry room.
The installation must comply with the NF C15-100 standard. et CEI 60364.
(Last applicable version) ask your electrician for advice or contact your electricity provider.
All our control boxes use a 230 Volt single phase (50Hz) power supply.
The required power at the input terminals is 0.15 Kw.
Upstream from the control box a suitably sized circuit breaker with a 30 mA ground fault device must be provided.
For additional information, see the instructions supplied with the electrical box.




The electric control box must be fitted in a dry room.
 The installation must comply with the NF C15-100 standard. et CEI 60364
 (Last applicable version) ask your electrician for advice or contact your electricity provider.
 All our control boxes use a 230 Volt single phase (50Hz) power supply.
 The required power at the input terminals is 0.15 Kw.
 Upstream from the control box a suitably sized circuit breaker with a 30 mA ground fault device must be provided.
 For additional information, see the instructions supplied with the electrical box.

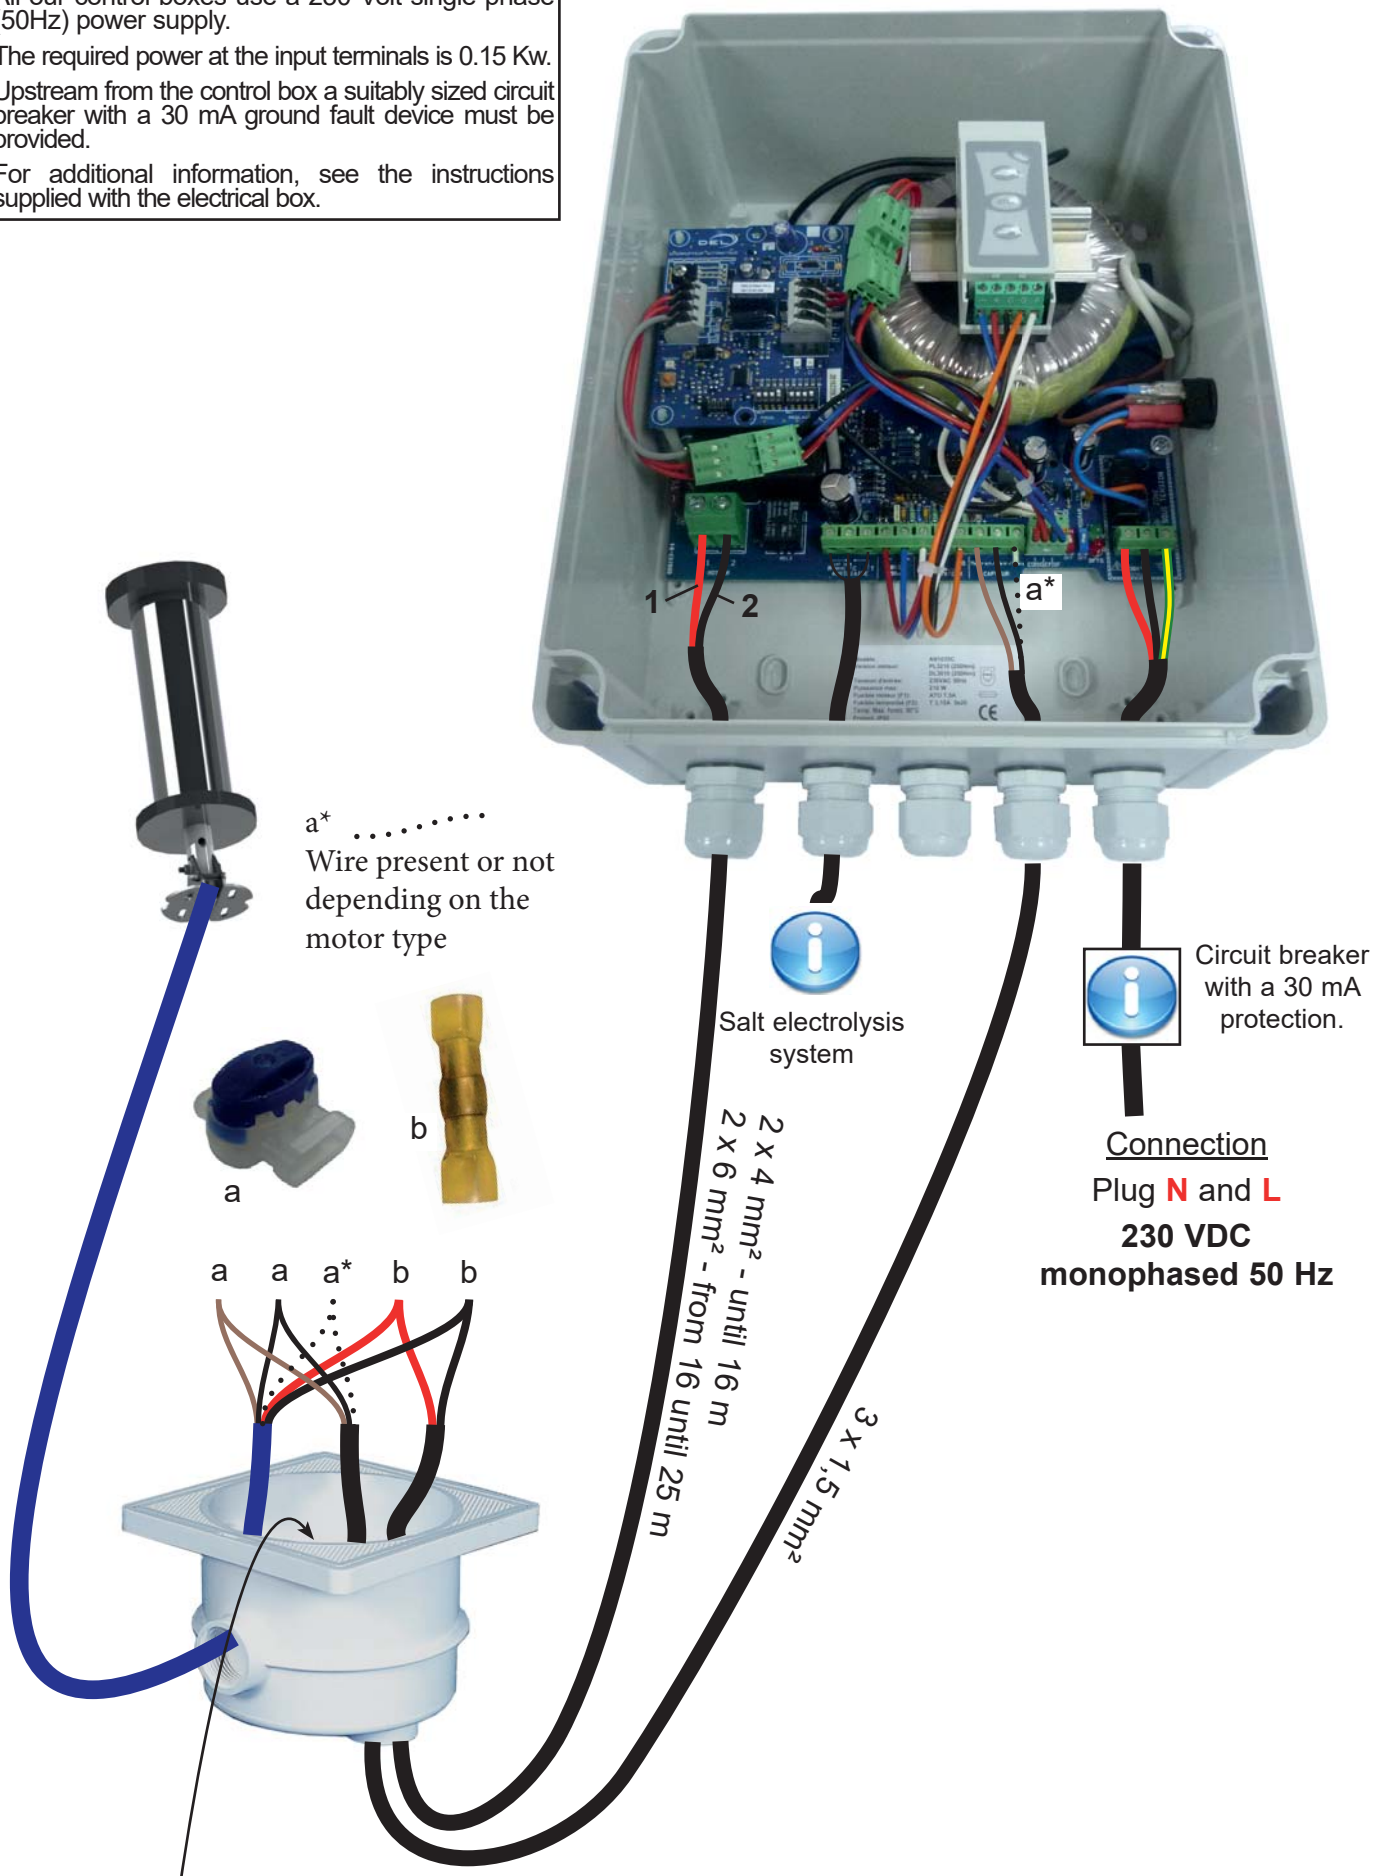

We recommend applying sealing gel in the connection box after having completed the wiring.



Located between the motor and the control panel, allows to unplug the motor without dismantling it
For winterizing, replace the motor by the winterizing handle

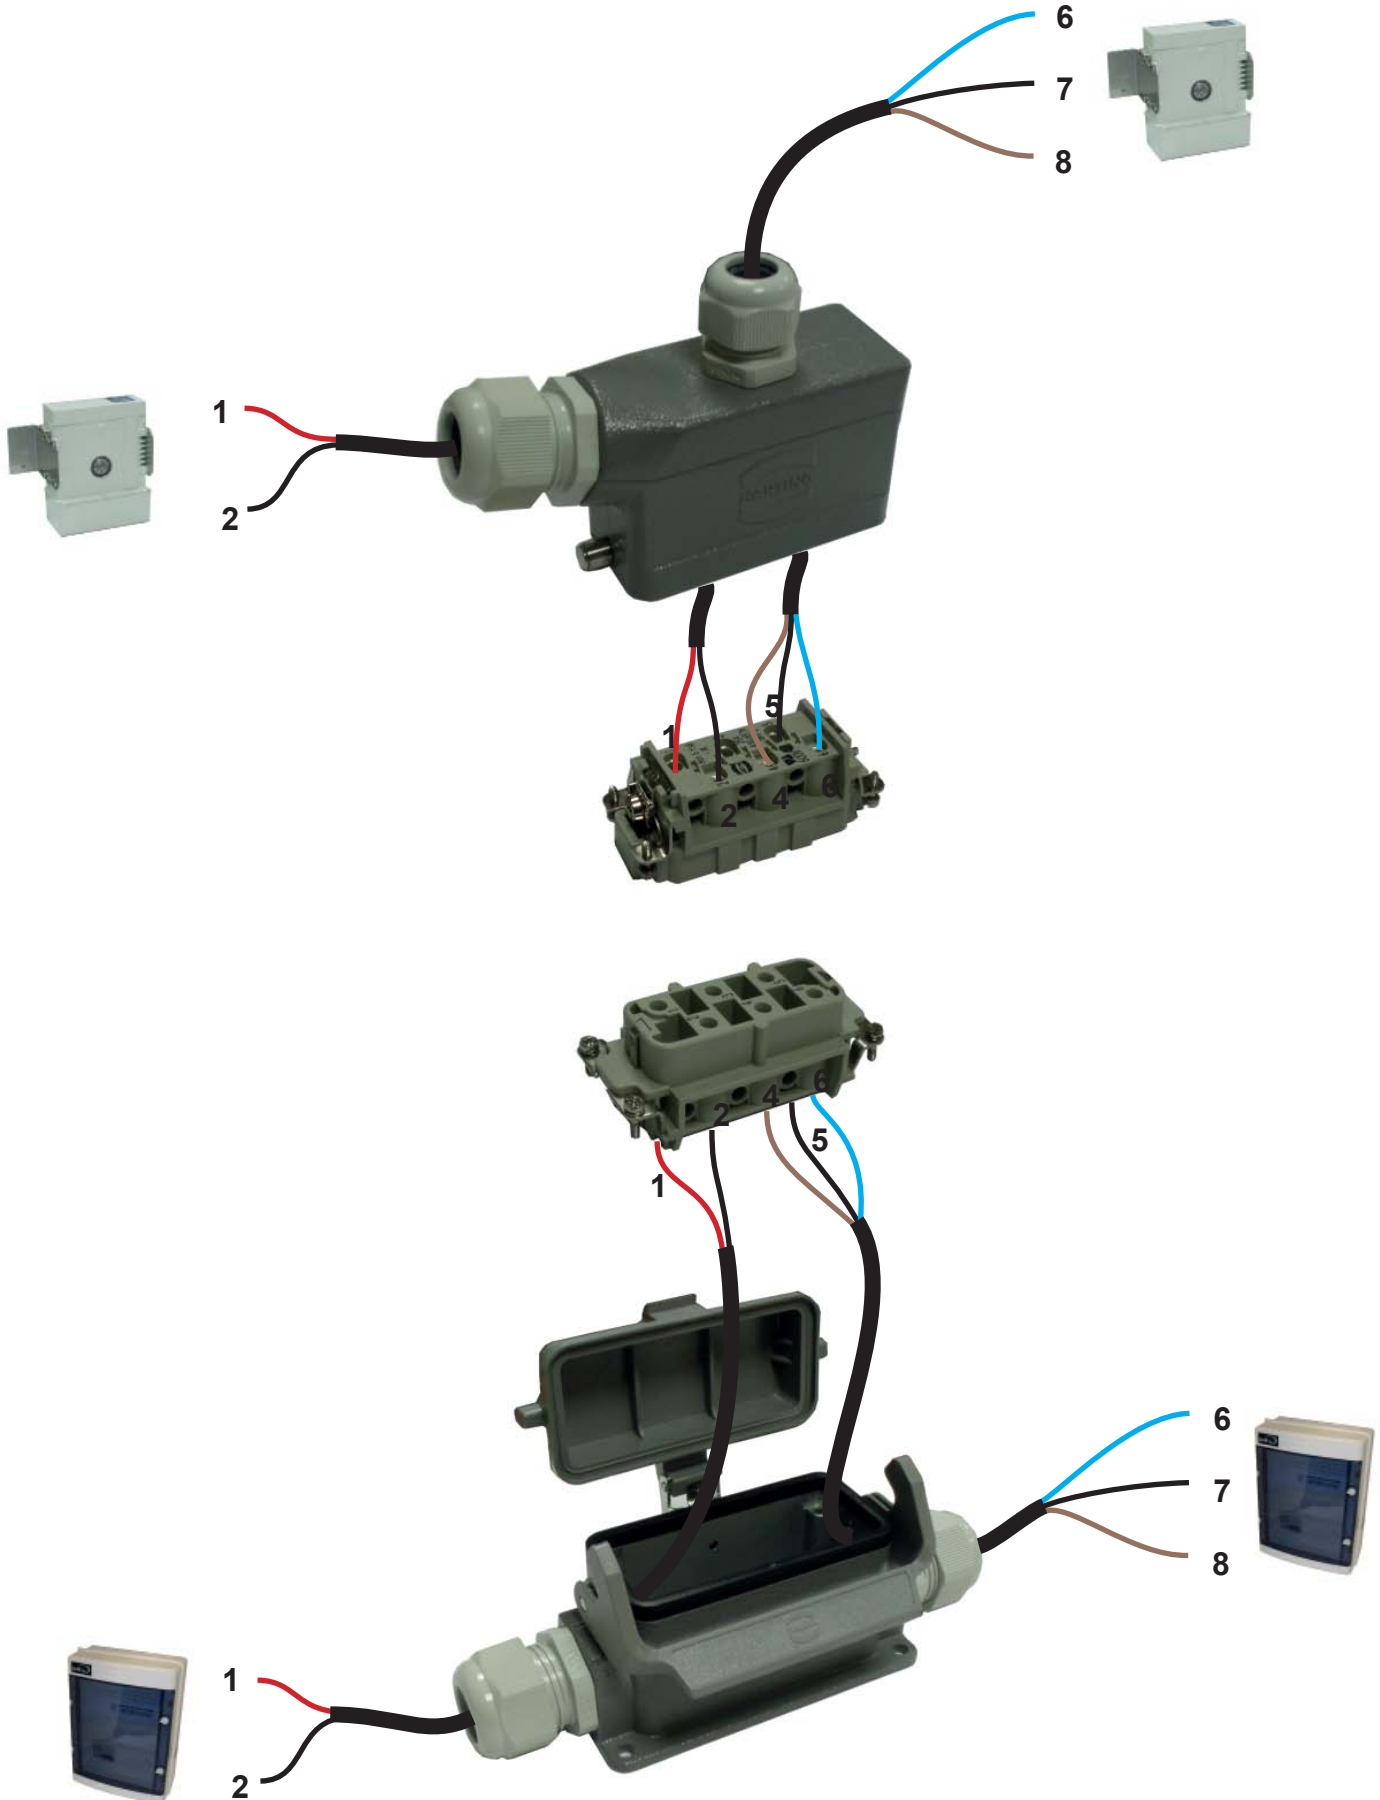

WI-KEY INSTALLING THE CONTROL BOX




red / green flashing = emitter locked
Emitter unlocking procedure see «page 48»

The emitter must be located outside volume 0.

The distance between the emitter and the receiver must not exceed:


- 50 m in an obstacle-free zone.
- 25 m behind a basic wall.
- 15 m behind several walls or an especially thick wall.

we recommend checking emitter/receiver communication before fixing permanently.

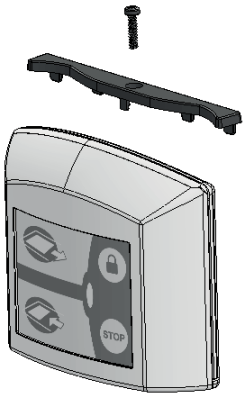

- It must be located in a place from which it is possible to check that no one enters the pool during the manoeuvre.
- It is mandatory to install the locking «strip».
- Before fixing the control box, check that the emitter is communicating with the receiver.

The support must be attached to a fixed support

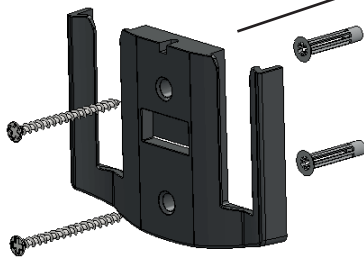

Closing


Opening




Keyboard lock

Stops the current action


1

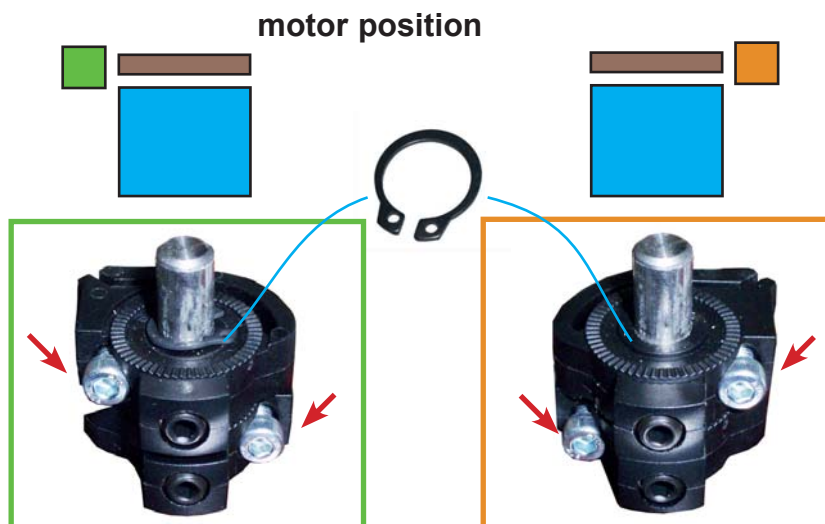


2



3

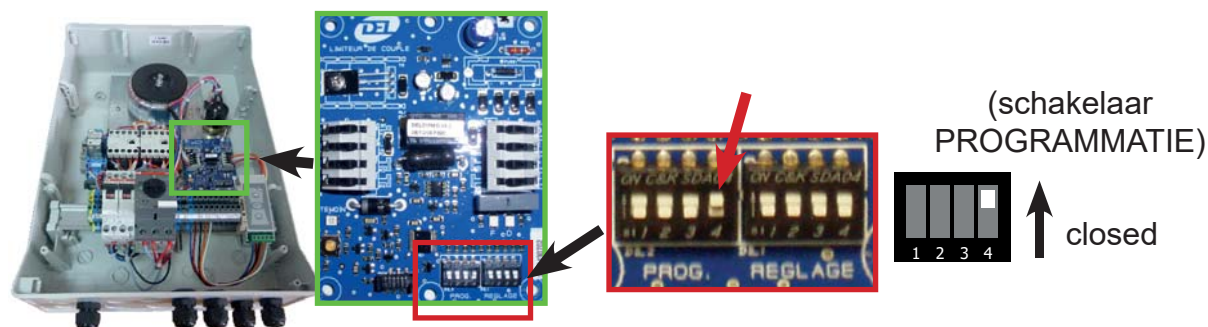

4

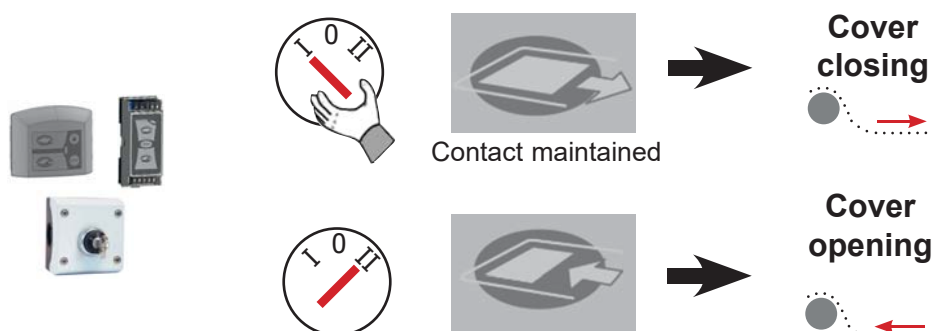

if the control logic is incorrect, Check the wiring installation

Cover installation «open pool»





Adjust the position of the cover using the programme «open and closed»



Be careful to choose the right position, it will be the starting reference.





5

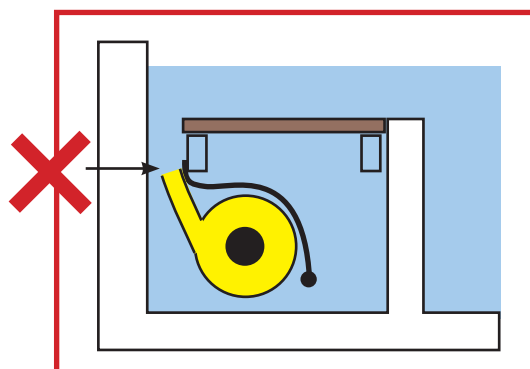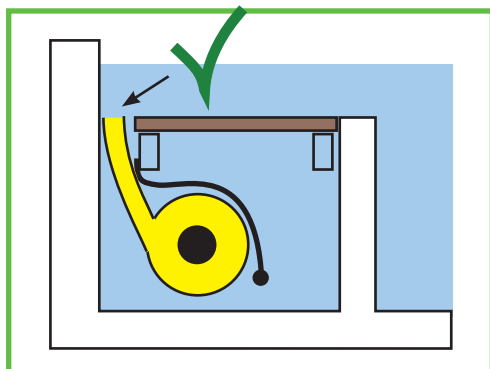

Recording position «open pool»

Allen key
n°3

6

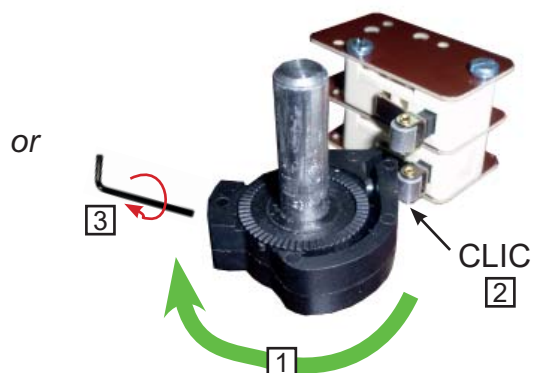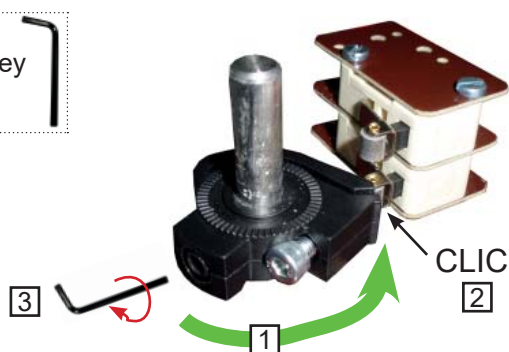

Cover installation «closed pool»




Adjust the position of the cover using the programme «open and closed»

7


Be careful : the last operation used must be a closing.

«if you cannot close the cover, chek the electric control is correct and start the automatic stop adjustment procedure from the begining. »

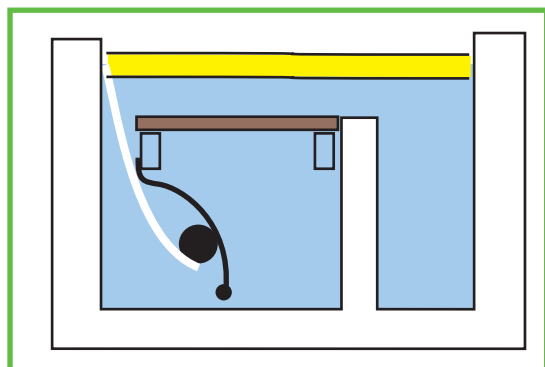


Recording position «closed pool»

Allen key
n°3



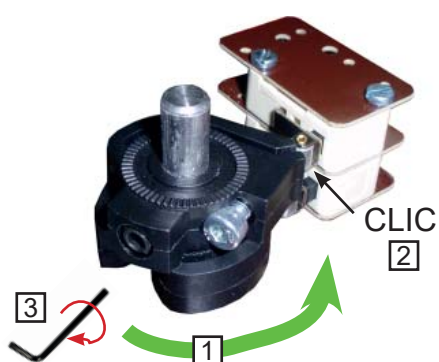


or

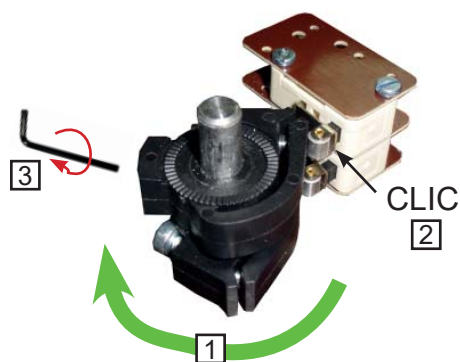

Automatic stop adjustment

8

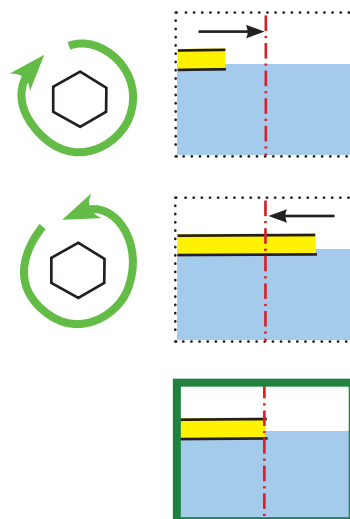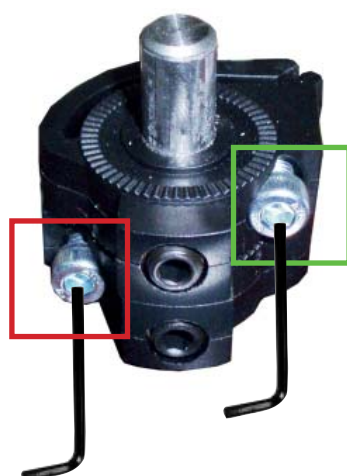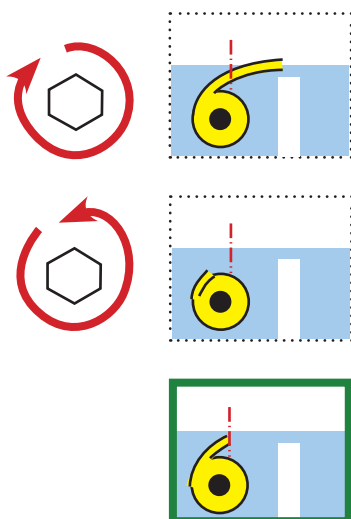

1 - Programme starting :

1



2

check up



Cover closing



Cover opening



if the control logic is incorrect, Check the wiring installation

42



Cover installation «open pool»



Adjust the position of the cover using the programme «open and closed»

Be careful to choose the right position, it will be the starting reference.

3

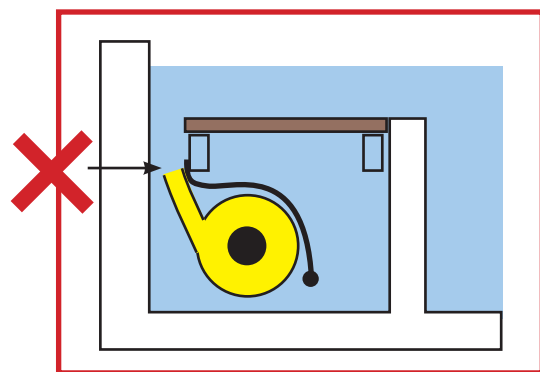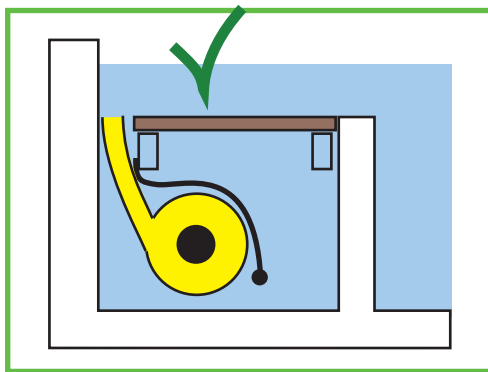

4

Recording position «open pool»




Cover installation «closed pool»



Adjust the position of the cover using the programme «open and closed»

Be careful : the last operation used must be a closing.

«if you cannot close the cover, chek the electric control is correct and start the automatic stop adjustment procedure from the begining. »

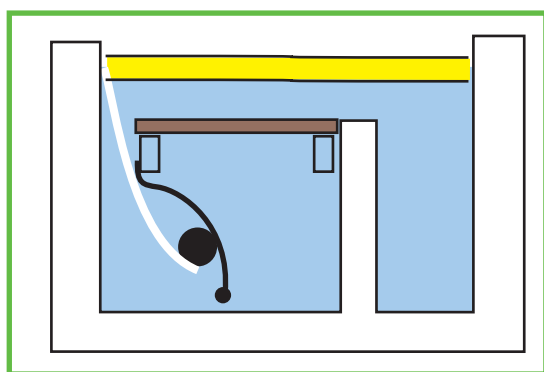

5

Recording position «closed pool»



6

7

Automatic stop adjustment is over.


INFORMATION

The automatic switch protects the system in case locking kits are unreleased when opening the pool.

If the cover jams, the motor is shut down automatically.

Different cases of jamming:

- Unreleased safety locking kit.
- cover rubbing (on the beam, coping stone...)
- Object in the pool jamming the cover (cleaner, counter-weight ...).

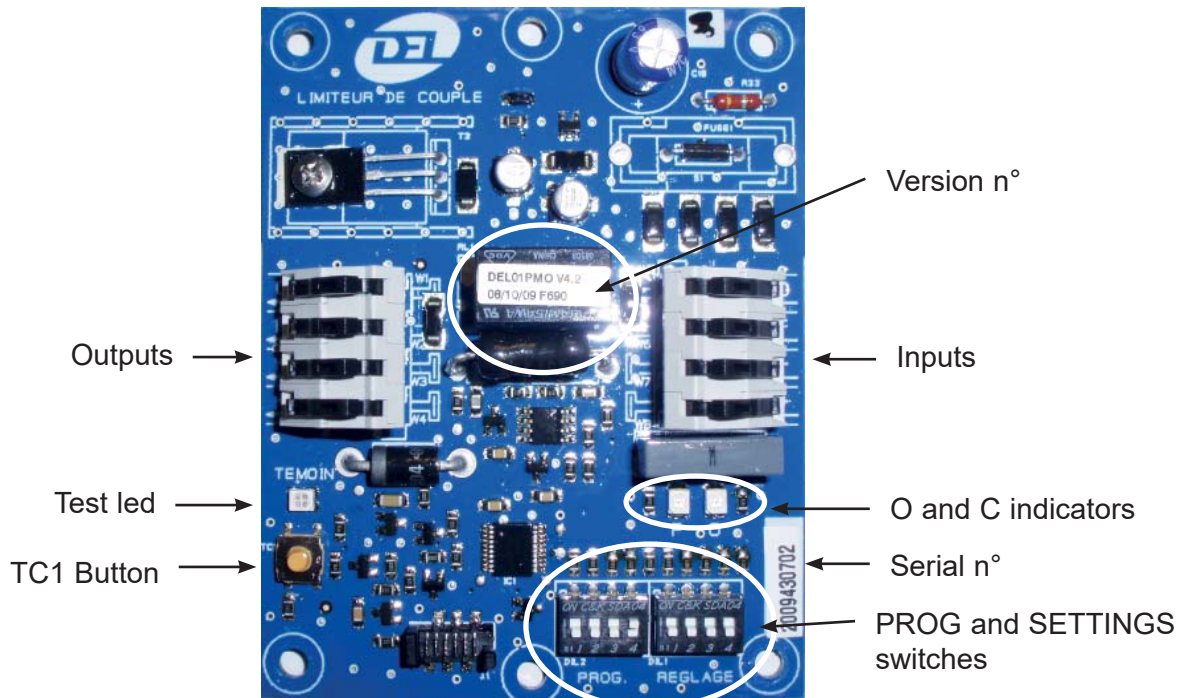

CHECKING THE COMMAND LOGIC ON THE AUTOMATIC SWITCH

- Deactivate the automatic switch



(Switch PROG)



- Check :



or




maintained contact




pool closure



indicators

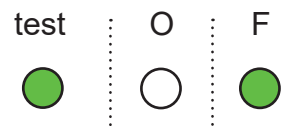

pool opening

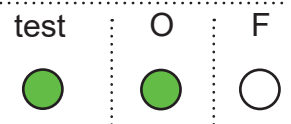

if the key switch is incorrectly wired

SETTING THE ROLLER MODEL (SETTINGS SWITCH)

Immersed motorisation



Dry pit motorisation



CONTROL TIME SETTING (SETTINGS SWITCH)

L = pool length steps included

$L \leq 12$ m



30 seconds

$L > 12$ m



60 seconds



ADJUSTING THE TRIGGER SENSITIVITY (PROG SWITCH)

l = pool width

$l \leq 3$ m



$l \leq 4$ m



$l \leq 5$ m



$l \leq 6$ m



$l \leq 7$ m



$l \leq 8$ m



$l \leq 9$ m



$l \leq 10$ m



← Maximum sensitivity ----- Minimum sensitivity →



ACTIVATION (PROG SWITCH)

activated



Failure to activate the automatic switch can cause serious damage to the motor, the control box, the slats and void the warranty.



IMPORTANT

Contact maintained more than 3 secs

=

The next opening will be protected



+ 3 seconds



Contact maintained less than 3 seconds

=

The next opening will not be protected




- 3 seconds



TEST

A - Block the cover by hand or with fixture kits and open the cover



=> The motor is automatically stopped.
(if necessary adjust the sensitivity of the switch activation)

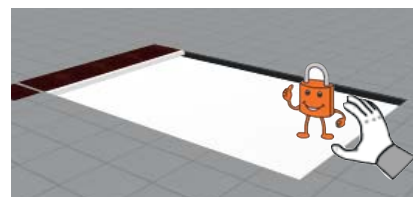


If there are unplanned activations, reduce the sensitivity level by selecting the setting for the next bigger width.

card activated	test		O	F
	Opening, control in progress			
	Opening without control			
	Closure			
	Protection ON			

Push-lock

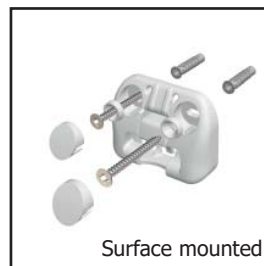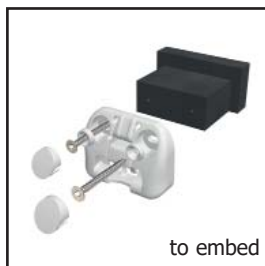

FASTENER KIT POSITIONING RULES

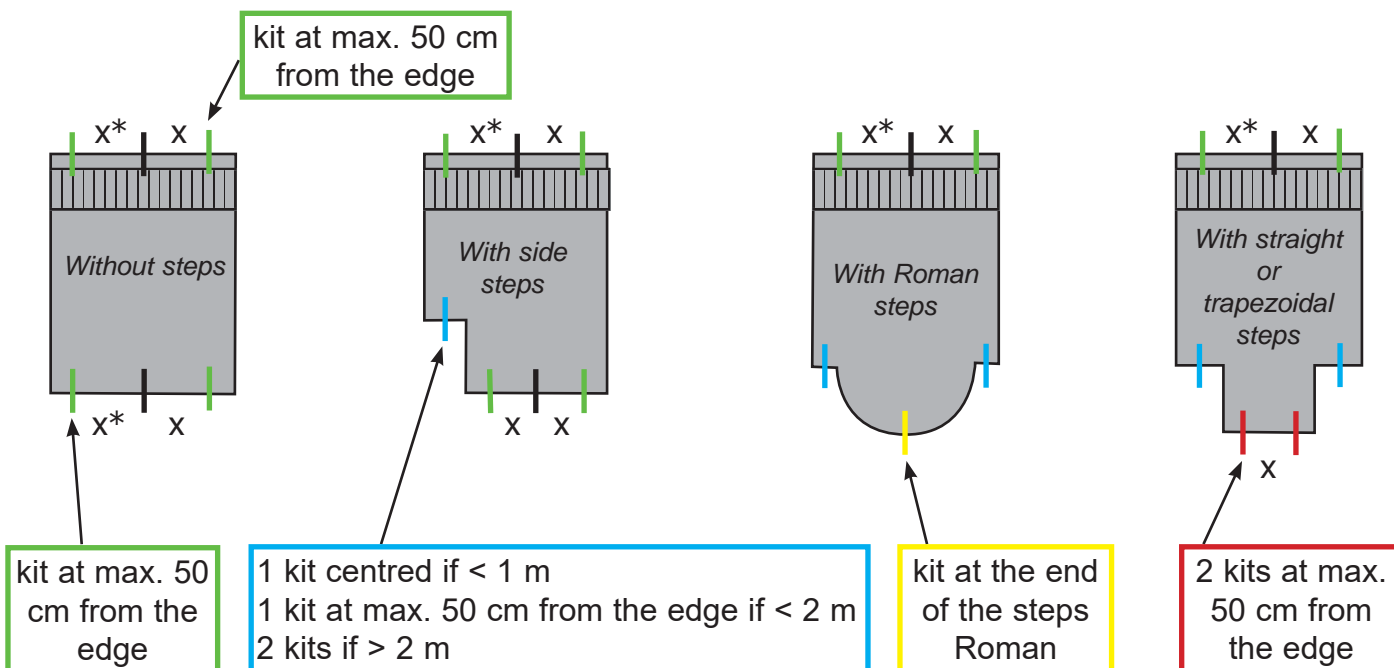

* X must never exceed 2 m



The position of the fastener kits on the cover is indicated on the drawings shipped with the slats.

All changes to the positioning of the kits must comply with the rules given above. For other cases please contact us.

A water level regulator is mandatory

Insert mounted model

For concrete and panel pools

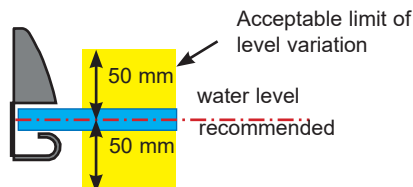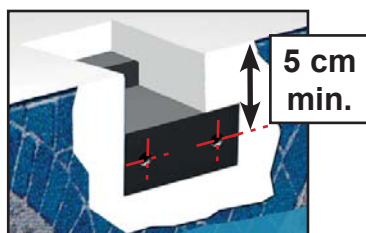

VBA TF Z pozi stainless steel A4 Ø6 x 60 wood screw


Hollow white Ø16 washer

Inserted part

Screw cap

Hang mounted version

For concrete and panel pools

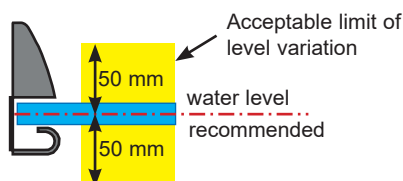

Ø12

Stainless steel nut A4 M10

VBA TF Z pozi stainless steel A4 Ø6 x 60 wood screw

Hollow white Ø16 washer

Hang mount support



Cale 13 mm

Ø12 Nylon plug

Screw cap

Surface mounted model

For concrete and concrete block pools, as well as pools with wall thickness greater than or equal to 8 mm

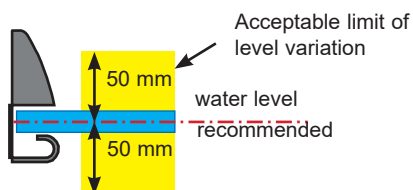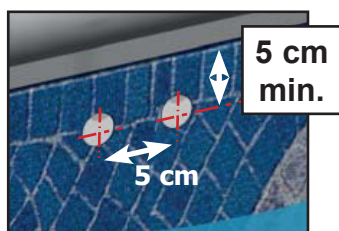


VBA TF Z pozi stainless steel A4 Ø6 x 60 wood screw

Hollow white Ø16 washer

Universal 8 x 40 plug


Screw cap

Concrete

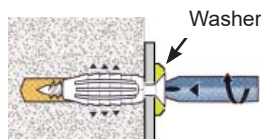


Once the resistance point has been reached stop screwing, this would deteriorate the fixture quality.

Concrete block

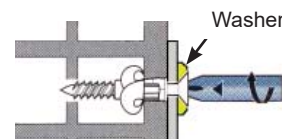

After reaching the resistance point, make 3 more turns of the screwdriver to finish tightening.

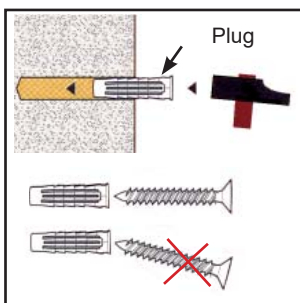

OPENING/ CLOSURE OF THE POOL

**ALWAYS KEEP AN EYE ON THE POOL DURING OPENING OR CLOSING OPERATIONS.
ALWAYS CHECK THAT THE POOL WATER LEVEL IS CONSTANT AND COMPLIANT WITH THE
RECOMMENDATIONS ON THE INSTRUCTIONS**

- It is imperative not to halt the cover in an intermediate position, this can cause the risk of jamming a bather's body under the cover casing, if a bather uses the pool.
- When using an automatic cleaner under the cover, check that the hose does not affect the movement of the slats when opening and closing the cover.
- It is essential to remove floating objects when opening and closing the cover.
- Do not block the cover while extending or retracting.
- Do not activate the automatic cover when it is iced in.
- The opening or closure operation requires about 2 minutes for one person and about 3 minutes to lock or unlock the attachment kits.

Opening: Always release the cover before starting the motor.

- Unlock all the fastening systems.
- Operate the open control.
- Stow the unlocking tools out of the reach of children.
- Lock the WI-Key command



Closure:

- Operate the «contact maintained during closure» close control
- Lock all the fastener systems.
- Stow the unlocking tools out of the reach of children.
- Lock the WI-Key command




IMPORTANT


48

When closing the pool, it is essential to **KEEP THE CONTROL PRESSED FOR AT LEAST 3 SECONDS**. This is required to guarantee automatic obstacle detection the next time the cover is opened.




LOCKING THE WI-KEY

- Press on  for more than 3 seconds until the pilot flashes





= system locked

UNLOCKING THE WI-KEY

- Press  and keep it pressed.
- At the same time: successively press the following 3 keys: :



- The pilot  remains on  = emitter unlocked

LIGHT INDICATORS


When you press a key, the light indicators below provide information on the Wi-key status (locked/unlocked), as well as the battery charge level.

	Green LED	----->	Wi-key unlocked
	Red/green flashing LED	----->	Wi-key locked
	Orange LED	----->	Battery level low
	Red LED	----->	Change the batteries (2 x LR03)

Locking



Releasing

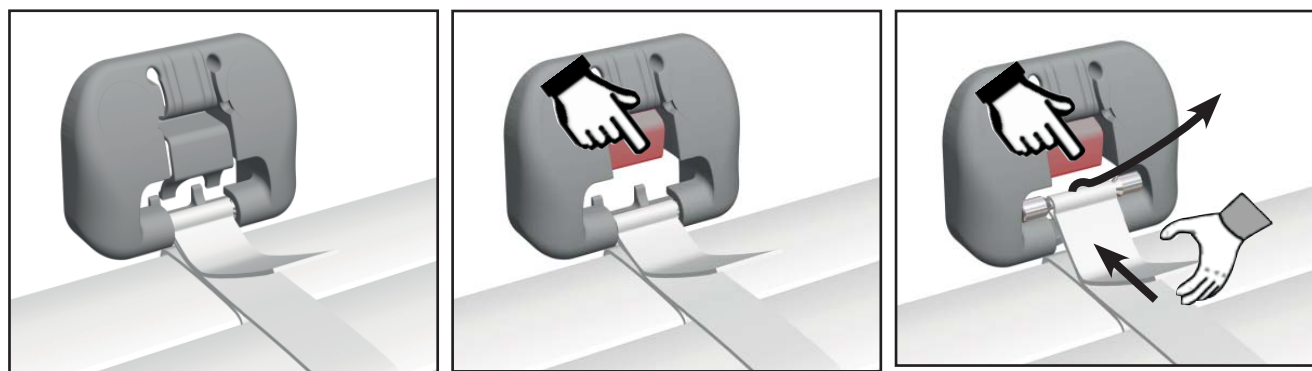

WHAT TO DO IF THE SYSTEM STOPS WHEN OPENING

1 - Stop due to an actual jam: (unreleased locking kits or other...)

- Close the cover for more than 3 seconds, until the tension of the cover is completely released.

(The next opening will remain protected by the system)

- Remove causes of jamming, and resume opening the pool.

2 - In the event of an unexplained stoppage :

- Close the cover **between 1 and 3 seconds**. *(The next opening will no longer be protected by the system)*



















- Open the pool again.

If there are repeated activations, decrease the automatic switch sensitivity level.

- modify the "Trigger sensitivity" parameter.(see page 45)


The use of the automatic cover when the automatic switch is in "deactivated" mode can cause serious damage to the motor, the electric control box, the slats and also void the warranty.

MEANING OF THE LEDS ON THE AUTOMATIC SWITCH

card activated		Test	O	C	card deactivated		Test	O	C	 Flashing LED  Permanent LED
	Opening, control in progress									
	Opening without control									
	Closure									
	Protection ON									

Pairing -- delivered pre-paired


1 receiver

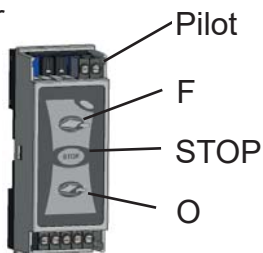

Press «STOP» and, without releasing it, press «O» for more than 3 seconds
OK when the «pilot» flashes green.

an emitter must be paired within the next 30 seconds.

2 emitter

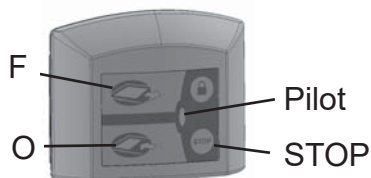

Press «STOP» and, without releasing it, press «O» for more than 3 seconds
OK when the «pilot» flashes red / green.

another emitter must be paired within the next 30 seconds.

Replacing the batteries



Be careful of the seal when re-assembling

50

	Receiver	Emitter	
Manufacturer	DEL	DEL	 Emitter Receiver
Reference	Wikey receiver	Wikey emitter	
Category	3 (EN 300220-1)	3 (EN 300220-1)	
Range	50m in an obstacle-free zone	50m in a free zone	
	25m through a concrete wall	25m through a concrete wall	
Power supply	12 to 48 VDC 30mA max	Two 1.5V AAA batteries	
Protection index	< IP40	< IP54	 V0 - M1 version M2 version

DL6010 CONTROL BOX LED MEANINGS

	Flashing LED		Flashing LED		Permanent LED		Permanent LED
CAPTEUR		INITIALISATION		CAPTEUR		THE MOTOR IS RUNNING	
DEFAULTS		LEDs flash alternatively		DEFAULTS		regular slow flashing	
CAPTEUR		SENSOR FAULT		CAPTEUR			
DEFAULTS		(check connections and cables) permanently on		DEFAULTS			
CAPTEUR		ELECTRONIC FAULT		CAPTEUR			
DEFAULTS		(check connections and cables / return to the factory) fast flashing		DEFAULTS			
CAPTEUR		SOFTWARE FAULT		CAPTEUR			
DEFAULTS		(reprogram the automatic stops) Permanently on		DEFAULTS			

POOL WATER LEVEL

- In order to ensure the correct operation of the roller, always check that the pool water level is constant and compliant with manufacturer recommendations.
(the use of a water level regulator is mandatory)
- If the water level is too high, it might come from leaves in the skimmer.
- If the water level is too low there is a risk of jamming.
- In case of hand rails, the pool must be equipped with a water level regulator.

FILTERING

- Programme filtering during sunlight periods and operate it permanently as soon as the water reaches 25°C.

CLEANING (USER'S RESPONSIBILITY)

- Clean your cover fully twice a year (start of season and wintering). This is even more important if you have hard water. If this is the case, use a high pressure cleaner with warm water and a descaling product (see DEL catalogue).
- The slats must only be cleaned using clear water or neutral detergents.
- Especially avoid using alkaline (basic) or acid cleaning products.
- Do not use abrasive products or equipment to clean, this could cause scratches. If necessary make a test on a small area of the cover that is not visible.
- Take the same care to regularly clean the locking systems for optimum operation.
- It is advisable to inspect the whole system in the event of abnormal strain on the cover (eg. somebody falling)
- Check the straps annually

MAINTENANCE

- All work must be carried out by a professional who will contact the manufacturer if necessary. (Contact details on the back of the document)
- All spare parts must be original.
- Inspect the whole cover for damage/wear and tear.
- At the beginning of each season and in the case of accidents (falls or hail on the cover, abnormal strain on the cover, etc.) check that the slats do not have any visible deterioration that could impact the operation of the cover (cracked, punctured, bent slats etc.). Change the slats or the whole cover if necessary.
- In both summer and winter, do not cover the slats with an opaque cover. There is a risk of damage due to excess heat.
- Check the straps (seams) and the anti-abrasion sheath.
- Once a year, check the electrical connections.
- - The «witness» flashes RED = change the control box battery

WINTERING

- Winter the pool depending on its geographic location.
- Close the cover.
- Wintering the gear motors:
- Close the cover in the safety position.
- Take the motor off, grease the stainless steel shaft and store it in a dry, ventilated room.
- Switch the mains supply off (control panel and circuit breaker)
- We recommend you install the IVERNEA winter shield to protect the cover from UVs and dirt